

MULTIFUNCTION MANAGER RELAY

TYPE


UMRAV

(Multiple I/O Boards)

“ULTRA”

Line

OPERATION MANUAL

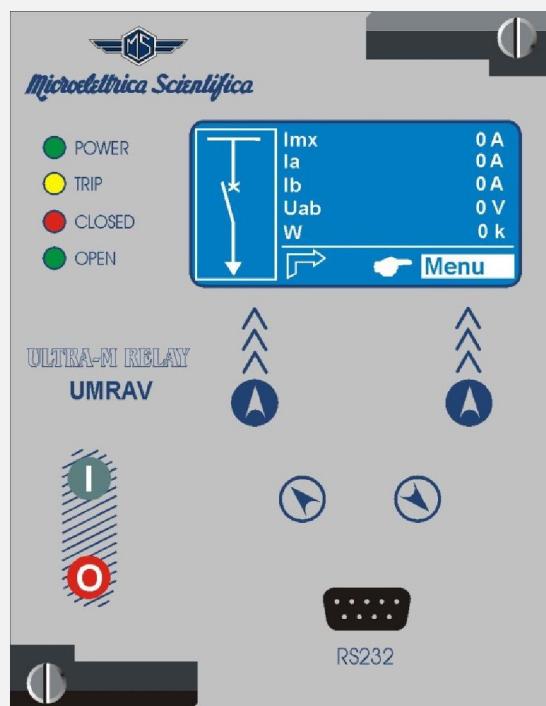

CE

1. General Utilization and Commissioning Directions	6
1.1 - Storage and Transportation	6
1.2 - Installation	6
1.3 - Electrical Connection	6
1.4 - Measuring Inputs and Power Supply	6
1.5 - Outputs Loading	6
1.6 - Protection Earthing	6
1.7 - Setting and Calibration	6
1.8 - Safety Protection	6
1.9 - Handling	6
1.10 - Maintenance	6
1.11 - Waste Disposal of Electrical & Electronic Equipment	6
1.12 - Fault Detection and Repair	6
2. General	7
2.1 - Power Supply - Main Relay	7
2.2 - Power Supply - Signalization Module (PSU) (Signalization module)	7
3. Front Panel	7
4. Keyboard and Display	8
4.1 - Display	8
5. Icons of Display	9
6. Signalization on Main Relay	10
6.1 - Leds Manual Reset	10
6.2 - Display of the last trip	10
6. Signalization Module	11
6.1 - Name	12
6.2 - Link enable	12
6.3 - Status	12
6.4 - Light Prog.	12
6.5 - Funct. Mode	12
6.6 - Functions	12
6.7 - Table 1	13
6.8 - Example: Change settings for "Led5"	15
6.8.1 - "Enable"	15
6.8.2 - "Flashing"	16
6.8.3 - "Latched"	17
6.8.4 - "Functions"	17
6. User Variables	18
6.1 - "Name"	18
6.2 - "User Descr."	18
6.3 - "Linked functions"	18
6.4 - "OpLogic"	18
6.5 - "Timer"	18
6.6 - "Timer type"	18
6.7 - "Logical status"	18
6.8 - Example: Setting "User Variable"	19
6.8.1 - "User description" (User descr.)	20
6.8.2 - "Linked Functions"	20
6.8.3 - "Operation Logic" (Oplogic)	21
6.8.4 - "Timer"	21
6.8.5 - "Timer type"	22
7. Cmd (Local Commands)	23
8. Measure	24
9. Energy	25
10. LTrip (Trips Recorded)	26
10.1 - Table 1	27
11. Cnt (Statistical Counters)	29
12. RCE (Recording Chronological Events)	31
12.1 - Events on display	32
13. System (System parameters)	34
14. Settings	37
14.1 - Modifying the setting of variables	38
14.2. Password	39

14.3 - Menu: Comm. (Communication) _____	40
14.3.1 - Description of variables _____	40
14.3.2 - Front Panel serial communication port (RS232) _____	40
14.3.3 - Cable for direct connection of Relay to Personal Computer _____	40
14.3.4 - Main serial communication port (RS485) _____	40
14.4 - Menu: LCD (Human Machine Interface - customize) _____	41
14.4.1 - Description of variables _____	41
14.4.2 - Example: set Local Language. _____	42
14.5 - Function: T> (Thermal Image F49) _____	43
14.5.1 - Description of variables _____	43
14.5.2 - Trip and Alarm _____	43
14.5.2.1 - Operation mode "Imax" _____	43
14.5.2.2 - Operation mode "I1-I2" _____	43
14.5.2.3 - Trip time of the Thermal Image Element _____	43
14.5.2.4 - Thermal Image Curves (TU1024 Rev.1) _____	44
14.6 - Function: 1I> (First Overcurrent Element F50/51) _____	45
14.6.1 - Description of variables _____	45
14.6.2 - Algorithm of the time current curves _____	46
14.6.3 - IEC Curves _____	47
14.6.4 - IEEE Curves _____	48
14.6.5 - Operation of the phase Overcurrent Elements in function of variable "f(a)" _____	49
14.6.6 - Operation of the Overcurrent Element with Voltage Control f(U) _____	51
14.6.7 - Blocking Logic (BO-BI) _____	52
14.6.7.1 - Output Blocking signal "BO" _____	52
14.6.7.2 - Blocking Input "BI" _____	52
14.6.8 - Automatic doubling of Overcurrent thresholds on current inrush _____	52
14.7 - Function: 2I> (Second Overcurrent Element F50/51) _____	53
14.7.1 - Description of variables _____	53
14.8 - Function: 3I> (Third Overcurrent Element F50/51) _____	54
14.8.1 - Description of variables _____	54
14.9 - Function: 1Io> (First Earth Fault Element 50N/51N) _____	55
14.9.1 - Description of variables _____	55
14.9.2 - Operation mode of the Earth Fault elements programming the variable "f(a _o)" _____	56
14.10 - Function: 2Io> (Second Earth Fault Element 50N/51N) _____	57
14.10.1 - Description of variables _____	57
14.11 - Function: 3Io> (Second Earth Fault Element 50N/51N) _____	58
14.11.1 - Description parameters _____	58
14.12 - Function: 1Is> (First Negative Sequence Element F46) _____	59
14.12.1 - Description of variables _____	59
14.12.2 - Time/Current operation of the first Current Unbalance element "f(t)" _____	59
14.13 - Function: 2Is> (Second Negative Sequence Element F46) _____	60
14.13.1 - Description of variables _____	60
14.14 - Function: 1U> (First Overvoltage Element F59) _____	61
14.14.1 - Description of variables _____	61
14.15 - Function: 2U> (Second Overvoltage Element F59) _____	61
14.15.1 - Description of variables _____	61
14.16 - Function: 3U> (Third Overvoltage Element F59) _____	61
14.16.1 - Description of variables _____	61
14.17 - Function: 1U< (First Undervoltage Element F27) _____	62
14.17.1 - Description of variables _____	62
14.18 - Function: 2U< (Second Undervoltage Element F27) _____	62
14.18.1 - Description of variables _____	62
14.19 - Function: 3U< (Third Undervoltage Element F27) _____	62
14.19.1 - Description of variables _____	62
14.20 - Function: 1f> (First Overfrequency Element F81>) _____	63
14.20.1 - Description of variables _____	63
14.21 - Function: 2f> (Second Overfrequency Element F81>) _____	63
14.21.1 - Description of variables _____	63
14.22 - Function: 3f> (Third Overfrequency Element F81>) _____	63
14.22.1 - Description of variables _____	63
14.23 - Function: 1f< (First Underfrequency Element F81<) _____	64
14.23.1 - Description of variables _____	64
14.24 - Function: 2f< (Second Underfrequency Element F81<) _____	64
14.24.1 - Description of variables _____	64
14.25 - Function: 2f< (Third Underfrequency Element F81<) _____	64
14.25.1 - Description of variables _____	64
14.26 - Function: 1Uo> (First Zero Sequence Overvoltage Element F59Uo) _____	65
14.26.1 - Description of variables _____	65
14.27 - Function: 2Uo> (Second Zero Sequence Overvoltage Element F59Uo) _____	65
14.27.1 - Description of variables _____	65
14.28 - Function: U1< (Positive Sequence Undervoltage Element F27U1) _____	66
14.28.1 - Description of variables _____	66
14.29 - Function: U2> (Negative sequence Overvoltage Element F59U2 or F47) _____	66
14.29.1 - Description of variables _____	66

14.30 - Function: Wi (Circuit Breaker maintenance level) _____	67
14.30.1 - Description of variables _____	67
14.30.2 - Operation (Accumulation of the interruption Energy) _____	67
14.31 - Function: TCS (Trip Circuit Supervision) _____	68
14.31.1 - Description of variables _____	68
14.31.2 - Operation _____	68
14.32 - Function: IRF (Internal Relay Fault) _____	69
14.32.1 - Description of variables _____	69
14.32.2 - Operation _____	69
17.33 - Function: RT (First Element Remote Trip) _____	69
17.33.1 - Description of variables _____	69
17.33.2 - Operation _____	69
14.34 - Function: tTripRd (Trip Reduction time) _____	70
14.34.1 - Description of variables _____	70
14.34.2 - Operation _____	70
14.34 - Function: BreakerFail (Breaker Failure) _____	71
16.34.1 - Description of variables _____	71
14.34.2 - Operation _____	71
14.35 - Function: ExtReset (External Reset Configuration) _____	71
14.35.1 - Description of variables _____	71
14.36 - Function: CB Manage (Control C/B) _____	72
14.36.1 - Description of variables _____	72
14.36.2 - Display Message _____	72
14.37 - Function: Oscillo (Oscillographic Recording) _____	73
16.37.1 - Description of variables _____	73
14.37.2 - Operation _____	73
14.37.3 - Setting "User Trigger Oscillo" _____	74
14.37.3.1 - "Name" _____	74
14.37.3.2 - "User descr." _____	74
14.37.3.3 - "Linked functions" _____	74
14.37.3.4 - "OpLogic" _____	74
14.37.3.5 - "Timer" _____	74
14.37.3.6 - "Timer type" _____	74
14.37.3.7 - "Logical status" _____	74
14.37.3.8 - Example: Setting "User Variable" _____	75

 15. Input – Output (via software MSCom2) _____	79
15.1 - Digital Input _____	79
15.2 - "DI" Configuration (via MSCom2 software) _____	79
15.3 - Example _____	80
15.3.1 - "Name" _____	80
15.3.2 - "Status" _____	80
15.3.3 - "OpLogic" _____	80
15.3.4 - "Functions" _____	80
15.3.5 - Example: Setting "Digital Input" _____	80
15.3.5.1 - "Functions" _____	81
15.3 - Outputs Relay _____	82
15.4 - "DO" Configuration _____	82
15.5 - Example _____	84
15.5.1 - "Relay" _____	84
15.5.2 - "Linked function" _____	84
15.5.3 - "Operation Logic" _____	84
15.5.4 - "Logical Status" _____	84
15.5.5 - "Output Configuration" _____	84
15.5.6 - "tON - Operation Time" _____	84
15.5.7 - "Relay Status" _____	84
15.5.8 - Functions - Operation Mode _____	85
15.5.9 - Example: Change settings for "0.R1" _____	86
15.5.9.1 - "Linked Functions" _____	86
15.5.9.2 - "Output Config" _____	87
15.5.9.3 - "Function" _____	88
15.5.9.4 - "tON" _____	88

 16. DATE and TIME _____	89
16.1 - Clock synchronization _____	90
 17. Healthy (Diagnostic Information) _____	91
 18. Dev.Info (Relay Version) _____	91
19. Battery _____	92
20. Maintenance _____	92
21. Power Frequency Insulation Test _____	92

22. Basic Relay - Wiring Diagram	93
22.1 - 14DI - Expansion Module - Wiring Diagram (14 Digital Inputs)	93
22.2 - 14DO-F - Expansion Module - Wiring Diagram (14 Digital Outputs)	94
22.3 - PSU - Power Supply for Expansion Module - Wiring Diagram	94
23. Wiring the Serial Communication Bus	95
24. Basic Relay - Overall Dimensions	96
24.1 - Expansion Module - Overall Dimensions	97
25. Direction for Pcb's Draw-Out and Plug-In	98
25.1 - Draw-out	98
25.2 - Plug-in	98
26. Electrical Characteristics	99
27. Software & Firmware Version	100

1. General Utilization and Commissioning Directions

Always make reference to the specific description of the product and to the Manufacturer's instruction.
Carefully observe the following warnings.

1.1 - Storage and Transportation

Must comply with the environmental conditions stated in the product's specification or by the applicable IEC standards.

1.2 - Installation

Must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

1.3 - Electrical Connection

Must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

1.4 - Measuring Inputs and Power Supply

Carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

1.5 - Outputs Loading

Must be compatible with their declared performance.

1.6 - Protection Earthing

When earthing is required, carefully check its effectiveness.

1.7 - Setting and Calibration

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

1.8 - Safety Protection

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

1.9 - Handling

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules.

The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits produced by M.S. are completely safe from electrostatic discharge (8 kV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

1.10 - Maintenance

Make reference to the instruction manual of the Manufacturer; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

1.11 - Waste Disposal of Electrical & Electronic Equipment

(Applicable throughout the European Union and other European countries with separate collection program).
This product should not be treated as household waste when you wish dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment.
By ensuring this product is disposed of correctly, you will help prevent potential negative consequence to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resource.

1.12 - Fault Detection and Repair

Internal calibrations and components should not be altered or replaced.

For repair please ask the Manufacturer or its authorized Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

2. General

Input currents are supplied to 4 current transformers: - three measuring phase current - one measuring the earth fault zero-sequence current.

Current input can be selected 1A or 5A by movable jumpers available on relay cards.

Input voltage are supplied to 4 Potential Transformers: three measuring phase-to-neutral voltage and one measuring the zero sequence voltage supplied by the secondary of three system P.Ts. Y/Open Delta connected.

The Measuring Ranges of the different inputs respectively are:

Phase Currents : $(0.1 \div 40)In$
 Neutral Current : $(0.01 \div 10)On$

Phase Voltage : $(0.01 \div 2)Un$
 Neutral Voltage : $(0.01 \div 2)Un$

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input currents and voltages are same as reported on the diagram and on the test certificate.

The auxiliary power is supplied by a built-in interchangeable module fully isolated and self-protected.

2.1 - Power Supply - Main Relay

The relay can be fitted with two different types of **power supply**:

Type 1 - { 24V(-20%) / 110V(+15%) a.c.
 { 24V(-20%) / 125V(+20%) d.c.


Type 2 - { 80V(-20%) / 220V(+15%) a.c.
 { 90V(-20%) / 250V(+20%) d.c.

Before energizing the unit check that supply voltage is within the allowed limits.

2.2 - Power Supply - Signalization Module (PSU) (Signalization module)

90 \div 125 ($\pm 20\%$) Vd.c.

3. Front Panel

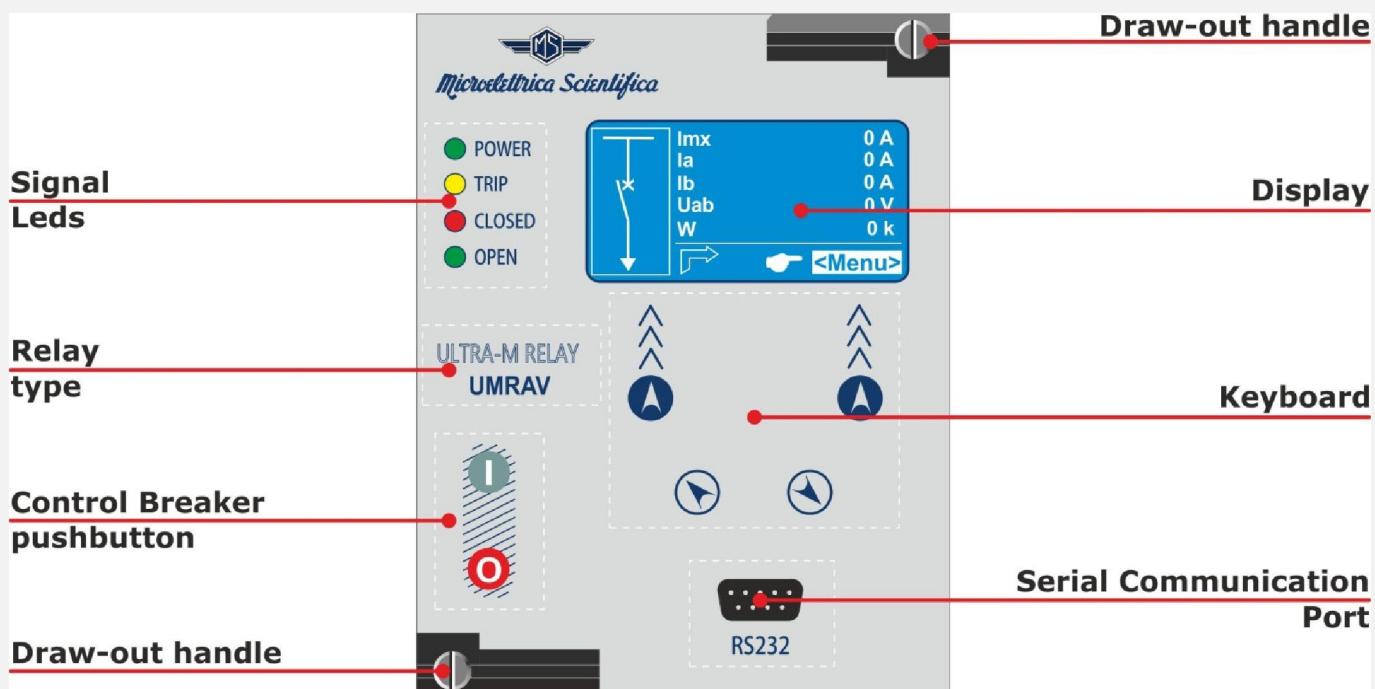

4. Keyboard and Display




	Navigation menu	By these buttons the options showed in correspondence on the display are selected.
	Increase	These buttons are used to scroll the items of the different menus (Local Control, Measurements, Energy metering etc).
	Decrease	
	Open	these buttons (when enabled) operate Circuit Breaker Open/Close control (see § C/B manage)
	Close	

- By the key ② select the windows showing the ICONS of the available menus.
- By the key ③, ④ select the desired icon and enter by key ①
- The different elements can be selected by the key ③ and ④.
The details of the individual menus are given in the following paragraphs.

4.1 - Display

The 128x64 pixel LCD display the available information (menu, etc.).

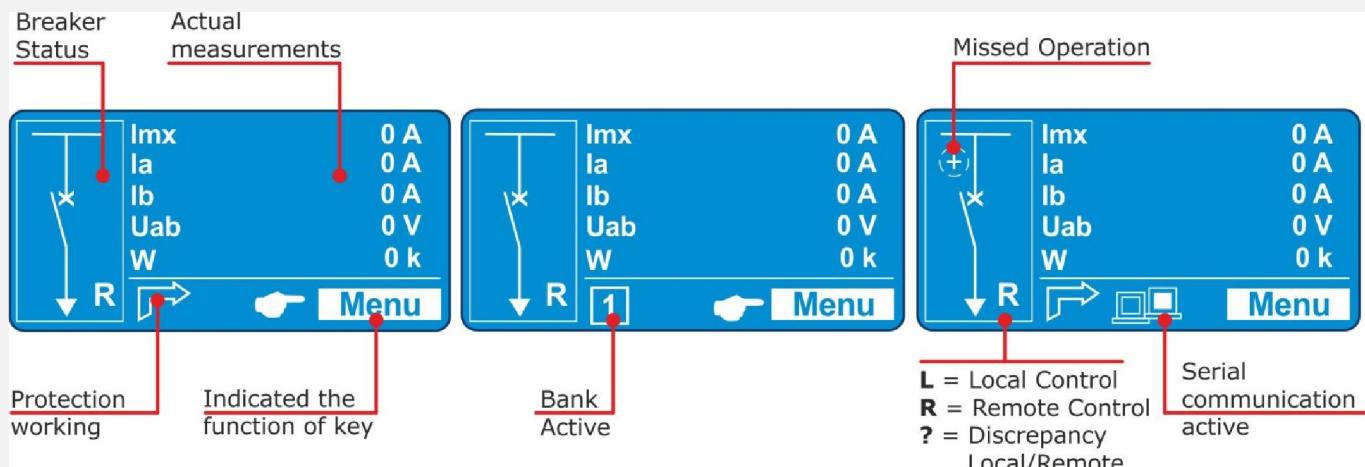


5. Icons of Display

	Cmd	Local Commands
	Measure	Actual Measurements
	Energy	Energy Measurements
	LTrip	Trips Recorded
	Cnt	Statistical Counters
	RCE	Recorder Chronological Events
	Setting	Function Settings
	Sys	System Parameters
	TimeDate	Time And Date
	Healthy	Diagnostic Information
	Info	Info Device

6. Signalization on Main Relay

Four signal leds are provided:

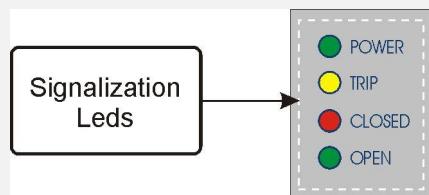


Green Led		<input type="checkbox"/> Illuminated <input type="checkbox"/> Flashing <input type="checkbox"/> Off	- Relay working properly. - Internal Relay Fault
Yellow Led		<input type="checkbox"/> Off <input type="checkbox"/> Illuminated <input type="checkbox"/> Flashing	- No Trip - Trip occurred - Function Timing
Red Led		<input type="checkbox"/> Off <input type="checkbox"/> Illuminated	- C/B Open - C/B Close
Green Led		<input type="checkbox"/> Off <input type="checkbox"/> Illuminated	- C/B Close - C/B Open

Reset from Illuminated status is manual (see § 6.1)

- In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power supply is restored.


6.1 - Leds Manual Reset

For Leds' manual reset operate as follows:

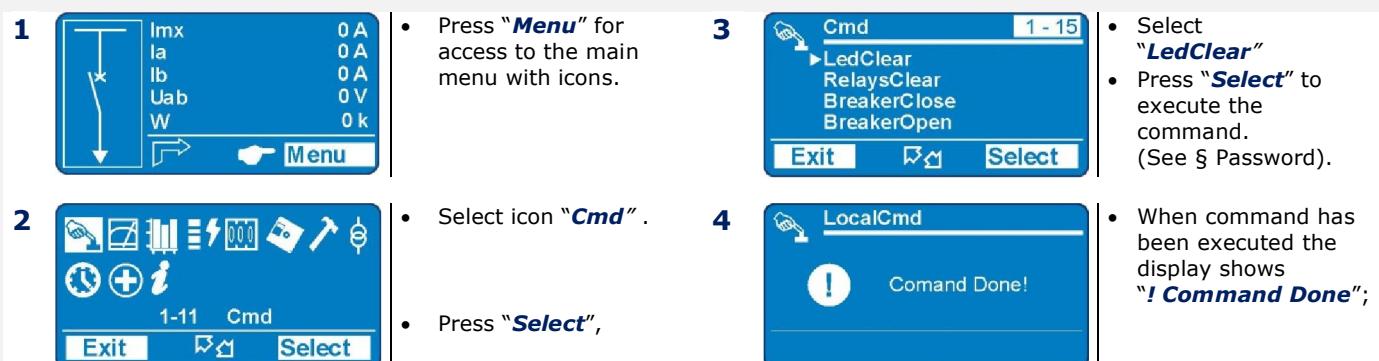


6.2 – Display of the last trip

Beside the signalization of the yellow led "Trip", indicating a generic function trip, the display shows a window indicating the last function that was tripped and the number of events that are stored in the memory. The display will show this window until the reset button or external reset are operated.

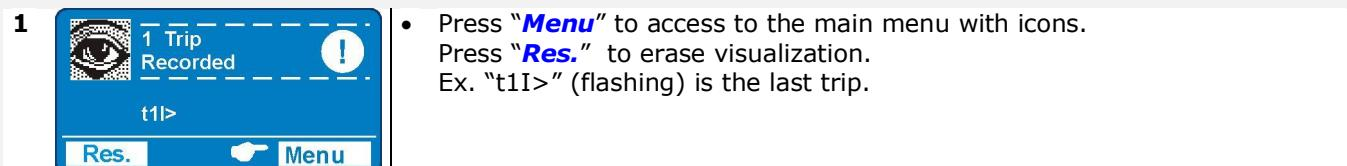

6. Signalization Module

The firmware can manage up to 53 signal leds, 4 led are available on the main relay module, the remaining are available on additional expansion modules (1 "Power" (green), 49 "Programmable" (red)) controlled via the CAN-Bus communication channel (external wired).

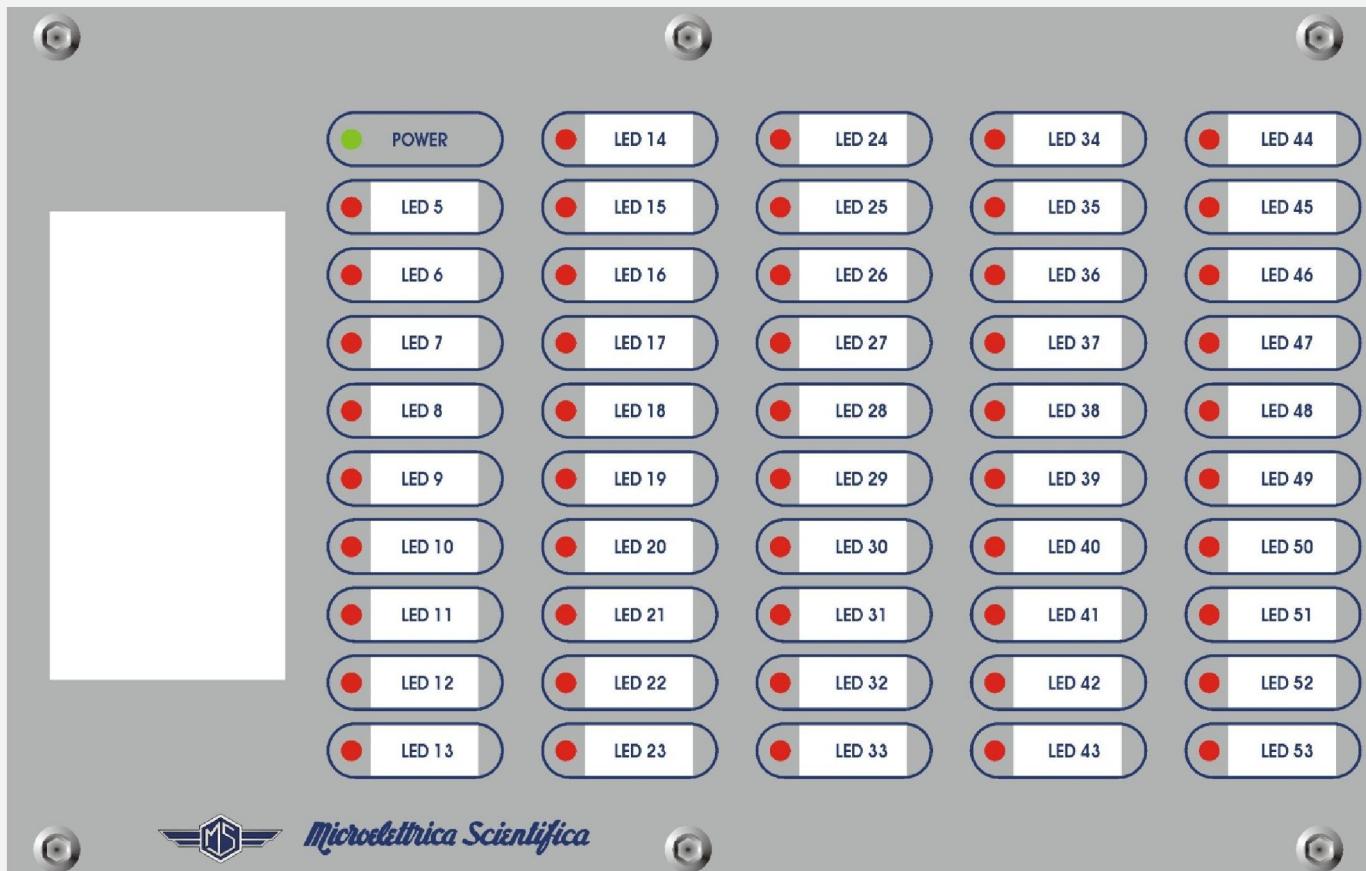


For Leds' programming (only via MSCom2) operate as follows:

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "Led Setting"



The window for led configuration will show:

ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1 (Read only)	Not linked	Light off	Light on	Volatile	1I>
2	Led 2 (Read only)	Not linked	Light off	Light on	Volatile	1Is

6.1 - Name

Led name – for leds position see picture

6.2 - Link enable

- | | |
|------------------|---------------------|
| <i>Linked</i> | = Enable to operate |
| <i>No Linked</i> | = Disable |

6.3 - Status

- | | |
|------------------|--|
| <i>Light-OFF</i> | = Normal condition |
| <i>Light-ON</i> | = When cause appear led is illuminated |
| <i>Flashing</i> | = When cause appear led is flashing |

See "Light Prog"

6.4 - Light Prog.

- | | |
|-----------------|--|
| <i>Light-ON</i> | = When cause appear led is illuminated |
| <i>Flashing</i> | = When cause appear led is flashing |

6.5 - Funct. Mode

- | | |
|-----------------|---|
| <i>Volatile</i> | = When cause disappear led turn-off (Not memorized) |
| <i>Latched</i> | = When cause disappear led remain illuminated (memorized) |

6.6 - Functions

Select the function assigned to specific led (see table 1).
 It's possible to configure only one function for each led.
 For configuration multiple functions use "UserVar" function.

6.7 - Table 1

Functions	Element	Description
	SCDop	Scada open breaker command
	SCDcl	Scada close breaker command
	SCDop2	Scada open breaker 2 command (generic command)
	SCDcl2	Scada close breaker 2 command (generic command)
	SCDop3	Scada open breaker 3 command (generic command)
	SCDcl3	Scada close breaker 3 command (generic command)
	SCDop4	Scada open breaker 4 command (generic command)
	SCDcl4	Scada close breaker 5 command (generic command)
	DisRCL	Scada disable reclose command
	EnRCL	Scada enable reclose command
T>	Tal	Alarm
T>	T>	Trip
		Thermal Image T>
1I>	1I>	Start
	t1I>	Trip
		First overcurrent element F50-51
2I>	2I>	Start
	t2I>	Trip
		Second overcurrent element F50-51
3I>	3I>	Start
	t3I>	Trip
		Third overcurrent element F50-51
1Io>	1Io>	Start
	t1Io>	Trip
		First earth fault element F50N-51N
2Io>	2Io>	Start
	t2Io>	Trip
		Second earth fault element F50N-51N
3Io>	3Io>	Start
	t3Io>	Trip
		Third earth fault element F50N-51N
1Is>	1Is>	Start
	t1Is>	Trip
		First negative sequence current element F46
2Is>	2Is>	Start
	t2Is>	Trip
		Second negative sequence current element F46
1U>	1U>	Start
	t1U>	Trip
		First overvoltage element F59
2U>	2U>	Start
	t2U>	Trip
		Second overvoltage element F59
3U>	3U>	Start
	T3U>	Trip
		Third overvoltage element F59
1U<	1U<	Start
	t1U<	Trip
		First undervoltage element F27
2U<	2U<	Start
	t2U<	Trip
		Second undervoltage element F27
3U<	3U<	Start
	t3U<	Trip
		Third undervoltage element F27
1f>	1f>	Start
	t1f>	Trip
		First overfrequency element F81
2f>	2f>	Start
	t2f>	Trip
		Second overfrequency element F81
3f>	3f>	Start
	t3f>	Trip
		Third overfrequency element F81
1f<	1f<	Start
	t1f<	Trip
		First underfrequency element F81
2f<	2f<	Start
	t2f<	Trip
		Second underfrequency element F81
3f<	3f<	Start
	t3f<	Trip
		Third underfrequency element F81
1Uo>	1Uo>	Start
	t1Uo>	Trip
		First zero sequence voltage element F59Uo
2Uo>	2Uo>	Start
	t2Uo>	Trip
		Second zero sequence voltage element F59Uo
U1<	U1<	Start
	tU1<	Trip
		Positive sequence undervoltage element F27U1
U2>	U2>	Start
	tU2>	Trip
		Negative sequence overvoltage element F59U2
Wi	tWi>	Circuit breaker maintenance level
TCS	tTCS	Trip coil supervision
IRF	IRF	Start
	tIRF	Trip
		Internal Relay Failure
BF	tBF	Trip
		Breaker Failure

RT	RT	<i>Start Trip</i>	<i>Remote Trip</i>
	tRT		
	Gen.Start	Start	<i>Generic</i>
	Gen.Trip	Trip	<i>Generic</i>
	ApManInt		<i>Manual Open Command</i>
	L/Rdisc		<i>Local/Remote signal Discrepancy</i>
	Ch.Int.		<i>Close Command</i>
	C/Bfail		<i>Circuit Breaker failure</i>
	OscilloTrigger Logic		<i>User Variable for Oscillographic Recording</i>
	UserVar 1		<i>User Variable</i>
	to		
	UserVar 25		
	Vcc		<i>Reserved</i>
	Gnd		<i>Reserved</i>
	Reset		<i>Reset signal logic</i>
	P1		<i>Push-button Open</i>
	P2		<i>Push-button Close</i>
	0.D1		
	0.D1Not		
	---		<i>Digital Input on Main Relay</i>
	0.D4		
	0.D4Not		
	1.D1		
	1.D1Not		
	---		<i>Digital input on Expansion Board</i>
	1.D15		
	1.D15Not		
	2.D1		
	2.D1Not		
	---		<i>Digital input on Expansion Board</i>
	2.D15		
	2.D15Not		
	0.R1		
	0.R2		
	0.R3		
	0.R4		<i>Output relay on Main Relay</i>
	0.R5		
	0.R6		
	1.R1		
	---- to		<i>Output relay on Expansion Board</i>
	1.R14		

6.8 - Example: Change settings for "Led5"

Change settings for "**LED5**" : "Enable", "Flashing", "Latched", "1I>".

Led 1	=	Read only	(see § Signalization on Main Relay)
Led 2	=		
Led 3	=		
Led 4	=		

Led 5	=	are provided in signalization module
to		
Led 53	=	

Main Windows:


ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1 (Read only)	Not linked (0)	Light off (0)	Light on (0)	Volatile (0)	1I> (0)
2	Led 2 (Read only)	Not linked (0)	Light off (0)	Light on (0)	Volatile (0)	1I> (0)
3	Led 3 (Read only)	Not linked (0)	Light off (0)	Light on (0)	Volatile (0)	1I> (0)
4	Led 4 (Read only)	Not linked (0)	Light off (0)	Light on (0)	Volatile (0)	1I> (0)
5	Led 5	Not linked (0)	Light off (0)	Light on (0)	Volatile (0)	1.D1

6.8.1 - "Enable"

Select "**Link enable**" related to "Led 5" and press right button on mouse, select "**Value change**":



Select "**Linked**" from combo box and press "**OK**" (if Password is request, see § Password):

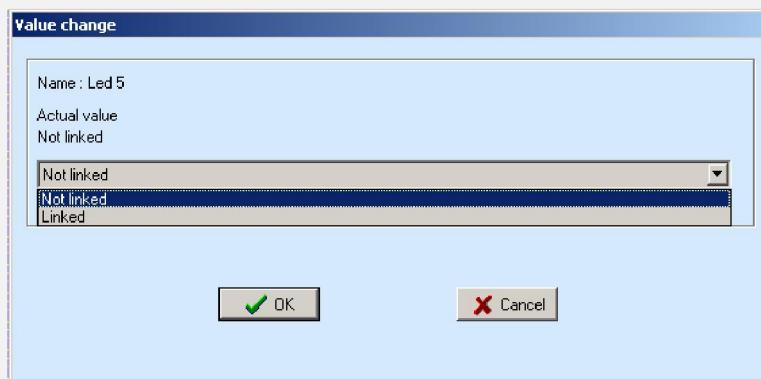


6.8.2 - "Flashing"

Select "**Light prog**" related to "Led 5" and press right button on mouse, select "Value change":




Select "**Flashing**" from combo box and press "OK" (if Password is request, see § Password):

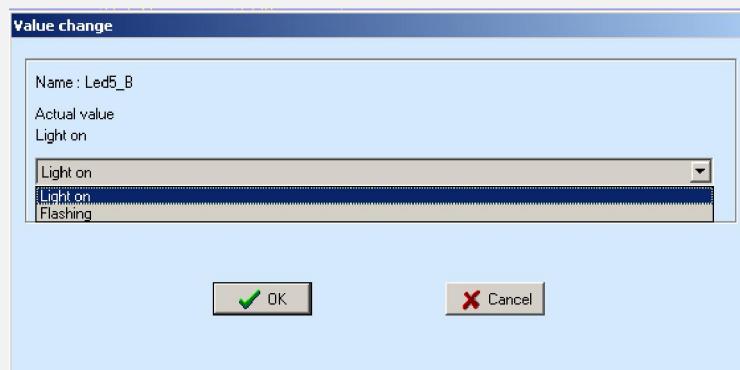


6.8.3 - "Latched"

Select "**Latched**" related to "Led 5" and press right button on mouse, select "Value change":

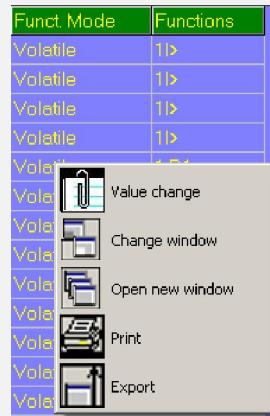


Select "**Latched**" from combo box and press "OK" (if Password is request, see § Password):

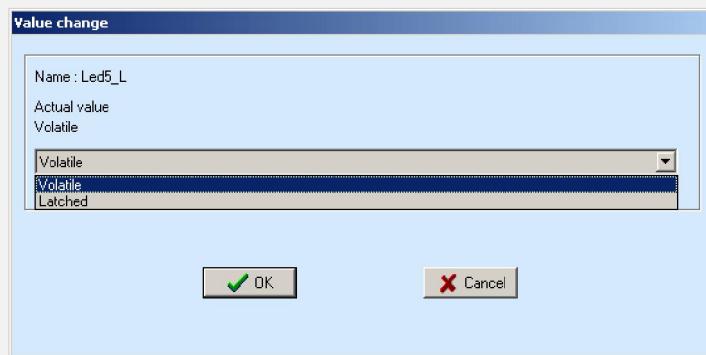**6.8.4 - "Functions"**

Select "**Functions**" related to "Led 5" and press right button on mouse, select "Value change":



Select "**1D>**" from combo box and press "OK" (if Password is request, see § Password):

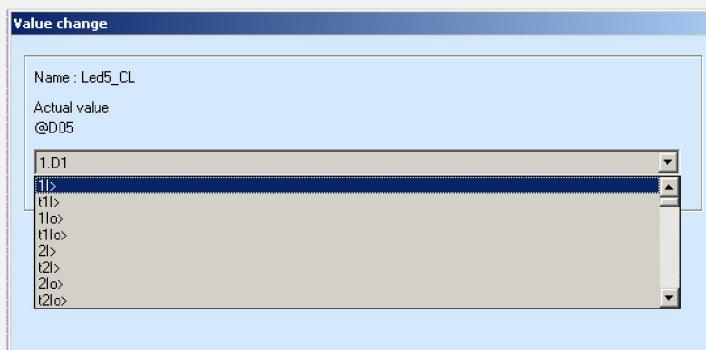

6. User Variables

The “**USER VARIABLE**” is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via “**MSCom2**” software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
------	-------------	------------------	---------	-------	------------	----------------

6.1 – “Name”

Internal progressive name

6.2 – “User Descr”

Custom identification label for user variable

6.3 – “Linked functions”

Selection functions

6.4 – “OpLogic”

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

6.5 - “Timer”

Time delay (0-10)s, step 0.01s

6.6 – “Timer type”

Delay = Add a delay on output activation.
The “Timer” is edge triggered on rise edge.

Monostable = Activated the output for the time “Timer”

6.7 – “Logical status”

“User Variable” Logical status

6.8 - Example: Setting "User Variable"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "User Variable"



Setting for "UserVar<0>" : "Current Trip", "1I>,2I>,3I>", "OR", "1", "Monostable".


ID	Name	User descr.	Linked functions	OpLogic	Timer	Timertype	Logical status
1	User Trigger Oscillo	User Trigger Oscillo		None	0	Delay	0
2	UserVar <0>	Current trip	1I>,2I>,3I>	OR	1	Monostable	0

6.8.1 - "User description" (User descr.)

Select “**User descr**” related to “UserVar<0>” and press right button on mouse, select “Value change”:



Insert “**Current Trip**” into box and press “OK”:

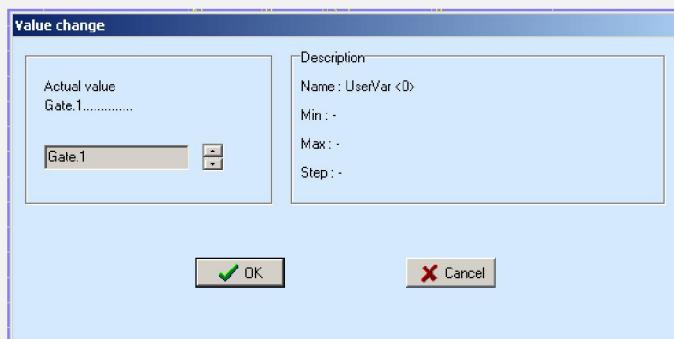


6.8.2 - "Linked Functions"

Select “**Linked Functions**” related to “UserVar<0>” and press right button on mouse, select “Value change”:



Select “**1I>, 2I>, 3I>**” from “Available” box via push-button “<Add”, and press “OK”. For remove functions, use push-button “>Remove”.

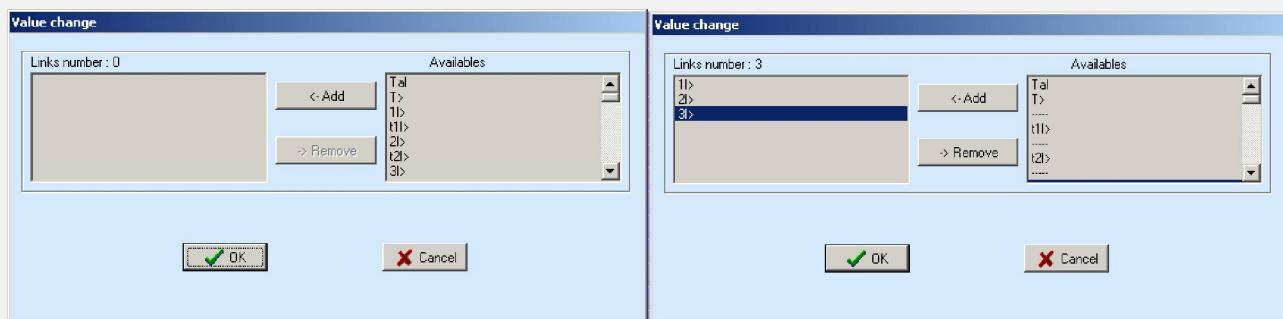


6.8.3 - "Operation Logic" (Oplogic)

Select "**Oper Logic**" related to "UserVar<0>" and press right button on mouse, select "Value change":



Insert "**OR**" into box and press "OK":

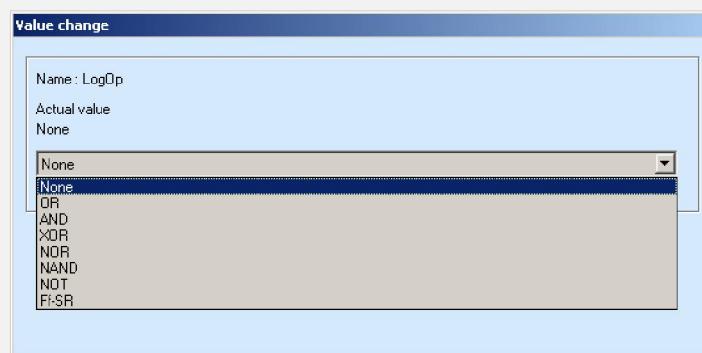


6.8.4 - "Timer"

Select "**Timer**" related to "UserVar<0>" and press right button on mouse, select "Value change":




Select "**1**" into box and press "OK":

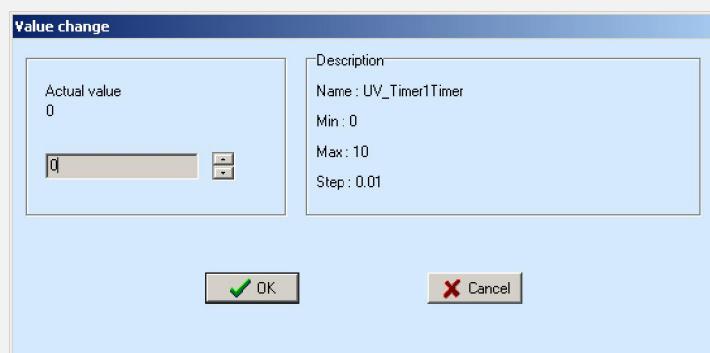


6.8.5 - "Timer type"

Select "**Timer**" related to "UserVar<0>" and press right button on mouse, select "Value change":

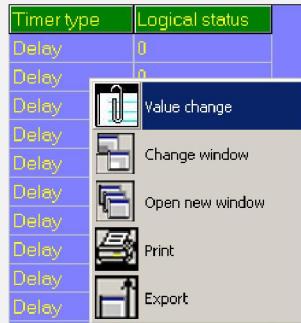

Select "**Monostable**" into box and press "OK":

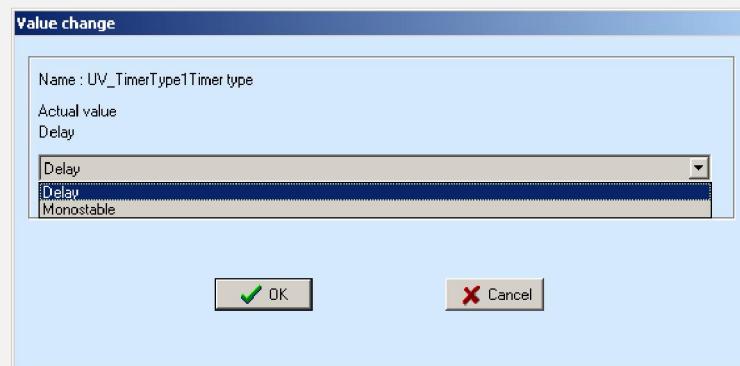



7. Cmd (Local Commands)

"**LOCAL COMMANDS**" allow to operate from relay front face controls like Thermal Memory reset, Leds reset, etc.


Menu	Description	Password
→ Led Clear	Reset of signal Leds	No
→ Relays Clear	Manual reset of output relays	No
→ Breaker Close	Manual C/B closing (conditioned by Password)	Yes
→ Breaker Open	Manual C/B opening (conditioned by Password)	Yes
→ Breaker2 Close	Manual C/B closing (conditioned by Password)	Yes
→ Breaker2 Open	Manual C/B opening (conditioned by Password)	Yes
→ Breaker3 Close	Manual C/B closing (conditioned by Password)	Yes
→ Breaker3 Open	Manual C/B opening (conditioned by Password)	Yes
→ Breaker4 Close	Manual C/B closing (conditioned by Password)	Yes
→ Breaker4 Open	Manual C/B opening (conditioned by Password)	Yes
→ Event Clear	Reset of all Events recorded	Yes
→ HistFail Clear	Reset of Internal Failure Historic records	Yes
→ Reset Term	Reset to zero of the accumulations relevant to Thermal Image and Interruption Energy.	Yes
→ Leds Test	Signal Leds test	No
→ Force Osc	Issue a trigger on oscillographic recording (see § Oscillo)	Yes

To operate one command by the Front Face Keyboard, proceed as follows (Led Reset in the present example).

- 1  • Press "**Menu**" for access to the main menu with icons.
- 2  • Select "**Cmd**" icon with pushbutton "**Increase**" or "**Decrease**".
• Press "**Select**" for access.
- 3  • Select with pushbutton "**Increase**" or "**Decrease**" the menu "**LedClear**".
• Press "**Select**" to execute the command.
(if Password is request, see § Password).
- 4  • When command has been executed the display shows "**! Command Done!**"; go to "3".

8. Measure

Real time values as measured during the normal operation.

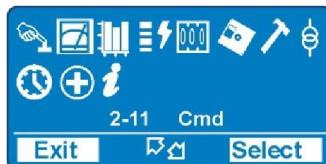- 1 
 - 2 
 - 3 
- Press “**Menu**” for access to the main menu with icons.
 - Select “**Measure**” icon with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
 - Scroll the menu “**Measure**” with pushbutton “**Increase**” or “**Decrease**” to display the measurement.
 - Press “**Exit**” to go to the main menu.

→ Imx (0 ÷ 9999)	A	Largest phase current (Ia, Ib, Ic).
→ Ia (0 ÷ 9999)	A	Phase A current (R.M.S. ampere)
→ Ib (0 ÷ 9999)	A	Phase B current (R.M.S. ampere)
→ Ic (0 ÷ 9999)	A	Phase C current (R.M.S. ampere)
→ Io (0 ÷ 9999)	A	Zero Sequence Current (fundamental frequency value 3Io)
→ I1 (0.00 ÷ 99.99)	In	Positive sequence current
→ I2 (0.00 ÷ 99.99)	In	Negative sequence current
→ Frq (0.00 ÷ 99.99)	Hz	Frequency
→ Uan (0 ÷ 999999)	V	Phase Voltage "A-N" (R.M.S. value)
→ Ubn (0 ÷ 999999)	V	Phase Voltage "B-N" (R.M.S. value)
→ Ucn (0 ÷ 999999)	V	Phase Voltage "C-N" (R.M.S. value)
→ Uab (0 ÷ 999999)	V	Phase-to-phase Voltage "A-B" (R.M.S. value)
→ Ubc (0 ÷ 999999)	V	Phase-to-phase Voltage "B-C" (R.M.S. value)
→ Uca (0 ÷ 999999)	V	Phase-to-phase Voltage "C-A" (R.M.S. value)
→ Uo (0 ÷ 999999)	V	Zero Sequence Voltage (fundamental frequency value 3Vo)
→ V1 (0.00 ÷ 99.99)	Vn	Positive Sequence Voltage
→ V2 (0.00 ÷ 99.99)	Vn	Negative Sequence Voltage
→ PhA (0 ÷ 359)	◦	Phase angle "Ia ^ Uan"
→ PhB (0 ÷ 359)	◦	Phase angle "Ib ^ Ubn"
→ PhC (0 ÷ 359)	◦	Phase angle "Ic ^ Ucn"
→ Ph0 (0 ÷ 359)	◦	Phase angle "Io ^ Uo"
→ W (0.00÷99.99÷999.9÷9999999)	k	Three Phase Active Power (kW)
→ VAr (0.00÷99.99÷999.9÷9999999)	k	Three Phase Reactive Power (kVAr)
→ VA (0.00÷99.99÷999.9÷9999999)	k	Three Phase Apparent Power (kVA)
→ Cos (0.000 ÷ 1.000)	-	Power Factor
→ Tem (0 ÷ 9999)	%T	Thermal status as % of the full load continuous operation temperature Tn
→ Wir (100 ÷ 0)	%W	Amount still remaining of permissible interruption energy before Circuit Breaker maintenance is requested.


9. Energy

Real time energy measurements

Display	→ + kWh (0 - 9999999)	Exported Active Energy
	→ - kWh (0 - 9999999)	Imported Active Energy
	→ + kRh (0 - 9999999)	Exported Reactive Energy
	→ - kRh (0 - 9999999)	Imported Reactive Energy

Erase	→ All Energy counters are cleared
--------------	-----------------------------------

When the measurement exceed "9999999" the counters restart from "0".

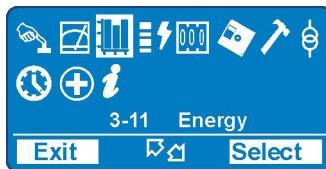- 1  • Press "**Menu**" for access to the main menu with icons.
- 2  • Select "**Energy**" icon with pushbutton "**Increase**" or "**Decrease**".
• Press "**Select**" for access.
- 3  • Select "**Display**" with pushbutton "**Increase**" or "**Decrease**".
• Press "**Select**" for access.
- 4  • Display of Real time Energy measurements.
• Press "**Exit**" to go back to the level "3".
- 5  • Select "**Erase**" with pushbutton "**Decrease**" to clear all recording.
• Press "**Select**". (if Password is request, see § Password).
- 6  • When command has been execute the display shows "**! Command Done**"; to go to the level "5".
• Press "**Exit**" to go back to the main menu.


10. LTrip (Trips Recorded)


Display of the function which caused the tripping of the relay plus values of the measurement at the moment of tripping. The last 10 events are recorded.

The memory buffer is refreshed at each new relay tripping (FIFO logic).

Display → Reading of recorded Trips.

Erase → Clear all Trip recorded.

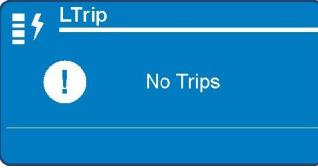- 1  • Press “**Menu**” for access to the main menu with icons.
- 2  • Select “**TripRec.**” icon with pushbutton “**Increase**” or “**Decrease**”.
• Press “**Select**” for access.
- 3  • Select “**Display**” with pushbutton “**Increase**” or “**Decrease**”.
• Press “**Select**” for access.
• For “**Erase**” go to “8”
- 4  • If no trip is recorded the display shows “**! No Trips**”.
- 5  • If any trip was recorded, select “**View**” to display the chronological list of the records.
• By the keys “**Increase**” or “**Decrease**” select the date of the record to be checked.
- 6  • Will be shown:
“**Descr**” the function that caused the event (Example: t1I> = Trip)
“**Edge**” if the function was tripped (Rise) or reset (Fall)
“**Date**”, date of trip, year/month/day, hour:minutes:seconds:milliseconds
• Press “**Value**”, for reading the value of input quantities on tripping.

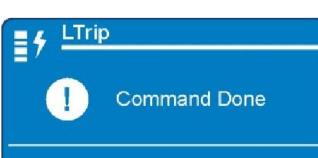- 7** 
- Scroll with pushbuttons “**Increase**” or “**Decrease**” the available measurements.
 - Select “**Exit**” to go back to “5” for another selection, or “2” go back to the main menu.
- 8** 
- Select “**Erase**” with button “**Decrease**”.
 - Press “**Select**” to execute the commands; **All** Trips recorded are erased. (if Password is request, see § Password).
- 9** 
- When command has been executed the display shows “**! Command Done**”;
 - Press “**Exit**” to go back to the main menu.

→ **Date** Date : Year/Month/Day
 Time : hours/minutes/second/hundredths of seconds
 → **Cause** Indication of the protection function which caused the relay tripping.

10.1 - Table 1

Functions	Element	Description
T>	Tal	Alarm
T>	Trip	Thermal Image T>
1I>	1I>	Start
	t1I>	Trip
2I>	2I>	Start
	t2I>	Trip
3I>	3I>	Start
	t3I>	Trip
1Io>	1Io>	Start
	t1Io>	Trip
2Io>	2Io>	Start
	t2Io>	Trip
3Io>	3Io>	Start
	t3Io>	Trip
1Is>	1Is>	Start
	t1Is>	Trip
2Is>	2Is>	Start
	t2Is>	Trip
1U>	1U>	Start
	t1U>	Trip
2U>	2U>	Start
	t2U>	Trip
3U>	3U>	Start
	T3U>	Trip
1U<	1U<	Start
	t1U<	Trip
2U<	2U<	Start
	t2U<	Trip
3U<	3U<	Start
	T3U<	Trip
1f>	1f>	Start
	t1f>	Trip
2f>	2f>	Start
	t2f>	Trip
3f>	3f>	Start
	t3f>	Trip


1f<	1f<	<i>Start</i>	<i>First underfrequency element F81</i>
	t1f<	<i>Trip</i>	
2f<	2f<	<i>Start</i>	<i>Second underfrequency element F81</i>
	t2f<	<i>Trip</i>	
3f<	3f<	<i>Start</i>	<i>Third underfrequency element F81</i>
	t3f<	<i>Trip</i>	
1Uo>	1Uo>	<i>Start</i>	<i>First zero sequence voltage element F59Uo</i>
	t1Uo>	<i>Trip</i>	
2Uo>	2Uo>	<i>Start</i>	<i>Second zero sequence voltage element F59Uo</i>
	t2Uo>	<i>Trip</i>	
U1<	U1<	<i>Start</i>	<i>Positive sequence undervoltage element F27U1</i>
	tU1<	<i>Trip</i>	
U2>	U2>	<i>Start</i>	<i>Negative sequence overvoltage element F59U2</i>
	tU2>	<i>Trip</i>	
Wi	tWi>		<i>Circuit breaker maintenance level</i>
TCS	tTCS		<i>Trip coil supervision</i>
IRF	IRF	<i>Start</i>	<i>Internal Relay Failure</i>
	tIRF	<i>Trip</i>	
BF	tBF	<i>Trip</i>	<i>Breaker Failure</i>
RT	RT	<i>Start</i>	<i>Remote Trip</i>
	tRT	<i>Trip</i>	

11.  **Cnt** (Statistical Counters)

Counters of the number of operations for each of the relay functions.

By the interface program "MSCom2" it is possible to individually reset the counters and set an initial starting number.

Display	→ T>	0	Operations counters	Thermal Image
	→ 1I>	0	Operations counters	First overcurrent element
	→ 2I>	0	Operations counters	Second overcurrent element
	→ 3I>	0	Operations counters	Third overcurrent element
	→ 1Io>	0	Operations counters	First Earth Fault element
	→ 2Io>	0	Operations counters	Second Earth Fault element
	→ 3Io>	0	Operations counters	Third Earth Fault element
	→ 1Is>	0	Operations counters	First Negative Sequence element
	→ 2Is>	0	Operations counters	Second Negative Sequence element
	→ 1U>	0	Operations counters	First Overvoltage element
	→ 2U>	0	Operations counters	Second Overvoltage element
	→ 3U>	0	Operations counters	Third Overvoltage element
	→ 1U<	0	Operations counters	First Undervoltage element
	→ 2U<	0	Operations counters	Second Undervoltage element
	→ 3U<	0	Operations counters	Third Undervoltage element
	→ 1f>	0	Operations counters	First Overfrequency element
	→ 2f>	0	Operations counters	Second Overfrequency element
	→ 3f>	0	Operations counters	Third Overfrequency element
	→ 1f<	0	Operations counters	First Underfrequency element
	→ 2f<	0	Operations counters	Second Underfrequency element
	→ 3f<	0	Operations counters	Third Underfrequency element
	→ 1Uo>	0	Operations counters	First Zero Sequence overvoltage element
	→ 2Uo>	0	Operations counters	Second Zero Sequence overvoltage element
	→ IRF	0	Operations counters	Internal Relay Fault
	→ U2>	0	Operations counters	Negative Sequence overvoltage element
	→ U1<	0	Operations counters	Positive Sequence undervoltage element
	→ Wi	0	Operations counters	Circuit Breaker maintenance alarm
	→ TCS	0	Operations counters	Trip Circuit Supervision
	→ RT	0	Operations counters	Remote Trip
	→ BrkF	0	Operations counters	Breaker failure to open
	→ Aut Op	0	Operations counters	Automatic C/B Openings
	→ Aut CL	0	Operations counters	Automatic C/B Closings
	→ Man Op	0	Operations counters	Manual C/B Openings
	→ Man CL	0	Operations counters	Manual C/B Closings
	→ OvrOp	0	Operations counters	Overall C/B Openings total (Man+Aut)
	→ OvrCL	0	Operations counters	Overall C/B Closings total (Man+Aut)

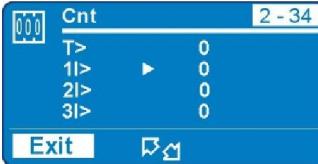- 1**  • Press “**Menu**” for access to the main menu with icons.
- 2**  • Press “**Counter**” for access.
- 3**  • Press “**Display**” for access.
- 4**  • Display of the number of operations of each individual function.
• With pushbuttons “**Increase**” or “**Decrease**” scroll the parameters
• Press “**Exit**” go back to “3”.

12. RCE (Recording Chronological Events)


Display of the function which caused any of the following events: - *Status change of digital Inputs/Outputs.* - *Start of protection functions* – *Trip of protection function* – *Function reset.*

The last 100 events are recorded.

The memory buffer is updated at each new event.

Display → Reading events recorded.

Erase → Clear all events recorded.

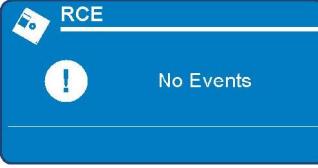- | | |
|---|--|
|  | <ul style="list-style-type: none"> • Press “Menu” for access to the main menu with icons. |
|  | <ul style="list-style-type: none"> • Select “Events” icon with pushbutton “Increase” or “Decrease”. • Press “Select” for access. |
|  | <ul style="list-style-type: none"> • Select “Display” with pushbutton “Increase” or “Decrease”. • Press “Select” for access. • For “Erase” go to “7” |
|  | <ul style="list-style-type: none"> • If no event is recorded the display shows message “! No Events”. |
|  | <ul style="list-style-type: none"> • If any event was recorded, select “View” to display the chronological list of the records. • By the keys “Increase” or “Decrease” select the date of the record to be checked. |
|  | <ul style="list-style-type: none"> • Will be shown:
“Descr” the function that caused the event
(Example: 1I> = Start, t1I> = Trip)
“Edge” if the function was tripped (Rise) or reset (Fall)
“Date”, date of trip, year/month/day, hour:minutes:seconds:milliseconds |
|  | <ul style="list-style-type: none"> • Select “Erase” with button “Decrease”. • Press “Select” to execute the commands; All Events recorded are erased.
(if Password is request, see § Password). |
|  | <ul style="list-style-type: none"> • When command has been execute the display shows “! Command Done”; • Press “Exit” to go back to the main menu. |

12.1 – Events on display

Functions	Events Displayed	Status	Description
	SCDop		Scada open breaker command
	SCDcl		Scada close breaker command
	SCDop2		Scada open breaker 2 command (generic command)
	SCDcl2		Scada close breaker 2 command (generic command)
	SCDop3		Scada open breaker 3 command (generic command)
	SCDcl3		Scada close breaker 3 command (generic command)
	SCDop4		Scada open breaker 4 command (generic command)
	SCDcl4		Scada close breaker 5 command (generic command)
	DisRCL		Scada disable reclose command
	EnRCL		Scada enable reclose command
T>	Tal	Alarm	
	T>	Trip	Rise Fall
			<i>Thermal Image T></i>
1I>	1I>	Start	Rise
	t1I>	Trip	Rise Fall
			<i>First overcurrent element F50-51</i>
2I>	2I>	Start	Rise
	t2I>	Trip	Rise Fall
			<i>Second overcurrent element F50-51</i>
3I>	3I>	Start	Rise
	t3I>	Trip	Rise Fall
			<i>Third overcurrent element F50-51</i>
1Io>	1Io>	Start	Rise
	t1Io>	Trip	Rise Fall
			<i>First earth fault element F50N-51N</i>
2Io>	2Io>	Start	Rise
	t2Io>	Trip	Rise Fall
			<i>Second earth fault element F50N-51N</i>
3Io>	3Io>	Start	Rise
	t3Io>	Trip	Rise Fall
			<i>Third earth fault element F50N-51N</i>
1Is>	1Is>	Start	Rise
	t1Is>	Trip	Rise Fall
			<i>First negative sequence current element F46</i>
2Is>	2Is>	Start	Rise
	t2Is>	Trip	Rise Fall
			<i>Second negative sequence current element F46</i>
1U>	1U>	Start	Rise
	t1U>	Trip	Rise Fall
			<i>First overvoltage element F59</i>
2U>	2U>	Start	Rise
	t2U>	Trip	Rise Fall
			<i>Second overvoltage element F59</i>
3U>	3U>	Start	Rise
	t3U>	Trip	Rise Fall
			<i>third overvoltage element F59</i>
1U<	1U<	Start	Rise
	t1U<	Trip	Rise Fall
			<i>First undervoltage element F27</i>
2U<	2U<	Start	Rise
	t2U<	Trip	Rise Fall
			<i>Second undervoltage element F27</i>
3U<	3U<	Start	Rise
	T3U<	Trip	Rise Fall
			<i>Thirs undervoltage element F27</i>
1f>	1f>	Start	Rise
	t1f>	Trip	Rise Fall
			<i>First overfrequency element F81</i>
2f>	2f>	Start	Rise
	t2f>	Trip	Rise Fall
			<i>Second overfrequency element F81</i>
3f>	3f>	Start	Rise
	t3f>	Trip	Rise
			<i>Third overfrequency element F81</i>
1f<	1f<	Start	Rise
	t1f<	Trip	Rise Fall
			<i>First underfrequency element F81</i>
2f<	2f<	Start	Rise
	t2f<	Trip	Rise Fall
			<i>Second underfrequency element F81</i>
3f<	3f<	Start	Rise
	t3f<	Trip	Rise
			<i>Third underfrequency element F81</i>
1Uo>	1Uo>	Start	Rise
	t1Uo>	Trip	Rise Fall
			<i>First zero sequence voltage element F59Uo</i>
2Uo>	2Uo>	Start	Rise
	t2Uo>	Trip	Rise Fall
			<i>Second zero sequence voltage element F59Uo</i>
U1<	U1<	Start	Rise
	tU1<	Trip	Rise Fall
			<i>Positive sequence undervoltage element F27U1</i>
U2>	U2>	Start	Rise
	tU2>	Trip	Rise Fall
			<i>Negative sequence overvoltage element F59U2</i>
Wi	tWi>		Rise
			<i>Circuit breaker maintenance level</i>
TCS	TCS	Start	Rise
	tTCS	Trip	Rise Fall
			<i>Trip coil supervision</i>
IRF	IRF	Start	Rise
	tIRF	Trip	Rise
			<i>Internal Relay Failure</i>
BF	BF	Trip	Rise Fall
			<i>Breaker Failure</i>
StSeq	ITR	Start	Rise
	StartSeq.Success	Trip	Rise
			<i>Start sequence</i>
StNo	StNo	Trip	Rise Fall
			<i>Start sequence success</i>
			<i>Limitation of start number</i>

Functions	Events Displayed	Status		Description
	L/Rdisc.	Rise		<i>Local/Remote signal Discrepancy</i>
	manOpKey	Rise		<i>Circuit Breaker intentional open by Key</i>
	manOpLocC	Rise		<i>Circuit Breaker intentional open by local command</i>
	manOpRemC	Rise		<i>Circuit Breaker intentional open by remote command</i>
	manOpExtIn	Rise		<i>Circuit Breaker intentional open by external input</i>
	ExterManOp	Rise		<i>Circuit Breaker intentional external open</i>
	manCIKey	Rise		<i>Circuit Breaker intentional close by Key</i>
	manCILocC	Rise		<i>Circuit Breaker intentional close by local command</i>
	manCIRemC	Rise		<i>Circuit Breaker intentional close by remote command</i>
	manCIExtIn	Rise		<i>Circuit Breaker intentional close by external input</i>
	ExterManCh	Rise		<i>Circuit Breaker intentional external close</i>
	CB-Fail	Rise	Fall	<i>Circuit Breaker failure</i>
	0.D0	Rise	Fall	<i>Digital Input</i>

	0.D4			
	1.D1	Rise	Fall	<i>Digital input</i>

	1.D15			
	2.D1	Rise	Fall	<i>Digital input</i>

	2.D15			
	0.R1	Rise	Fall	<i>Output relay</i>

	0.R6			
	1.R1	Rise	Fall	<i>Output relay</i>

	1.R14			
	2.R1	Rise	Fall	<i>Output relay</i>

	2.R14			
	UpDateMon	Rise	Fall	<i>Update Monitor</i>
	IPU boot	Rise		<i>IPU boot</i>


13. System (System parameters)

Setting of system parameters.

CT&PTs	Phase CT	Prim. Sec.	→	1000 1	A A	(1 ÷ 9999) (1 / 5)	step	1	A	(1)
	PT (Ph-Ph)	Prim. Sec.	→	10.00 100	kV V	(0.10 ÷ 500.00) (50 ÷ 150)	step step	0.01 1	kV V	(2)(3)
	Neut. CT	Prim. Sec.	→	1000 1	A A	(1 ÷ 9999) (1 / 5)		1	A	(1)
Nom. Val. (Nominal Values)			→	F_n In Un	50 500 10.00	Hz A kV	(50 / 60) (1 ÷ 9999) (0.10 ÷ 500.00)	1 0.01	A kV	
Setup Group			→	Group	1		(1 / 2)			

- F_n** : Nominal Frequency
- I_n** : Nominal Current
- U_n** : Nominal Voltage
- Group** : Setting group active

- (1) Move the switch in the corresponding founding to the required input current as here below shorted.



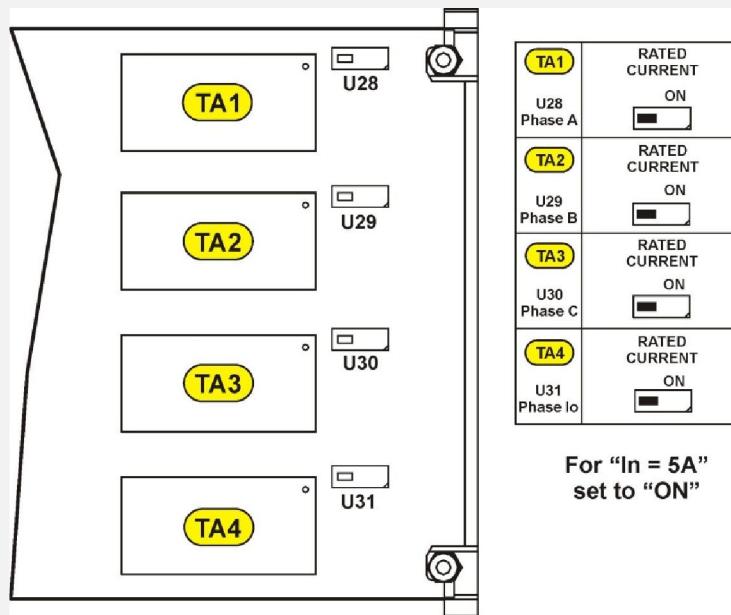


- (2) Set the value of the phase-to-phase PT voltage.

$$\text{Example: Example : TV} \quad \frac{10000 : \sqrt{3}}{100 : \sqrt{3}} \rightarrow \text{set} \quad \begin{matrix} \text{Prim.} = 10000 \\ \text{Sec.} = 100 \end{matrix}$$


- (3) Zero sequence voltage input is to be supplied by three system P.Ts. Y/Open Delta connected; the open delta connected secondary are rated 1/3 of the phase-to-phase secondary voltage (Example: 10000 / 100: $\sqrt{3}$ / 100:3).

- 1
- Press "**Menu**" for access to the main menu with icons.
- 2
- Select "**System**" icon with pushbuttons "**Increase**" or "**Decrease**".
• Press "**Select**" for access.
- 3
- Select "**CT&PTs**".
• Press "**Select**" for access.
- 4
- Select "**Phase CT**".
• Press "**Select**" for access.

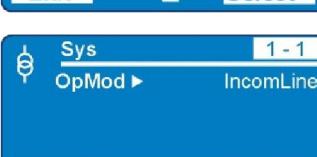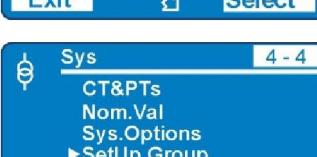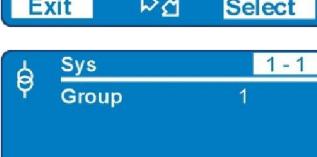- 5** 
- Select "**Prim.**" to modify the primary value of Phase CT, or press "**Decrease**" and select "**Sec.**" to modify the secondary value of Phase CT.
 - Press "**Modify**" to modify the parameter.
(if Password is request, see § Password).
- 6** 
- The value appear as bold figure.
 - Use pushbuttons "**Increase**" or "**Decrease**" to set the value.
 - Press "**Write**" to confirm the value
- 7** 
- The value is now set.
 - To set a new value return to the point "5".
 - Press "**Exit**".
- 8** 
- The display show "**Confirm the change?**".
 - Choose "**Yes**" to convalidate the changes.
 - Choose "**No**" to not confirm the changes.
 - After set confirmation (or non-confirmation) the display goes back to point "4".
- 9** 
- To modify the input quantities, select with pushbutton "**Decrease**", "**Nom.Val**".
 - Press "**Select**" for access.
- 10** 
- To set the input quantities see points "5-6-7-8".
- 11** 
- To modify the operation mode, select with pushbutton "**Decrease**", "**Sys.Options**".
 - Press "**Select**" for access.
- 12** 
- To set the operation mode press "**Select**", and see point "5-6-7-8".
- 13** 
- To select the Active Bank select and press "**setUp Group**".
- 14** 
- Press "**Select**" and with pushbuttons "**Increase**" or "**Decrease**" select the Bank to be Active.

14. Settings

Two complete banks of settings of the programmable variables are available in the "**SETTING**" menu.
Both "Group #1" and "Group #2" include the hereunder listed variables.

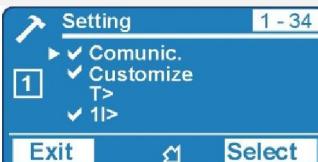- 1**  **1** Indicates the Setting Bank that is actually being modified.
 This symbol indicates that the function is enabled; symbol missing indicates that the function is disabled.

→ Comm.	Serial communication parameters
→ LCD	Human Machine Interface
→ T>	Thermal Image
→ 1I>	First
→ 2I>	Second
→ 3I>	Overcurrent Element
→ 1Io>	Third
→ 2Io>	First
→ 3Io>	Second
→ 1Is>	Earth Fault Element
→ 2Is>	Third
→ 1U>	First
→ 2U>	Second
→ 3U>	Overvoltage Element
→ 1U<	Third
→ 2U<	First
→ 3U<	Second
→ 1f>	Undervoltage Element
→ 2f>	Third
→ 3f>	First
→ 1f<	Second
→ 2f<	Underfrequency Element
→ 3f<	Third
→ 1Uo>	First
→ 2Uo>	Second
→ U1<	Zero Sequence Voltage Element
→ U2>	First
→ Wi	Second
→ TCS	Positive Sequence Undervoltage Element F27U1
→ IRF	Negative sequence Overvoltage Element F59U2 or F47
→ RT	Amount of Energy to reach the C/B maintenance level
→ BreakerFail	Setting variables for Trip Circuit Supervision
→ ExtReset	Internal Relay Fault
→ CB Mngn	Remote Trip
→ Oscillo	Setting variables for Breaker Failure detection
	Configuration for external reset input
	C/B command Local / Remote setting
	Setting variables for Oscillographic recording

14.1 - Modifying the setting of variables

To modify any variable setting by the keyboard proceed as follows:
(example: change setting of element “**1I>**”, from “**Is 4.000 In**” to “**Is 3.500 In**”)

- | | | | |
|---|---|---|--|
|  <p>1</p> | <ul style="list-style-type: none"> Press “Menu” for access to the main menu with icons. |  <p>6</p> | <ul style="list-style-type: none"> The value appear as bold figure. |
|  <p>2</p> | <ul style="list-style-type: none"> Select icon “Setting” by pushbuttons “Increase” or “Decrease”. Press “Select”. |  <p>7</p> | <ul style="list-style-type: none"> Set new values pushbuttons “Increase” or “Decrease” buttons Press “Write”. |
|  <p>3</p> | <ul style="list-style-type: none"> Select by pushbuttons “Increase” or “Decrease” the parameter “1I>”. Press “Select”. |  <p>8</p> | <ul style="list-style-type: none"> If the change of parameters is completed, press “Exit”. |
|  <p>4</p> | <ul style="list-style-type: none"> Select by buttons “Increase” or “Decrease” the menu “Oper.Levels”. Press “Select”. |  <p>9</p> | <ul style="list-style-type: none"> “Yes” confirm all changes. “No” voids all the changes. |
|  <p>5</p> | <ul style="list-style-type: none"> The arrow aside “Is” shows the parameter selected for changing Press “Modify”. If Password is request, see § Password |  <p>10</p> | <ul style="list-style-type: none"> The relay returns to point “4”. |

14.2. Password

The password is requested any time the user wishes to modify any password protected parameter (example "1I>" menu "Setting").

The factory default password is "**1111**".

The password is only modifiable with "MSCom2" software (see Manual "MSCom2").

When password is requested, proceed as follows:

- | | | | |
|--|--|--|---|
| | <ul style="list-style-type: none"> Use the key "Increase" and "Decrease" and set the first digit of password. | | <ul style="list-style-type: none"> Use the key "Increase" or "Decrease" to set the third digit. |
| | <ul style="list-style-type: none"> Press "Next" to validate and go to the next digit. | | <ul style="list-style-type: none"> Press "Next" to validate and go to the next digit. |
| | <ul style="list-style-type: none"> Use the key "Increase" or "Decrease" to set second digit. | | <ul style="list-style-type: none"> Use the key "Increase" or "Decrease" to set the fourth digit. |
| | <ul style="list-style-type: none"> Press "Next" to validate and go to the next digit. | | <ul style="list-style-type: none"> Press "Next" to validate and go to modify the next parameter. |
| | By key " Prev " go back to previous digit. | | |
| | The password validity expires 60 sec after the last setting modification or as soon as you go back to the main menu | | |
| | <ul style="list-style-type: none"> If set the incorrect password the display shows "! Wrong code". | | <ul style="list-style-type: none"> The display will repeat the initial interrogation |

14.3 – Menu: Comm. (Communication)

Options	→ BRLoc	38400	[9600 / 19200 / 38400 / 57600]
	→ BRRem	19200	[9600 / 19200 / 38400]


Node Address	→ Indir.	1	[1 ÷ 255]
---------------------	-----------------	---	-----------

14.3.1 – Description of variables

- BRLoc** : RS232 local (Front Panel) serial communication speed
- BRRem** : RS485 remote (Rear terminal block) serial communication speed
- Indir.** : Identification number for the connection on serial communication bus

14.3.2 – Front Panel serial communication port (RS232)

A D-Sub, pin female socket is available on Relay's front face for connection to the local RS232 serial communication line. Through this port - and by the interface program available from Microelettrica Scientifica S.p.A. (MSCom 2 for Windows XP or later) - it is possible to connect a Personal Computer to download all available information, operate any control and program the relay; the protocol used is "Modbus RTU".

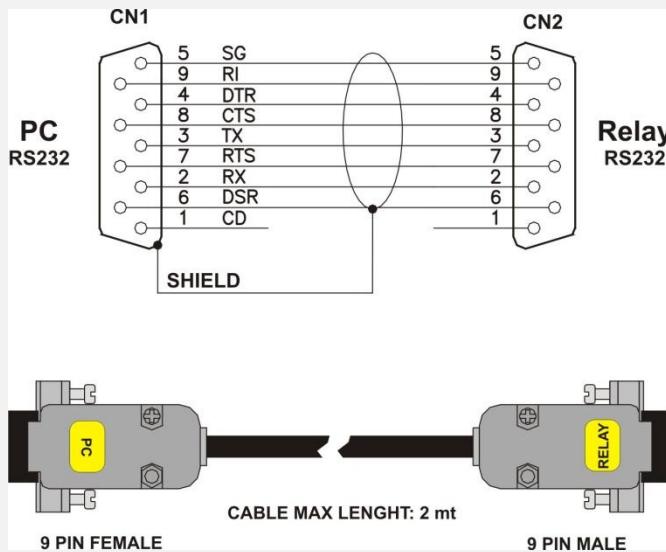14.3.3 – Cable for direct connection of Relay to Personal Computer14.3.4 – Main serial communication port (RS485)

From the Relay's back terminal board, a RS485 port is available for communication with SCADA system with Protocol Modbus RTU.

The communication interface allows to program all settings, operate all commands and download all information and records.

The physical connection can be via a normal pair of wires (RS485) or, on request, via fiber optic.

14.4 - Menu: **LCD** (Human Machine Interface - customize)

Options			
→ Lang	English	[English / Loc.Lang]	
→ Light	On	[Autom. / On]	
→ Row1	Imx	[Imx / Ia / Ib / Ic / Io / I1 / I2 / Frq / Uan / Ubn /	
→ Row2	Ia	Ucn / Uab / Ubc / Uca / Uo / V1 / V2 / PhA / PhB /	
→ Row3	Ib	PhC / PhO / W / VAr / VA / Cos / Tem / Wir / LocRm	
→ Row4	Uab	/ Empty]	
→ Row5	W		
→ Leds	4	[4 / 11 / 18 / 25 / 32 / 39 / 46 / 53]	

14.4.1 – Description of variables

<input type="checkbox"/> Lang	: Set Language
<input type="checkbox"/> Light	: Set Display backlight
<input type="checkbox"/> Row1	: Choosing the variable to be displayed in the rows on main menu
<input type="checkbox"/> Row2	:
<input type="checkbox"/> Row3	:
<input type="checkbox"/> Row4	:
<input type="checkbox"/> Row5	:
<input type="checkbox"/> Leds	: Number of led used

This menu allows to customize the Language and the Display's backlight.

The standard languages are English and French. On request, other languages can be loaded (Italian, German, etc..).

The Display backlight can be programmed always on "ON" or switched-on "Automatically" for a few second at any operation of the keyboard "Auto".

14.4.2 - Example: set Local Language.

- | | | | |
|---|--|--|--|
|  | <ul style="list-style-type: none"> Press “Menu” for access to the main menu with icons. |  | <ul style="list-style-type: none"> Press “Modify”. Select “Loc.Lang”. Press “Write” Press “Exit” |
|  | <ul style="list-style-type: none"> Select icon “Setting” by pushbuttons “Increase” or “Decrease”. Press “Select”. |  | <ul style="list-style-type: none"> “Yes” confirms all changes. “No” voids all changes. |
|  | <ul style="list-style-type: none"> Select “Group 1” or “Group 2” Select “LCD” Select “Options”. Press “Select”. |  | <ul style="list-style-type: none"> After set confirmation the display shows “Please Wait” |
|  | <ul style="list-style-type: none"> Select “Lang” Press “Modify”. If Password is requested, see § Password |  | |

14.5 - Function: **T>** (Thermal Image F49)

Status	→ Enab.	No	[No / Yes]
Options	→ OPMOD	I1 I2	[I1 I2 – Imax]
Oper.Levels	→ Tal	10	%Tn [10 ÷ 100] step 1 %Tn
	→ Is	0.500	[0.5 ÷ 1.5] step 0.01
	→ Kt	1.000	min [1 ÷ 600] step 0.01 min

14.5.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- OPMOD** : Operation Mode
- Tal** : Temperature prealarm level
- Is** : Continuous admissible current
- Kt** : Warming-up Time Constant of the load

14.5.2 - Trip and Alarm

The algorithm compares the amount of heat accumulated "T" ($\equiv i^2 \cdot t$) to the steady state amount of heat "Tn" corresponding to continuous operation of the rated current "In".

When the ratio "T/Tn" reaches the level set for Thermal Alarm "Tal" or the max allowed heating, the relay trips accordingly

14.5.2.1 - Operation mode "Imax"

With this option, the largest of the three phase currents measured is used to compute the Thermal Image:

$$I = \text{MAX}(I_a, I_b, I_c)$$

14.5.2.2 - Operation mode "I1-I2"

With this option, a composition of Positive and Negative Sequence components of the current measured is used to compute the Thermal Image:

$$I = \sqrt{(I_1)^2 + 3(I_2)^2}$$

14.5.2.3 - Trip time of the Thermal Image Element


The trip time of the Thermal Image Element is a function of the current "I" flowing into the load and depends on its warming-up Time Constant "Kt", on the previous thermal status "Ip" and on the maximum admissible continuous current "Is" according to the equation:

$$t = Kt \cdot \ell_n \frac{\left(\frac{I}{In}\right)^2 - \left(\frac{Ip}{In}\right)^2}{\left(\frac{I}{In}\right)^2 - \left(\frac{Is}{In}\right)^2}$$

- | | |
|-----------|--|
| t | = Time to relay tripping |
| Kt | = Load thermal time constant |
| I | = Actual load current |
| In | = Load rated current |
| Is | = Continuous admissible current |
| Ip | = Steady state current before the overload |
| ℓn | = Natural Logarithm |

When the heating exceeds the set alarm level "Tal" or the max. allowed level ("I" > "Is" for the time "t") the output relays programmed for these function will be operated. Reset will take place when the heating will drop below 99% of the trip level.

14.5.2.4 – Thermal Image Curves (TU1024 Rev.1)

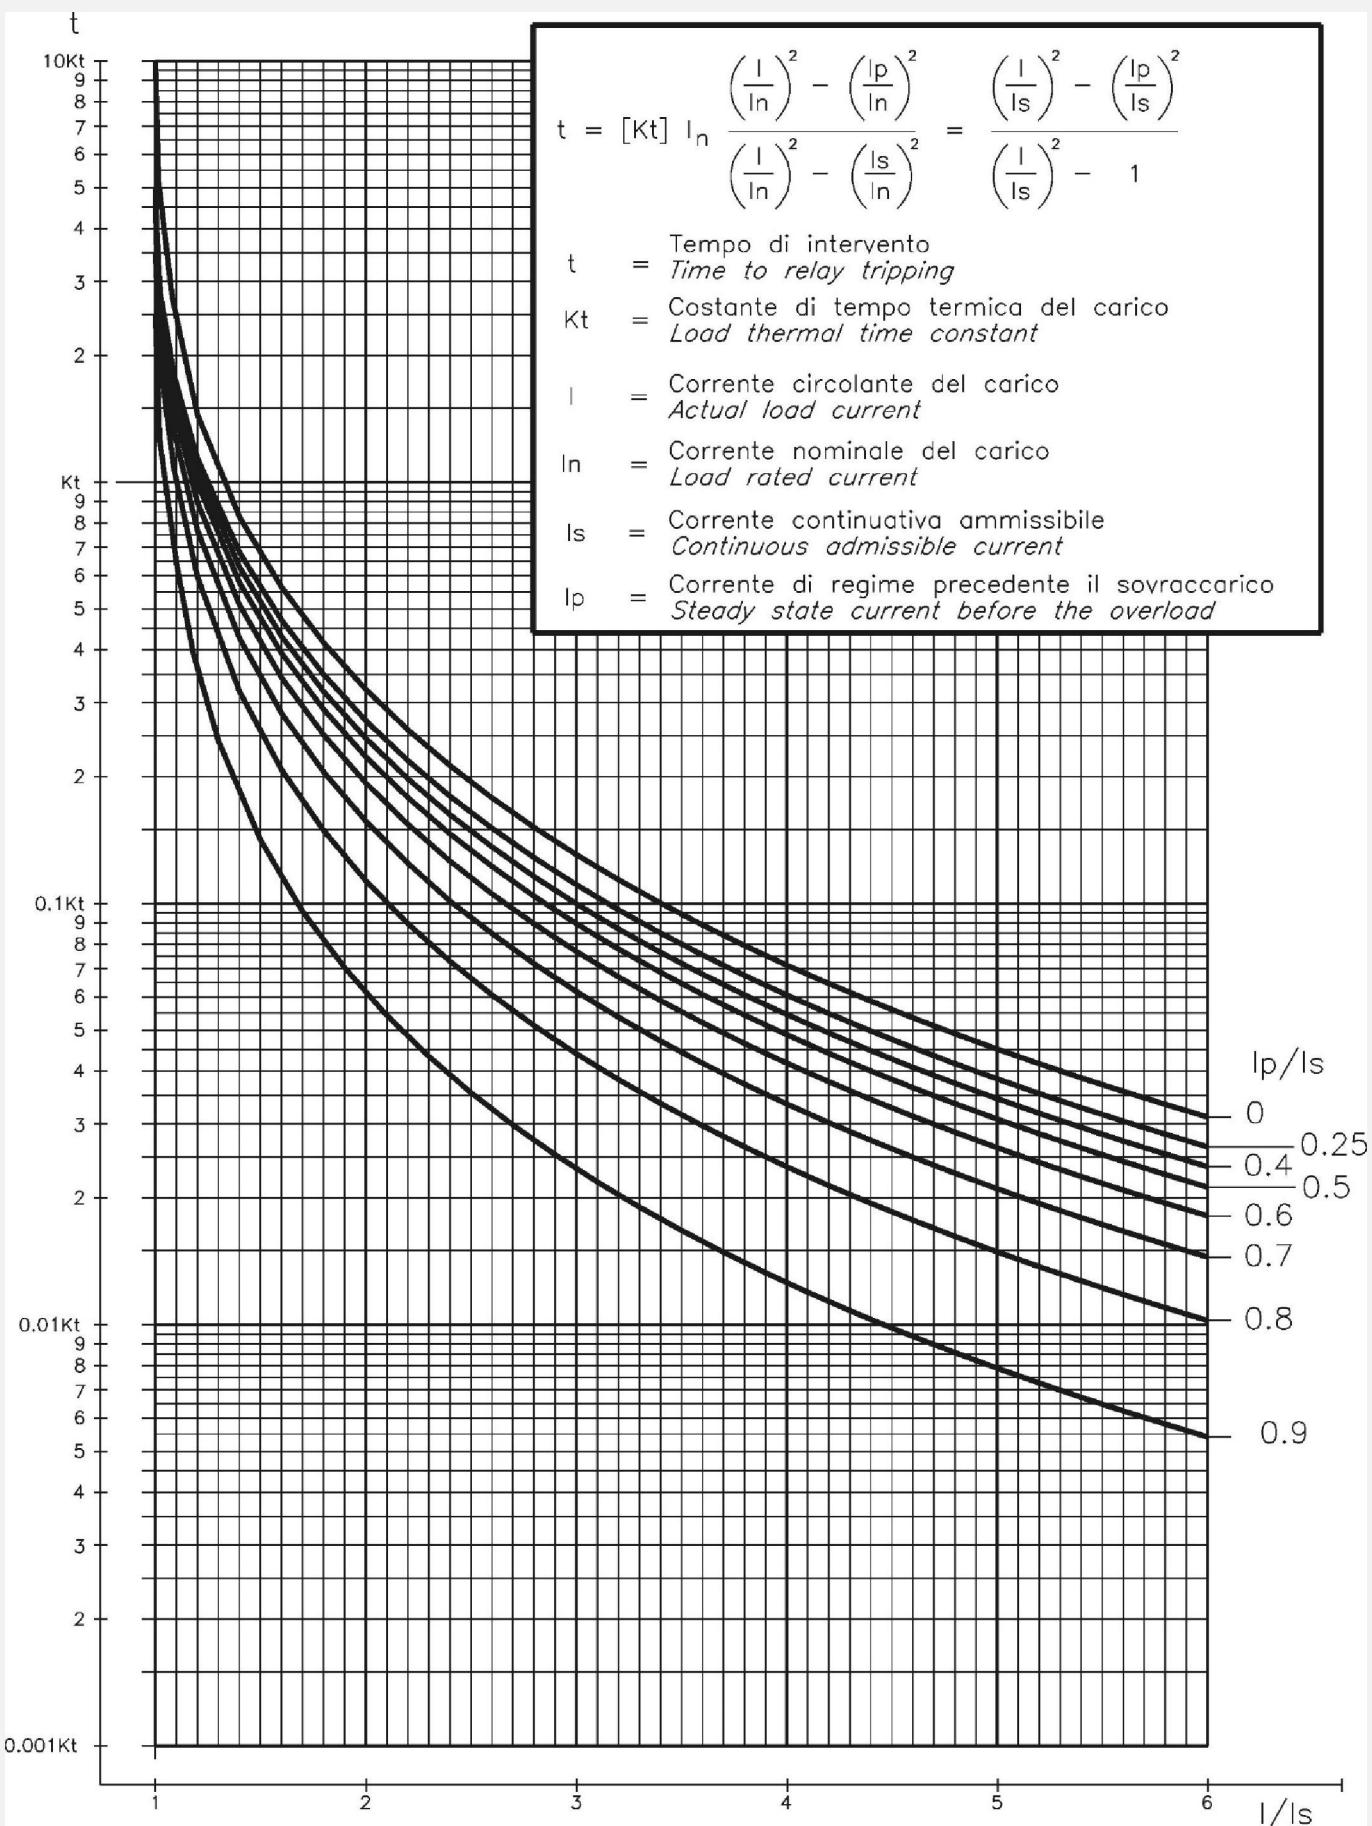

14.6 - Function: **1I>** (First Overcurrent Element F50/51)

Status	→ Enab.	No	[No / Yes]
Options	→ f(t)	Type - D	[D / A / B / C / I / VI / EI / MI / SI]
	→ tBI	Off	[Off / 2tBO]
	→ f(a)	Disable	[Disable / Sup / Dir]
	→ f(U)	Disable	[Disable / Enable]
Oper. Levels	→ Is	4	In (0.1÷4) step 0.01 In °
	→ a	359	step 1 (0. ÷359)
Timers	→ ts	100	s (0.02÷100) step 0.01 s
	→ tBO	0.75	step 0.01 s (1)

14.6.1 - Description of variables

□ Enab.	: Function enabling (No = Disable / Yes = Enable)
□ f(t)	: Operation characteristic (Time/Current curve): (D) = Independent definite time (A) = IEC Inverse Curve type A (B) = IEC Very Inverse Curve type B (C) = IEC Extremely Inverse Curve type C (I) = IEEE Inverse Curve (VI) = IEEE Very Inverse Curve (EI) = IEEE Extremely Inverse Curve (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve
□ tBI	: Blocking input reset time Off = Permanent block 2tBO = Set 2xtBO.
□ f(a)	: Operation mode: Disable = Non Directional Sup. = Directional Supervision Dir. = Total Directional
□ f(U)	: Voltage restraint
□ Is	: Minimum operation level
□ a	: Reference phase current displacement angle for Directional operation
□ ts	: Trip time delay
□ tBO	: Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

14.6.2 - Algorithm of the time current curves

The Time Current Curves are generally calculated with the following equation

$$(1) \quad t(I) = \left[\frac{A}{\left(\frac{I}{I_s} \right)^a - 1} + B \right] \cdot K \cdot T_s + T_r \quad \text{where}$$

$t(I)$ = Actual trip time delay when the input current equals "I"

I_s = Set minimum pick-up level

$$K = \left(\frac{A}{10^a - 1} + B \right)^{-1}$$

$$T_s = \text{Set time delay: } t(I) = T_s \quad \text{when} \quad \frac{I}{I_s} = 10$$

t_r = Operation time of the output relay on pick-up.

The parameters A, B and a have different values for the different Time Current Curves.

Curve Name	Curve Identifier	A	B	a
IEC A Inverse	A	0.14	0	0.02
IEC B Very Inverse	B	13.5	0	1
IEC C Extremely Inverse	C	80	0	2
IEEE Moderate Inverse	MI	0.0104	0.0226	0.02
IEEE Short Inverse	SI	0.00342	0.00262	0.02
IEEE Very Inverse	VI	3.88	0.0963	2
IEEE Inverse	I	5.95	0.18	2
IEEE Extremely Inverse	EI	5.67	0.0352	2

For the IEC curves, being $B = 0$, the Time/Current equation (1), becomes:

$$(1') \quad t(I) = \frac{(10^a - 1)T_s}{\left(\frac{I}{I_s} \right)^a - 1} + t_r = \frac{Kt}{\left(\frac{I}{I_s} \right)^a - 1} + t_r$$


Where $Kt = (10^a - 1)T_s$ is the time multiplier

When " $f(t) = D$ " is programmed, the trip time delay is Definite and independent from the current excess " $t = ts$ ".

The maximum measuring current is "40xIn" for phase elements and "10xOn" for the neutral elements.


Trip takes place when the current measured exceeds (no matter how much) the set level " I_s " for the set time " ts ".

14.6.3 - IEC Curves

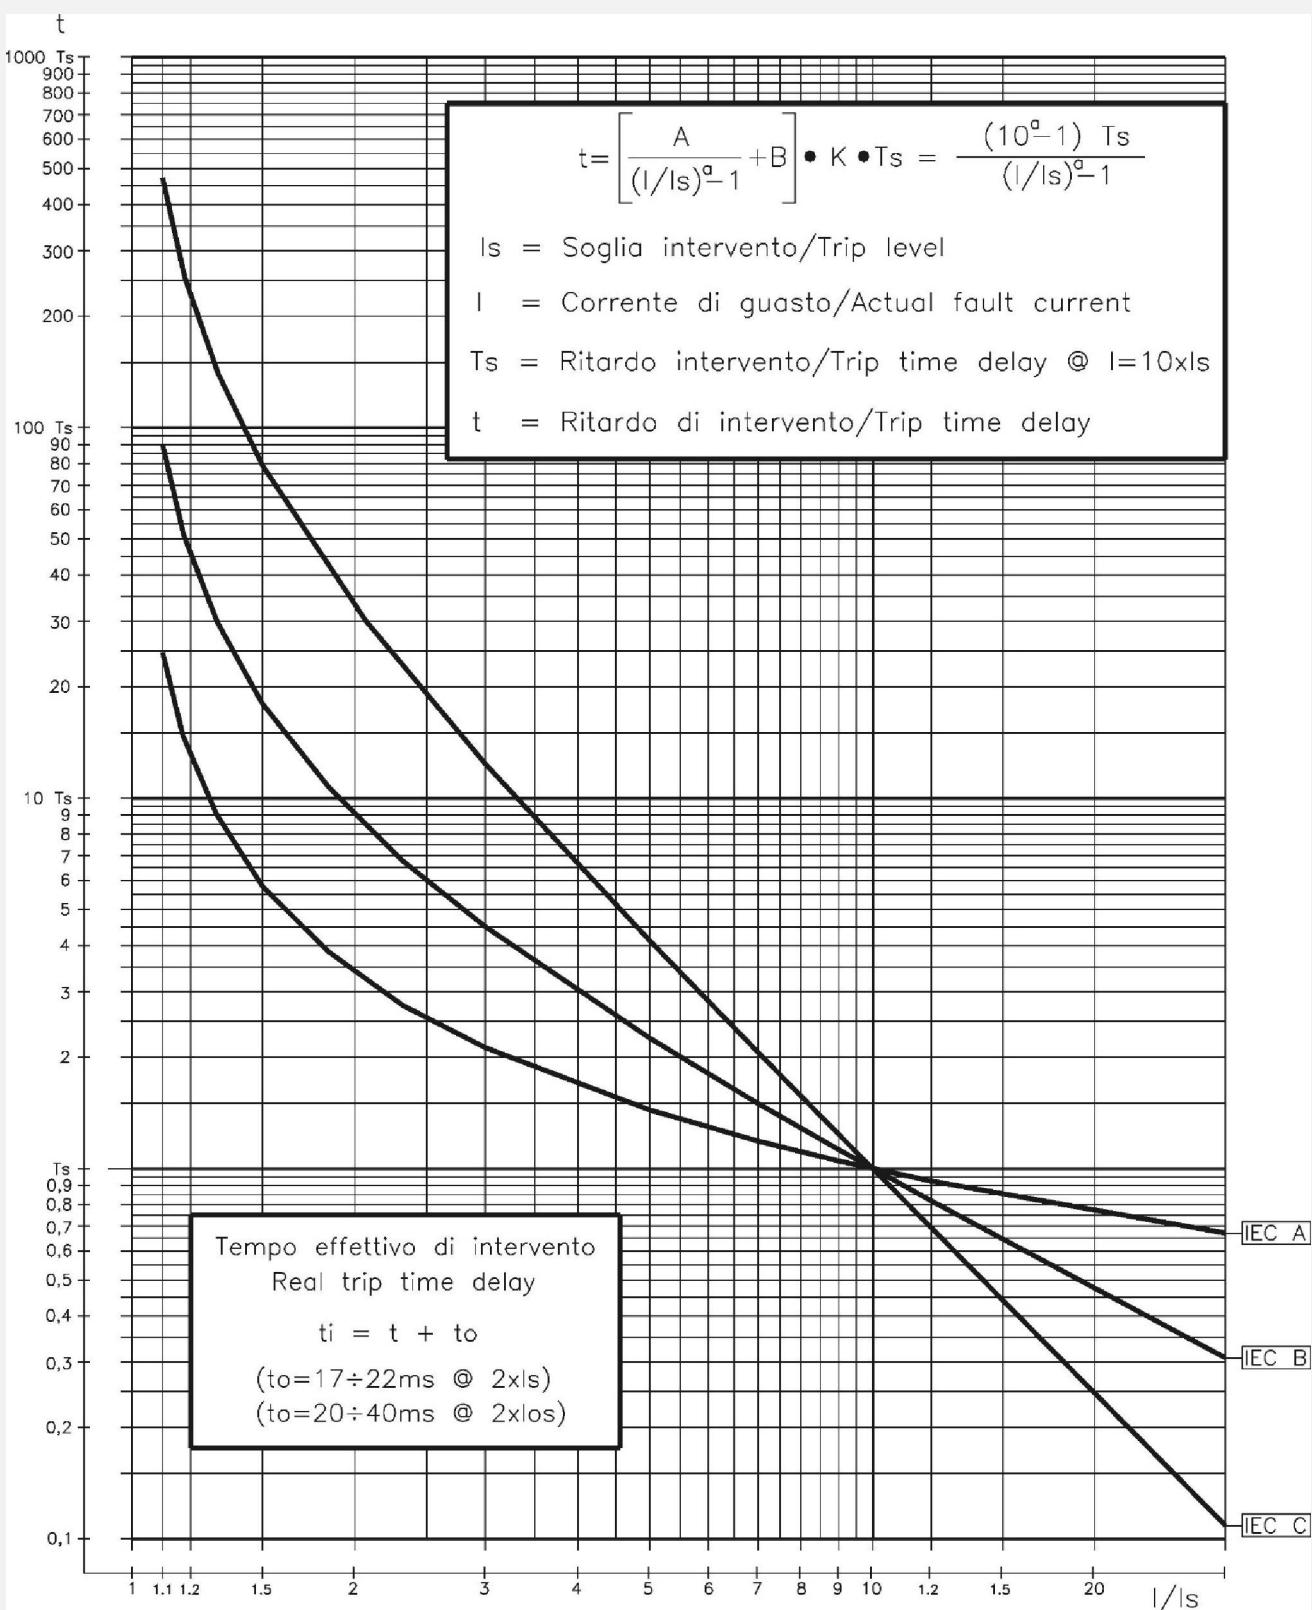

Curve Type	A	B	K	a
IEC A	0.14	0	0.336632	0.02
IEC B	13.5	0	0.666667	1
IEC C	80	0	1.2375	2

14.6.4 - IEEE Curves

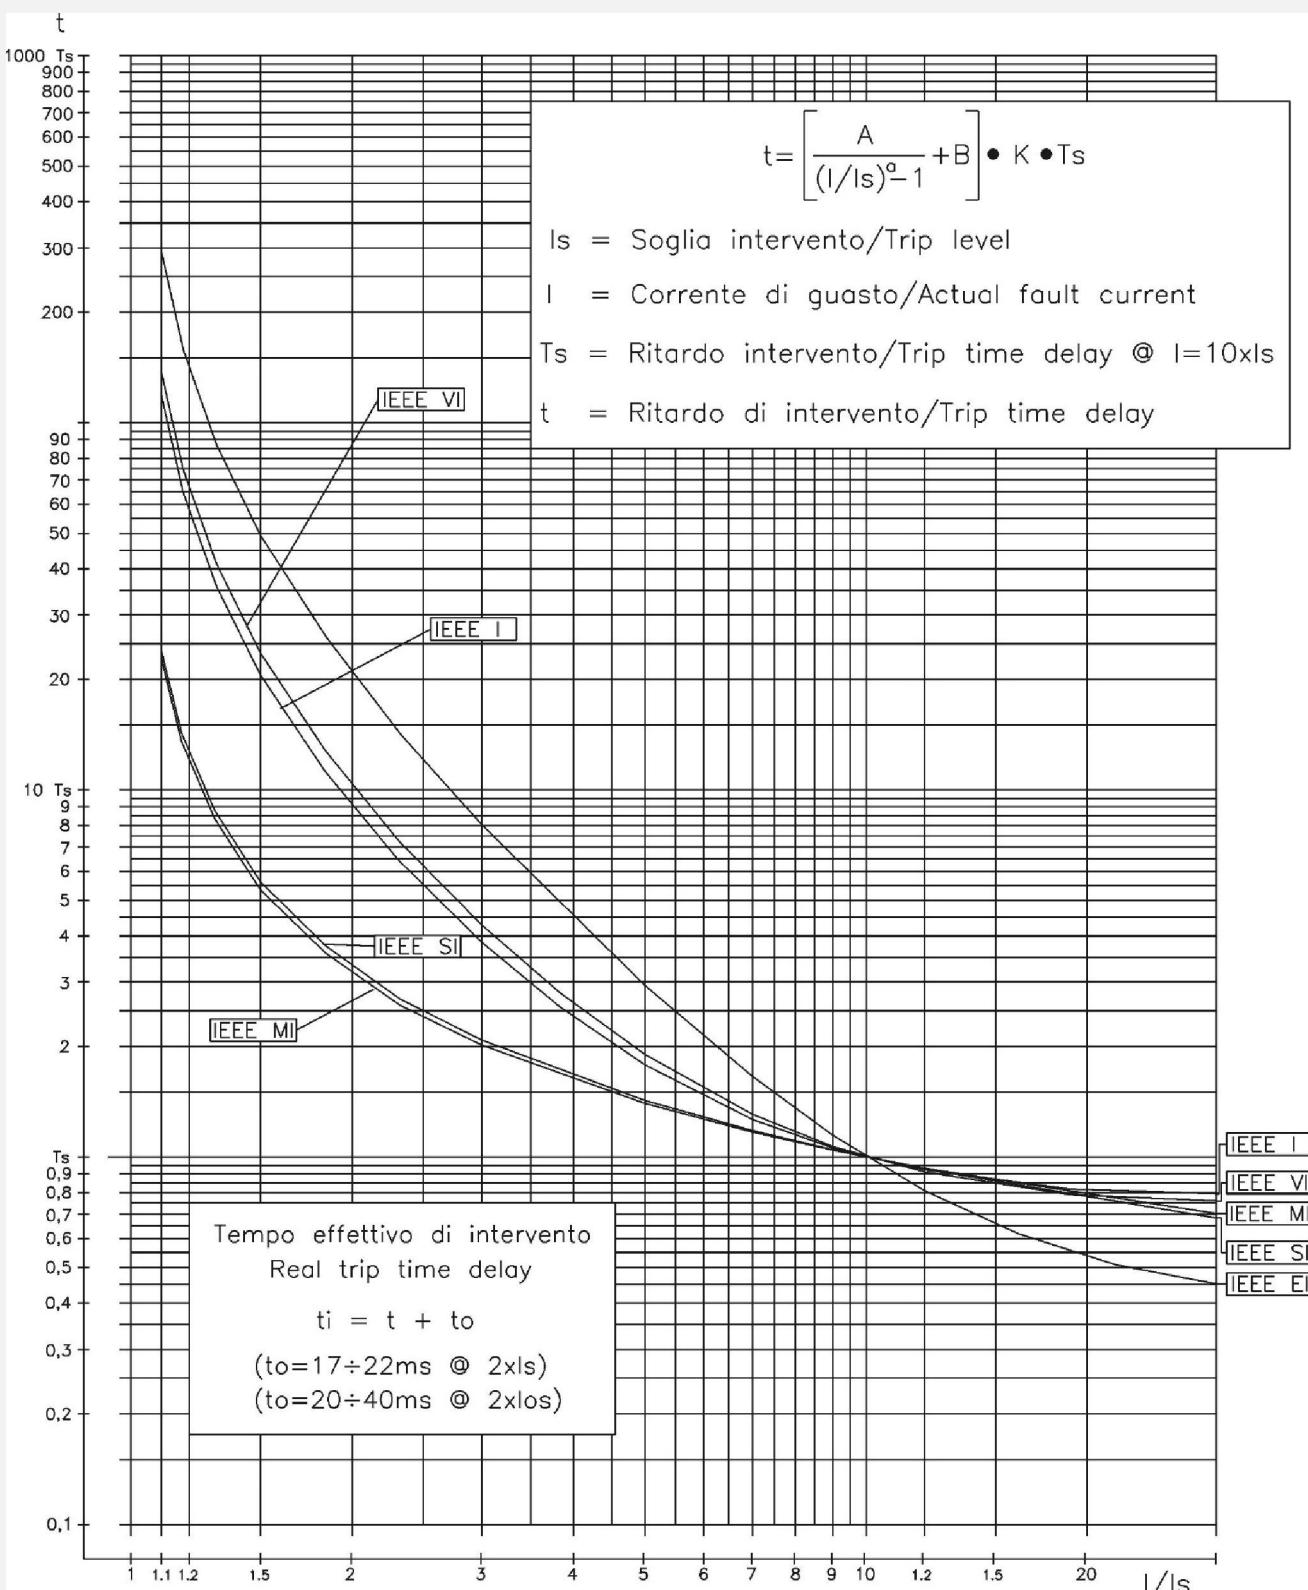

Curve Type	A	B	K	a
MI=IEEE Moderate Inv.	0.0104	0.0226	4.110608	0.02
SI= IEEE Short Inv.	0.00342	0.00262	13.30009	0.02
VI= IEEE Very Inv.	3.88	0.0963	7.380514	2
I= IEEE Inverse	5.95	0.18	4.164914	2
EI= IEEE Extremely Inv.	5.67	0.0352	10.814	2

Max. "I" Phase = 40xIn
Max. "I" Neutral = 10xOn


14.6.5 – Operation of the phase Overcurrent Elements in function of variable "f(a)"

On each phase the relay measures the current "Ix" and its displacement " φ_x " from the relevant phase-to-neutral voltage "Ex".

Different operation modes are possible according to the programming of the variable "f(a)".

- I_s = Minimum operation current level.
- a = Operation reference angle (phase x ; $x = A, B, C$).
- I_x = Measured input current (largest among the three phase currents I_A, I_B, I_C).
- φ_x = Phase displacement of current "Ix" from phase-to-neutral "Ex" ($X = A, B, C$).
- I_{dx} = Component of "Ix" on the direction "a".


A) Set f(a) = Disab.

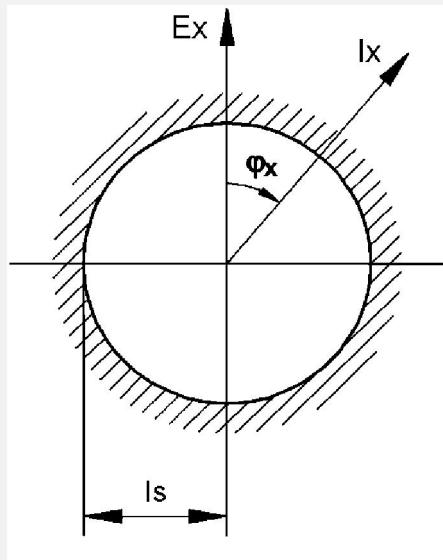

$$I_x > [I_s]$$

The overcurrent element operates independently from the current direction.

B) Set f(a) = Sup.

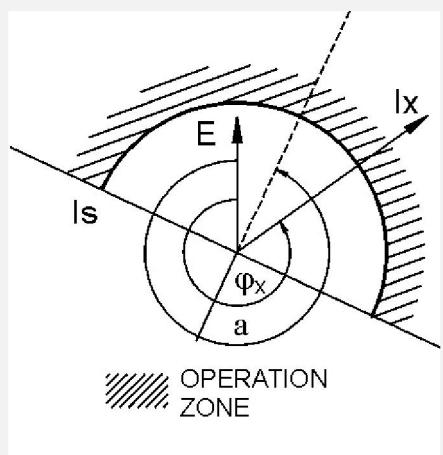


The Overcurrent element only supervises the direction of the current:

the operation conditions are:

- Input voltage above 1-2% of the rated input value.
- Input current above the set level: $I_x > [I_s]$
- Phase displacement " φ_x " within $\pm 90^\circ$ from the reference direction "a".

$$(a - 90^\circ) < \varphi_x < (a + 90^\circ)$$

C) Set $f(a) = \text{Dir.}$

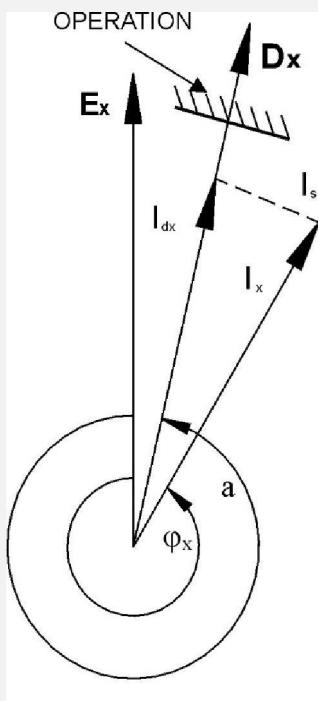

The overcurrent element operates in a real directional mode measuring the component "Idx" of the input current in the reference direction "a" ($x = A, B, C$).

$$I_{dA} = I_A \cos(\varphi_A - a) \quad I_{dB} = I_B \cos(\varphi_B - a) \quad I_{dC} = I_C \cos(\varphi_C - a)$$


The overcurrent starts to operate when the component "Idx" of the input current in the direction "Dx" (vessor displaced of " a° " from the phase-to-neutral voltage "Ex") exceeds the set level "Is".

$$I_{dx} = I_x \cos(\varphi_x - a) \geq I_s$$

In details:

- When $\varphi_x = a$: $I_{dx} = I_x \rightarrow \text{operation if } I_x > I_s$
- When $(\varphi_x - a) = 90^\circ$: $I_{dx} = 0 \rightarrow \text{no operation}$
- When $(\varphi_x - a) > 90^\circ$: I_{dx} opposite to $Dx \rightarrow \text{no operation}$

The operation is practically independent from the voltage as low as 1-2% of rated value.

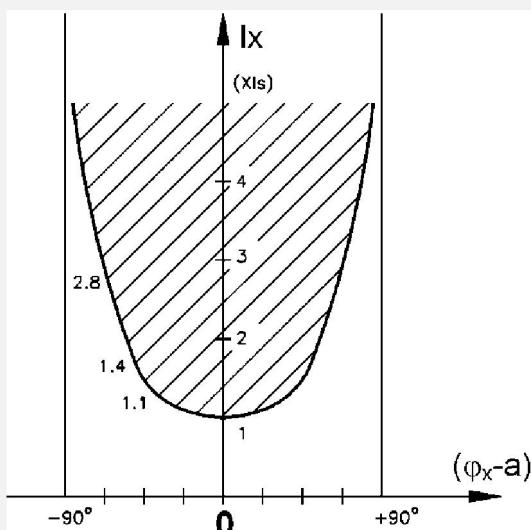


Recommended Reference angles for different applications:

- Measurement of resistive component of current (active power) :
Direct : $a = 0^\circ$ - Reverse : $a = 180^\circ$
- Directional phase fault detection:
Direct : $a = 300^\circ (60^\circ \text{ lag})$ - Reverse : $a = 120^\circ$
- Measurement of inductive reactive component:
Direct : $a = 270^\circ (90^\circ \text{ lag})$ - Reverse : $a = 90^\circ$
- Measurement of capacitive reactive component:
Direct : $a = 90^\circ (90^\circ \text{ lead})$ - Reverse: $a = 270^\circ$

14.6.6 – Operation of the Overcurrent Element with Voltage Control $f(U)$

When the "Voltage Restraint" function is enabled ($F(U)=\text{Enable}$), the set minimum pick-up level " I_s " of the overcurrent elements, changes proportionally to the smallest of the input phase-to-phase voltages:
 $I_s = F(U)$.

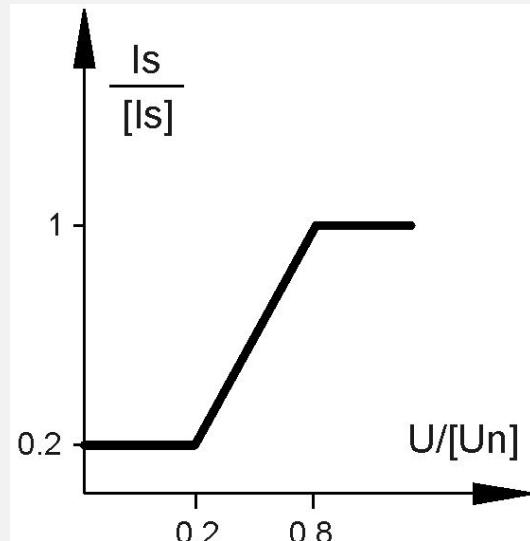

$$\frac{I_s}{[I_s]} = \frac{\text{Actual pick - up level}}{[\text{Set pick - up level}]}$$

$$\frac{U}{[Uns]} = \frac{\text{Actual input voltage}}{[\text{Set rated input voltage}]}$$

the algorithm uses the smallest among the ratios $\frac{Ex \cdot \sqrt{3}}{[Uns]} (x = A, B, C)$

Practically, between 0.2 Uns and 0.8 Uns, the trip level of the Overcurrent element variates according to the equation:

$$\frac{I_s}{[I_s]} = \frac{0.8}{0.6} \cdot \left(\frac{U}{[Uns]} - 0.8 \right) + 1$$

Below 0.2 [Un] $\frac{I_s}{[I_s]} = 0.2$

Above 0.8 [Un] $\frac{I_s}{[I_s]} = 1$

14.6.7 – Blocking Logic (BO-BI)

For each Protection Function it is possible to activate a Blocking Logic allowing for inhibiting their operation by external signals supplied to the Digital Input.

14.6.7.1 – Output Blocking signal "BO"

All the protection functions that can be programmed to operate in the blocking logic mode, element, have an instantaneous element (beside the time delayed) which is operated as soon as the controlled quantity exceeds the set trip level ($I > [Is]$ for current, etc..) and is instantaneously reset when the input quantity drops below the reset level (normally 0.95 Is).

The instantaneous element can control one of the user programmable output relays that, by its contacts, makes the signal available for blocking an external element (BO = Blocking Output).

In case, "tBO" sec after the set trip time "ts" has expired, the Protection function is still in operation (current above trip level), the Blocking Output relay (instantaneous element) is anyhow reset to eventually remove the Blocking signal from a back-up protection.

14.6.7.2 – Blocking Input "BI"

For all the functions controllable by the Blocking Logic, it is possible to inhibit the time delayed tripping by an external signal that activates a Digital Input programmed for this functionality.

The programmed Digital Input gets activated by an external cold contact closing across its terminals.

With the variable "tBI" set to "OFF" (tBI=OFF), the tripping of the delayed function is blocked as long as the Blocking Input signal is present at the terminals of the Digital Input.

With the variable "tBI" set to "2xtBI" (tBI=2xtBI), 2xtBI seconds after the set trip time delay of the function has expired the blocking input is anyhow ignored and the function enabled to trip.

14.6.8 - Automatic doubling of Overcurrent thresholds on current inrush

For some of the phase Overcurrent functions it is possible to have the set trip level [Is] automatically doubled when strong inrush current is detected.

If at circuit Breaker switch-on (i.e. when the input current rises from zero to a minimum measurable value) the current increases from 0 to 1.5 times the rated value [I_{in}] in less than 60ms, the set minimum pick-up level [Is] is dynamically doubled ($[Is] \rightarrow [2Is]$) and keeps this value until the input current drops below 1.25 xI_{in} or the set time [$t2xI$] has elapsed.

This functionality is very useful to avoid spurious tripping of the instantaneous, or short-time delayed Overcurrent elements, that could be experienced at switch-on of reactive loads like Transformer or Capacitors.

14.7 – Function: **2I>** (Second Overcurrent Element F50/51)

Stats	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a)	Disable	[Disable / Sup / Dir]
	→ 2xI	Disable	[Disable / Enable]
	→ f(U)	Disable	[Disable / Enable]
Oper. Levels	→ Is	40	In o (0.1÷40)
	→ a	359	step step 1 In °
Timers	→ ts	100	s (0.02÷100)
	→ tBO	0.75	s (0.05÷0.75)
	→ t2xI	100	s (0.02÷100)
	→ td2xI	0.06	s fixed

14.7.1 – Description of variables

<input type="checkbox"/> Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/> tBI	:	Blocking input reset time <i>Off</i> = Permanent block <i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/> f(a)	:	Operation mode: <i>Disable</i> = Non Directional <i>Sup.</i> = Directional Supervision <i>Dir.</i> = Total Directional
<input type="checkbox"/> 2xI	:	Automatic doubling of trip level on inrush
<input type="checkbox"/> f(U)	:	Voltage restraint
<input type="checkbox"/> Is	:	Minimum operation level
<input type="checkbox"/> a	:	Reference phase current displacement angle for Directional operation
<input type="checkbox"/> ts	:	Trip time delay
<input type="checkbox"/> tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.
<input type="checkbox"/> t2xI	:	Maximum time of automatic threshold doubling on inrush
<input type="checkbox"/> td2xI	:	Time for calculation of current rate of rise.

14.8 - Function: **3I>** (Third Overcurrent Element F50/51)

Status	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a)	Disable	[Disable / Sup / Dir]
	→ 2xI	Disable	[Disable / Enable]
Oper. Levels	→ Is	40	In ◦ (0.1÷40) step
	→ a	359	step 1 In ◦
Timers	→ ts	100	s (0.02÷100) step
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s
	→ t2xI	100	s (0.02÷100) step 0.01 s
	→ td2xI	0.06	s fixed

14.8.1 - Description of variables

<input type="checkbox"/> Enab.	: Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/> tBI	: Blocking input reset time <i>Off</i> = Permanent block <i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/> f(a)	: Operation mode: <i>Disable</i> = Non Directional <i>Sup.</i> = Directional Supervision <i>Dir.</i> = Total Directional
<input type="checkbox"/> 2xI	: Automatic doubling of trip level on inrush
<input type="checkbox"/> Is	: Minimum operation level.
<input type="checkbox"/> a	: Reference phase current displacement angle for Directional operation
<input type="checkbox"/> ts	: Trip time delay
<input type="checkbox"/> tBO	: Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.
<input type="checkbox"/> t2xI	: Maximum time of automatic threshold doubling on inrush
<input type="checkbox"/> td2xI	: Time for calculation of current rate of rise

14.9 - Function: **1Io>** (First Earth Fault Element 50N/51N)

Status	→ Enab.	No	[No / Yes]
Options	→ f(t)	Type - D	[D / A / B / C / I / VI / EI / MI / SI]
	→ tBI	Off	[Off / 2tBO]
	→ f(a_o)	Disable	[Disable / Dir]
Oper. Levels	→ Is	0.01	On (0.01÷4.00)
	→ Vo	0	%Un (0÷20)
	→ a_o	0	◦ (0÷359)
	→ a_z	0	◦ (0÷359)
Timers	→ ts	100	s (0.02÷100)
	→ tBO	0.75	s (0.05÷0.75)

On = Rated primary current of CTs or of the current Tore CT.

14.9.1 - Description of variables


<input type="checkbox"/> Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/> f(t)	:	Operation characteristic (Time/Current curve): (D) = Independent definite time (A) = IEC Inverse Curve type A (B) = IEC Very Inverse Curve type B (C) = IEC Extremely Inverse Curve type C (I) = IEEE Inverse Curve (VI) = IEEE Very Inverse Curve (EI) = IEEE Extremely Inverse Curve (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve
<input type="checkbox"/> tBI	:	Blocking Input reset time Off = Permanent block 2tBO = Set 2xtBO.
<input type="checkbox"/> f(a_o)	:	Operation mode: Disable = Non Directional Dir. = Total Directional
<input type="checkbox"/> Is	:	Minimum operation level
<input type="checkbox"/> Vo	:	Minimum residual voltage level for enabling the directional operation
<input type="checkbox"/> a_o	:	Reference Zero Sequence current displacement angle for Directional operation
<input type="checkbox"/> a_z	:	Trip sector amplitude
<input type="checkbox"/> ts	:	Trip time delay
<input type="checkbox"/> tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay."tBO" is also the trip time delay of the Breaker Failure function.

14.9.2 – Operation mode of the Earth Fault elements programming the variable "f(a_o)"

The relay measures the current "3Io" and the input voltage "3Vo" of the Earth Fault input and the displacement " ϕ_o " of the current from the voltage. Different operation modes are programmable by the variable "f(a_o)".

- I_s** = Set minimum pick-up residual current "3Io".
- V_o** = Set minimum residual voltage (3Vo) to enable operation.
- a_o** = Set displacement of the reference current direction.
- 3Io** = Earth Fault current.
- 3Vo** = Earth Fault voltage.
- ϕ_o = Io/Vo phase displacement.
- a_z** = Angle defining the directional operation area around the reference direction.

The Directional Earth Fault element can operate in two different modes:

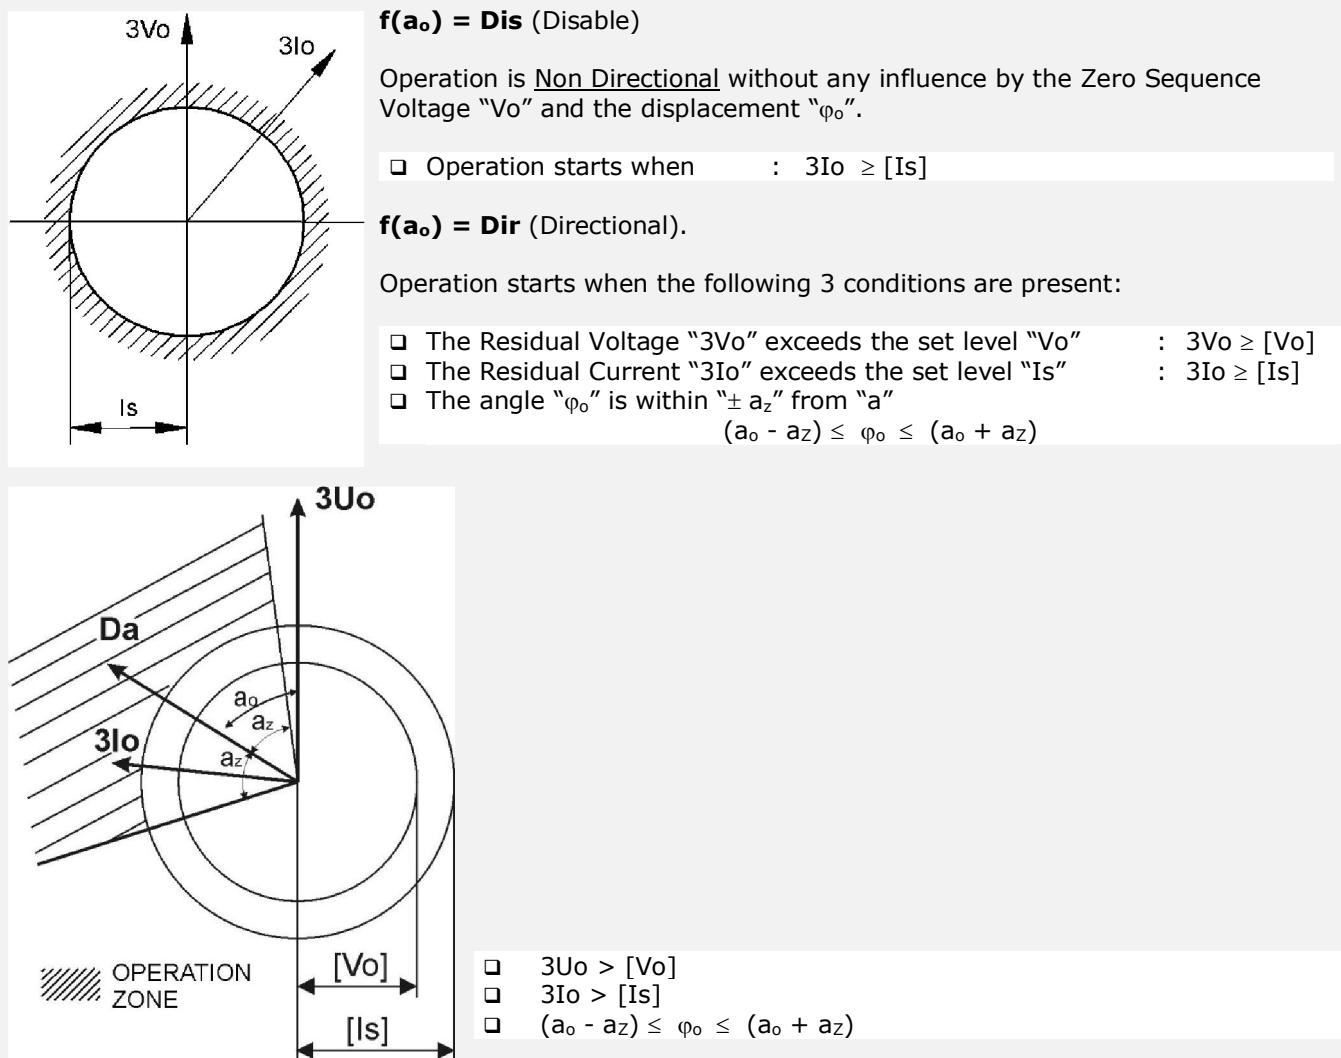

14.10 - Function: **2Io>** (Second Earth Fault Element 50N/51N)

Status	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a_o)	Disable	[Disable / Dir]
Oper. Levels	→ Is	0.01	On (0.01÷9.99) %Un (0÷20)
	→ Vo	0	step 0.01 On step 0.1 %Un
	→ a_o	0	• (0÷359) step 1 °
	→ a_z	0	• (0÷359) step 1 °
Timers	→ ts	100	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

14.10.1 - Description of variables

<input type="checkbox"/> Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/> tBI	:	Blocking Input reset time <i>Off</i> = Permanent block <i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/> f(a_o)	:	Operation mode: <i>Disable</i> = Non Directional <i>Dir.</i> = Total Directional
<input type="checkbox"/> Is	:	Minimum operation level
<input type="checkbox"/> Vo	:	Minimum residual voltage level for enabling the directional operation
<input type="checkbox"/> a_o	:	Reference Zero Sequence current displacement angle for Directional operation
<input type="checkbox"/> a_z	:	Trip sector amplitude
<input type="checkbox"/> ts	:	Trip time delay
<input type="checkbox"/> tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

14.11 - Function: **3Io>** (Second Earth Fault Element 50N/51N)

Status	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a_o)	Disable	[Disable / Dir]
Oper. Levels	→ Is	0.01	On (0.01÷9.99) %Un (0÷20)
	→ Vo	0	step 0.01 On step 0.1 %Un
	→ a_o	0	◦ (0÷359) ◦ (0÷359)
	→ a_z	0	step 1 ◦ step 1 ◦
Timers	→ ts	100	s (0.02÷100) tBO (0.05÷0.75)
			step 0.01 s step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

14.11.1 - Description parameters

<input type="checkbox"/> Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/> tBI	:	Blocking Input reset time <i>Off</i> = Permanent block <i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/> f(a_o)	:	Operation mode: <i>Disable</i> = Non Directional <i>Dir.</i> = Total Directional
<input type="checkbox"/> Is	:	Minimum operation level
<input type="checkbox"/> Vo	:	Minimum residual voltage level for enabling the directional operation
<input type="checkbox"/> a_o	:	Reference Zero Sequence current displacement angle for Directional operation
<input type="checkbox"/> a_z	:	Trip sector amplitude
<input type="checkbox"/> ts	:	Trip time delay
<input type="checkbox"/> tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

14.12 - Function: **1Is>** (First Negative Sequence Element F46)

Status	→ Enab.	No	[No / Yes]
Options	→ t(t)	Type-D	[D / A / B / C / I / VI / EI / MI / SI /]
	→ tBI	Off	[Off / 2tBO]
Oper. Levels	→ Is	4	In (0.1÷4) step 0.01 In
Timers	→ ts	100	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

14.12.1 - Description of variables

<input type="checkbox"/> Enab.	: Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/> f(t)	: Operation characteristic (Time/Current curve): (D) = Independent definite time (A) = IEC Inverse Curve type A (B) = IEC Very Inverse Curve type B (C) = IEC Extremely Inverse Curve type C (I) = IEEE Inverse Curve (VI) = IEEE Very Inverse Curve (EI) = IEEE Extremely Inverse Curve (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve
<input type="checkbox"/> tBI	: Blocking Input reset time <i>Off</i> = Permanent block <i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/> Is	: Minimum operation level
<input type="checkbox"/> ts	: Trip time delay
<input type="checkbox"/> tBO	: Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

14.12.2 - Time/Current operation of the first Current Unbalance element "f(t)"

The relay measures the Negative Sequence component "I2" of the input current.
The Time/Current curves can be selected by programming the variable "f(t)":

- $f(t) = D$ Independent definite time operation.
- $f(t) = I, VI, EI, MI, SI, A, B, C$ Dependent Inverse time operation

14.13 - Function: **2Is>** (Second Negative Sequence Element F46)

Status	→ Enab.	No	[No / Si]			
Options	→ tBI	Off	[Off / 2tBO]			
Oper. Levels	→ Is	4	In (0.1÷4)	step	0.01	In
Timers	→ ts	100	s (0.02÷100)	step	0.01	s
	→ tBO	0.75	s (0.05÷0.75)	step	0.01	s

14.13.1 - Description of variables

- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **tBI** : Blocking Input reset time
Off = Permanent block
2tBO = Set 2tBO.
- **Is** : Minimum operation level
- **ts** : Trip time delay
- **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

14.14 - Function: **1U>** (First Overvoltage Element F59)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	%Un (10÷190) step 1 %Un
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.14.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.15 - Function: **2U>** (Second Overvoltage Element F59)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	%Un (10÷190) step 1 %Un
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.15.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.16 - Function: **3U>** (Third Overvoltage Element F59)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	%Un (10÷190) step 1 %Un
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.16.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.17 - Function: **1U<** (First Undervoltage Element F27)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	% Un (10÷190) step 1 %
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.17.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.18 - Function: **2U<** (Second Undervoltage Element F27)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	% (10÷190) step 1 %
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.18.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.19 - Function: **3U<** (Third Undervoltage Element F27)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	% (10÷190) step 1 %
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.19.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.20 - Function: **1f>** (First Overfrequency Element F81>)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ fs	40	Hz (40÷70) step 0.01 Hz
Timers	→ ts	10	s (0.02÷100) step 0.01 s

14.20.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- fs** : Minimum operation level
- ts** : Trip time delay

14.21 - Function: **2f>** (Second Overfrequency Element F81>)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ fs	40	Hz (40÷70) step 0.01 Hz
Timers	→ ts	10	s (0.02÷100) step 0.01 s

14.21.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- fs** : Minimum operation level
- ts** : Trip time delay

14.22 - Function: **3f>** (Third Overfrequency Element F81>)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ fs	40	Hz (40÷70) step 0.01 Hz
Timers	→ ts	10	s (0.02÷100) step 0.01 s

14.22.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- fs** : Minimum operation level
- ts** : Trip time delay

14.23 – Function: **1f<** (First Underfrequency Element F81<)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ fs	40	Hz (40÷70) step 0.01 Hz
Timers	→ ts	10	s (0.02÷100) step 0.01 s

14.23.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- fs** : Minimum operation level
- ts** : Trip time delay

14.24 - Function: **2f<** (Second Underfrequency Element F81<)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ fs	40	Hz (40÷70) step 0.01 Hz
Timers	→ ts	10	s (0.02÷100) step 0.01 s

14.24.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- fs** : Minimum operation level
- ts** : Trip time delay

14.25 - Function: **2f<** (Third Underfrequency Element F81<)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ fs	40	Hz (40÷70) step 0.01 Hz
Timers	→ ts	10	s (0.02÷100) step 0.01 s

14.25.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- fs** : Minimum operation level
- ts** : Trip time delay

14.26 - Function: **1Uo>** (First Zero Sequence Overvoltage Element F59Uo)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	1.000	%Un (1÷100) step 1 %Un
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s

14.26.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.27 - Function: **2Uo>** (Second Zero Sequence Overvoltage Element F59Uo)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	1.000	%Un (1÷100) step 1 %Un
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s

14.27.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.28 - Function: **U1<** (Positive Sequence Undervoltage Element F27U1)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	%Un (10÷190) step 1 %Un
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.28.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.29 - Function: **U2>** (Negative sequence Overvoltage Element F59U2 or F47)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Us	90	%Un (10÷190) step 1 %Un
Timers	→ ts	100	s (0.02÷100) step 0.01 s

14.29.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Us** : Minimum operation level
- ts** : Trip time delay

14.30 - Function: **Wi** (Circuit Breaker maintenance level)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ Ii	1	In (0.1÷99) → Wi 1 (1÷9999) step 0.1 In step 1

14.30.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Ii** : Circuit Breaker Rated Current in multiples of the Relay rated input current In
- Wi** : Maximum allowed amount of accumulated interruption energy before maintenance as stated by the C/B Manufactured.

14.30.2 - Operation (Accumulation of the interruption Energy)

The relay computes the Arc Energy developed during each interruption of the Circuit Breaker and accumulates these values.

When the amount of the accumulated energy exceeds a settable level the relay gives out an alarm to signalize that maintenance inspection of the Circuit Breaker is needed.

The operation of this function is based on the following parameters:

$$\mathbf{Ii} = \mathbf{Ii} = (0.1-99)\mathbf{In}$$

$$\mathbf{Wi} = \mathbf{Wi} = (1 - 9999)$$

"Wi" is set as a multiple of the conventional interruption energy unit.

Any time the Circuit Breaker opens (change of status from closed to open of the digital input connected to the normally open contact 52a of the C/B) the relay decreases the amount of energy corresponding to a number of conventional units:

$$nW_C = \frac{W}{Wc} = \frac{I^2 \cdot t_x}{Ii^2 \cdot t_i}$$

where:

$$\mathbf{W} = I^2 \cdot t_x \quad \text{Interruption Energy during the interruption time "tx" with interruption current "I".}$$

$$\mathbf{Wc} = Ii^2 \cdot t_i \quad \text{Conventional unit of interruption energy corresponding to C/B rated current and rated interruption time "t_i".}$$

When the set Energy level before maintenance is decreased to zero a user programmable output relay is operated.

Reset to Zero of the Energy accumulation is available in the menu "**Cmd (Local Command)**" (Reset Term).

14.31 - Function: **TCS** (Trip Circuit Supervision)

Status	→ Enab.	No	[No / Yes]
Timers	→ ts	0.10 s	(0.1÷100) step 0.01 s

14.31.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
 ts : Trip time delay

14.31.2 - Operation

The relay includes a complete Circuit Breaker Trip Circuit Supervision unit that is associated to the Contact "15-26" of the "R1" Output Relay.

The contact of "R1" is used to trip the C/B as reported in the drawing here below.

The supervision works when the C/B is closed and recognizes the Trip Circuit as sound as far as the current flowing exceeds "1mA".


In case of Trip Circuit Fault detection, the diagnostic relay is operated and the Led starts flashing (see § Signalization).

To have Supervision also with the C/B open one N/C contact (52b) from the C/B and an external resistor "R" are needed.

$$R[k\Omega] \leq \frac{V}{1mA} - R_{52} \quad \text{where} \quad R_{52} = \text{Trip Coil internal resistance [k}\Omega\text{]}$$

V = Trip Circuit Voltage

$$P_R \geq 2 \cdot \frac{V^2}{R} [\text{W}] \quad \text{Design power of external resistance "R"}$$

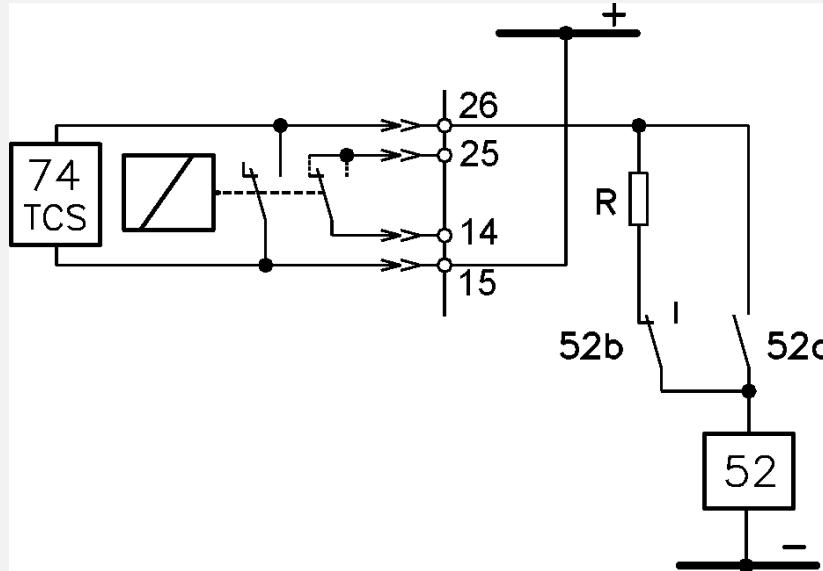

Tripping of the function operates a user programmable output relay.

14.32 - Function: IRF (Internal Relay Fault)

In this menu it is possible to configurate the operation of the Relay Internal Fault detection element

Status	→ Enab.	No	[No / Yes]
Timers	→ tIRF	5.00	s (5÷200) step 0.01 s

14.32.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- tIRF** : Trip time delay

14.32.2 - Operation

Tripping of the function operates a user programmable output relay.

17.33 - Function: RT (First Element Remote Trip)

In this menu it is possible to configurate the Remote Trip Element.

Status	→ Enab.	No	[No / Yes]
Options	→ RTon	FallEdge	[RiseEdge – FallEdge]
Timers	→ ts	5.00	s (0 ÷ 10.00) step 0.01 s

17.33.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- RTon** : Remote trip Edge selector
- ts** : Trip time delay

17.33.2 - Operation

Tripping of the function operates a user programmable output relay.

14.34 - Function: **tTripRd** (Trip Reduction time)

Status	→ Enab.	No	[No / Yes]
Timers	→ tHold	0.00	s (0.00÷180) step 1 s
	→ tC1 I	0.02	s (0.02÷100) step 0.01 s
	→ tC2 I	0.02	s (0.02÷100) step 0.01 s
	→ tC3 I	0.02	s (0.02÷100) step 0.01 s
	→ tC1 Io	0.02	s (0.02÷100) step 0.01 s
	→ tC2 Io	0.02	s (0.02÷100) step 0.01 s
	→ tC3 Io	0.02	s (0.02÷100) step 0.01 s
	→ tC1 Uo	0.02	s (0.02÷100) step 0.01 s
	→ tC2 Uo	0.02	s (0.02÷100) step 0.01 s
	→ tCRT	0.00	s (0.00÷10) step 0.1 s

14.34.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- tHold** : Duration of the trip time reduction; is set to 0,00 the reduction function does not operate.
- tC1 I** : Reduced trip time for 1I>
- tC2 I** : Reduced trip time for 2I>
- tC3 I** : Reduced trip time for 3I>
- tC1 Io** : Reduced trip time for 1Io>
- tC2 Io** : Reduced trip time for 2Io>
- tC3 Io** : Reduced trip time for 3Io>
- tC1 Uo** : Reduced trip time for 1Uo>
- tC2 Uo** : Reduced trip time for 2Uo>
- tCRT** : Reduced trip time for RT

14.34.2 - Operation

When this function is enabled, after a manual reclosure, the trip time delay of the protection functions is reduced from the original set value to the new time delay "tc" until "tHold" is expired.

Anyhow when the on-going reclosure is over and the relay is ready for new reclose, the original trip time delay is restored.

Functions originally programmed for an inverse time operation, during "tHold" operate as independent time function with definite time delay "tc".

14.34 - Function: BreakerFail (Breaker Failure)

Status	→ Enab.	No	[No / Yes]
Timers	→ tBF	0.75	s (0.05÷0.75) step 0.01 s

16.34.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
 tBF : Trip time delay

14.34.2 - Operation

The Breaker Failure detection is started by the operation of the output relay "R1" (programmed to be controlled by the Protection Functions that trip the C/B).

If after [tBF] seconds from operation of the relay "R1", any input current flow is still detected (>10% In), the function "BF" trips and operate one user programmable output relay,

14.35 - Function: ExtReset (External Reset Configuration)

This menu allows to configurate the edge polarity of the digital input associated to the trip reset function.

Options	→ ActOn	RiseEdge	[RiseEdge / FallEdge]
----------------	----------------	----------	-----------------------

14.35.1 - Description of variables

- ActOn** : *RiseEdge* Active on Rise Edge (Digital Input close).
FallEdge Active on Fall Edge (Digital Input open).

14.36 - Function: CB Manage (Control C/B)

This menu allows to configurate the command for C/B operation.

Options	→ L/R	Ignored	[Ignored – Active]
	→ Key	Enable	[Disable – Enable]
Timers	→ tL/R	0.05	s (0.05 ÷ 1.00) step 0.05 s
	→ tC/Bs	0.50	s (0.05 ÷ 1.00) step 0.05 s

14.36.1 - Description of variables

- L/R** : Selection of Local/Remote C/B operation mode Ignored or Active
- Key** : *Disable* = The pushbuttons on Front Panel are disabled; the operation of the C/B can be controlled by;
 - 1 - serial bus commands
 - 2 - commands available in the menu “**Cmd (Local Command)**” (Password protected).
 - 3 - Digital Inputs.*Enable* = The C/B can be controlled also by the pushbuttons available on Relay's Front Face.
- tL/R** : Admissible time before detection of the Local/Remote discrepancy alarm.
- tC/Bs** : Maximum admissible delay for detection of status signal after C/B operation.

14.36.2 - Display Message

1		• L • “ L ” the control of C/B is in “Local” mode
2		• R • “ R ” the control of C/B is in “Remote” mode
3		• ? If the symbol “ ? ” show up the relay is in discrepancy Local/Remote. The commands can be send from “Local” or “Remote”.
4		• (+) This symbol indicates the CB breaker failure (example: C/B closing failure)

14.37- Function: **Oscillo** (Oscillographic Recording)

Status	→ Enab.	No	[No / Yes]
Options	→ Trig	Start	[Start / Trip / OnCom / REUserLg / FEUserLg]
Timers	→ tPre	0.50	s (0.01÷0.50) step 0.01 s
	→ tPost	0.50	s (0.01÷1.50) step 0.01 s

16.37.1 - Description of variables

- Enab.** : Function enabling (No = Disable / Yes = Enable)
- Trig** : Selection of the Trigger command source (start recording):
 - Start* = Trigger on time start of protection functions
 - Trip* = Trigger on trip (time delay end) of protection functions
 - OnCom* = External Trigger from Digital Input
 - REUserLg* = Rising Edge of "User Logic" (see § Setting
 - FEUserLg* = Falling Edge of "User Logic" "User Trigger Oscillo")
- tPre** : Recording time before Trigger
- tPost** : Recording time after Trigger

14.37.2 - Operation

In the options: "Trig = Start" and "Trig = Trip", the oscillographic recording starts respectively when any protection function starts operating or trip.

In the option "ExtInp", the oscillographic record starts when the Digital Input is activated (terminals shorted)

The "Oscillo" Function includes the wave Form Capture of the input quantities (IA, IB, IC, Io, EA, EB, EC, Eo) and can totally store a record of 3 seconds.

The number of events recorded depends on the duration of each individual recording (tPre + tPost).

In any case the number of event stored can not exceed ten (10 x 0.3 sec).

Any new event beyond the 3 sec capacity of the memory, cancels and overwrites the former records (FIFO Memory).

14.37.3 – Setting "User Trigger Oscillo"

The “**USER TRIGGER OSCILLO**” is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via “MSCom2” software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
------	-------------	------------------	---------	-------	------------	----------------

14.37.3.1 – "Name"

Internal name

14.37.3.2 – "User descr."

Fixed

14.37.3.3 – "Linked functions"

Selection functions

14.37.3.4 – "OpLogic"

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

14.37.3.5 – "Timer"

Time delay (0-10)s, step 0.01s

14.37.3.6 – "Timer type"

Delay = Add a delay on output activation.
The “Timer” is edge triggered on rise edge.

Monostable = Activated the output for the time “Timer”


14.37.3.7 – "Logical status"

“User Trigger Oscillo” Logical status

14.37.3.8 – Example: Setting “User Variable”

Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button

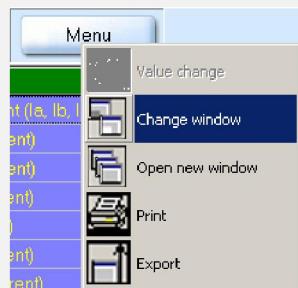

Select “User Variable”



Setting for “User Trigger Oscillo” : “**1I>/2I>/3I>**”, “**AND**”, “**1**”, “**Monostable**”.


ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	User Trigger Oscillo	OscilloTrigger.logic		None	0	Delay	0
2	UserVar <0>	Gate.1		None	0	Delay	0

14.37.3.7.1 – “Linked Functions”

Select “**Linked Functions**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:



Select “**1I>, 2I>, 3I>**” from “Available” box via push-button “<Add”, and press “OK”. For remove functions, use push-button “>Remove”.

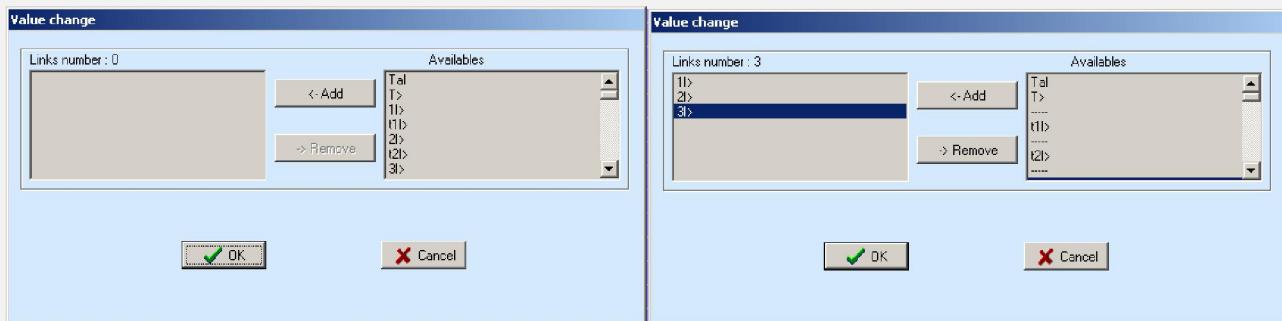


14.37.3.7.2 – “Operation Logic” (Oplogic)

Select “**Oper Logic**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:



Insert “**AND**” into box and press “OK”:

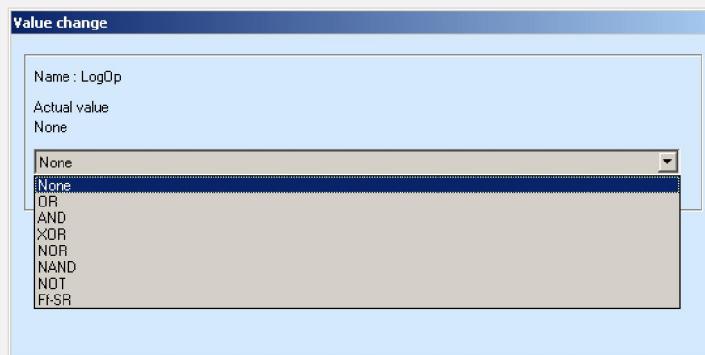


14.37.3.7.3 – “Timer”

Select “**Timer**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:




Select “**1**” into box and press “OK”:

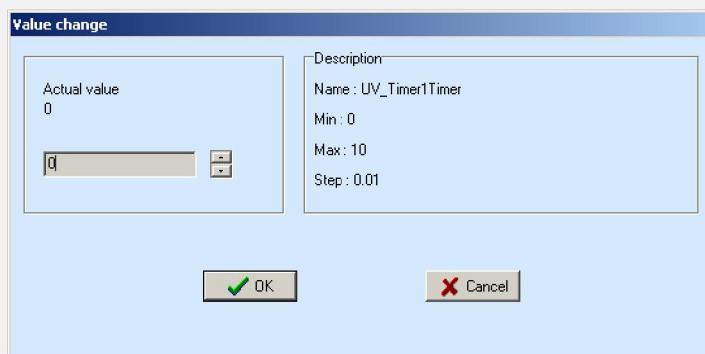


14.37.3.7.4 – “Timer type”

Select “**Timer**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

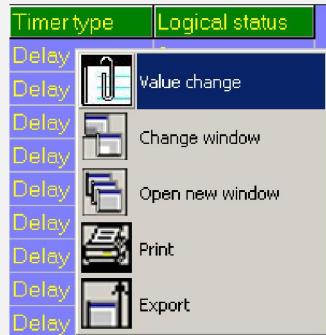

Select “**Monostable**” into box and press “OK”:

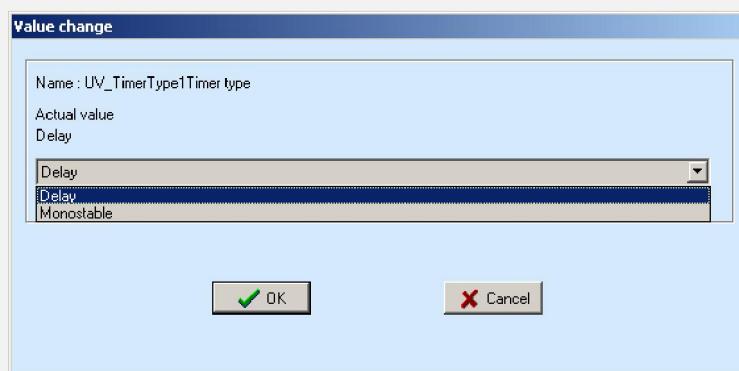

15. Input - Output (via software MSCom2)

The firmware can manage up to 32 digital inputs and 20 output relays; among these, 4 digital inputs and 6 output relays are available on the relay module, the remaining are available on additional expansion modules controlled via the CAN-Bus communication channel:

14DI	Module	(Board 1)	=	14 Digital Inputs
14DI	Module	(Board 2)	=	14 Digital Inputs
14DO-F	Module	(Board 3)	=	14 Outputs Relay

The interfacing software "MSCom2" also allows to program the operation of the output relays (Physical Output), and Digital Inputs (see MSCom2 Manual).

15.1 – Digital Input

→ 0.D1	Programmable (D1)	When the relevant terminals are open	<i>Available in the relay</i>
→ 0.D2	Programmable (D2)	and get activated when the relevant	
→ 0.D3	Programmable (D3)	terminals are shorted by an external cold	
→ 0.D4	Programmable (D4)	contact.	
→ 1.D1	Inputs	<i>Digital input on Expansion Board</i>	Any digital input of the expansion modules is active when the relevant terminals (see wiring diagram) are shorted.
→ 1.D--	"D8", "D16" not available		
→ 1.D15	available		
→ 2.D1	Inputs	<i>Digital input on Expansion Board</i>	when the relevant terminals (see wiring diagram) are shorted.
→ 2.D--	"D8", "D16" not available		
→ 2.D15	available		

15.2 – "DI" Configuration (via MSCom2 software)

Any of the Digital Inputs can be programmed to control one or more of the following functions.

Bi1I>	Blocking input to the	1I>
Bi2I>	Blocking input to the	2I>
Bi3I>	Blocking input to the	3I>
Bi1Io>	Blocking input to the	1Io>
Bi2Io>	Blocking input to the	2Io>
Bi3Io>	Blocking input to the	3Io>
Bi1Is>	Blocking input to the	1Is>
Bi2Is>	Blocking input to the	2Is>
Bi1U>	Blocking input to the	1U>
Bi2U>	Blocking input to the	2U>
Bi3U>	Blocking input to the	3U>
Bi1U<	Blocking input to the	1U<
Bi2U<	Blocking input to the	2U<
Bi3U<	Blocking input to the	3U<
B1Uo>	Blocking input to the	1Uo>
B2Uo>	Blocking input to the	2Uo>
BiU1<	Blocking input to the	U1<
BiU2>	Blocking input to the	U2>
Circuit Breaker	Indication of the Open/Close status of the C/B	
Local State	Local mode operation	
Remote State	Remote mode operation	
C/B Open command	C/B open command	
C/B Close command	C/B close command	
ExtR	External Reset input	
Dig. Input	Digital Input for reduction of trip time	
RT	Remote Trip	
Group 1-2	Selection of the setting Group 1 or 2.	

15.3 – Example

ID	Name	Status	OpLogic	Functions
----	------	--------	---------	-----------

15.3.1 – "Name"

Logical Input name

15.3.2 – "Status"

Logical Input status

15.3.3 – "OpLogic"

Not Used

15.3.4 – "Functions"

Selection function


15.3.5 – Example: Setting "Digital Input"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "DI configuration"

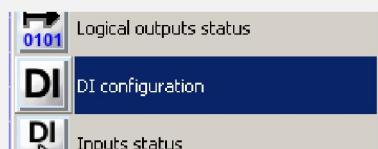

Setting for "**Bi1I>**" : "**1I>**".


ID	Name	Status	OpLogic	Functions
1	Bi1I>	Not active	None	1I>
2	Bi1I<	Not active	None	

15.3.5.1 – "Functions"

Select "**Functions**" related to "Bi1I>" and press right button on mouse, select "Value change":



From box "Available", select "1I>" and press "Add".
Press "OK" for confirmation. (if Password is request, see § Password)

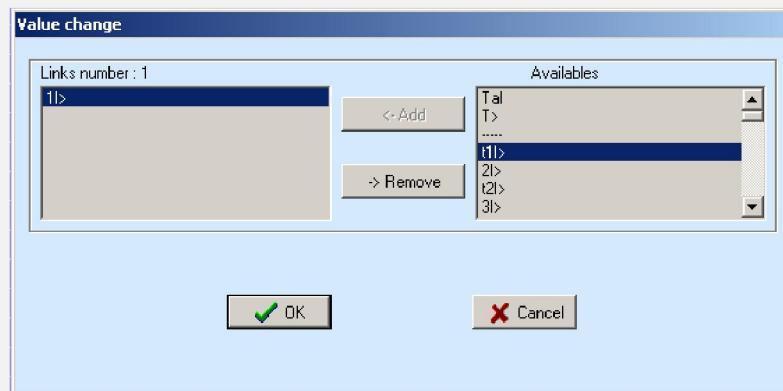

15.3 – Outputs Relay

The output relay are fully user programmable and controlled by any protection functions and by any digital inputs.

→ 0.R1	Programmable (R1)	
→ 0.R2	Programmable (R2)	
→ 0.R3	Programmable (R3)	
→ 0.R4	Programmable (R4)	<i>Available in the main relay</i>
→ 0.R5	Programmable (R5)	
→ 0.R6	Programmable (R6)	
→ 1.R1		
→ 1.R--	Programmable	<i>Output Relays on Expansion Board</i>
→ 1.R14		

15.4 - "DO" Configuration

Any Output Relay can be programmed to be controlled (energized) by one or more of the following functions or Digital Inputs:

Functions	Element	Description
	SCDop	Scada open breaker command
	SCDcl	Scada close breaker command
	SCDop2	Scada open breaker 2 command (generic command)
	SCDcl2	Scada close breaker 2 command (generic command)
	SCDop3	Scada open breaker 3 command (generic command)
	SCDcl3	Scada close breaker 3 command (generic command)
	SCDop4	Scada open breaker 4 command (generic command)
	SCDcl4	Scada close breaker 5 command (generic command)
	DisRCL	Scada disable reclose command
	EnRCL	Scada enable reclose command
T>	Tal	Alarm
T>	Trip	Thermal Image T>
1I>	1I>	Start
1I>	t1I>	Trip
2I>	2I>	First overcurrent element F50-51
2I>	t2I>	Start
2I>	Trip	Second overcurrent element F50-51
3I>	3I>	Start
3I>	t3I>	Trip
3I>	F50-51	Third overcurrent element F50-51
1Io>	1Io>	Start
1Io>	t1Io>	Trip
1Io>	F50N-51N	First earth fault element F50N-51N
2Io>	2Io>	Start
2Io>	t2Io>	Trip
2Io>	F50N-51N	Second earth fault element F50N-51N
3Io>	3Io>	Start
3Io>	t3Io>	Trip
3Io>	F50N-51N	Third earth fault element F50N-51N
1Is>	1Is>	Start
1Is>	t1Is>	Trip
1Is>	F46	First negative sequence current element F46
2Is>	2Is>	Start
2Is>	t2Is>	Trip
2Is>	F46	Second negative sequence current element F46
1U>	1U>	Start
1U>	t1U>	Trip
1U>	F59	First overvoltage element F59
2U>	2U>	Start
2U>	t2U>	Trip
2U>	F59	Second overvoltage element F59
3U>	3U>	Start
3U>	T3U>	Trip
3U>	F59	Third overvoltage element F59
1U<	1U<	Start
1U<	t1U<	Trip
1U<	F27	First undervoltage element F27
2U<	2U<	Start
2U<	t2U<	Trip
2U<	F27	Second undervoltage element F27
3U<	3U<	Start
3U<	t3U<	Trip
3U<	F27	Third undervoltage element F27
1f>	1f>	Start
1f>	t1f>	Trip
1f>	F81	First overfrequency element F81
2f>	2f>	Start
2f>	t2f>	Trip
2f>	F81	Second overfrequency element F81
3f>	3f>	Start
3f>	t3f>	Trip
3f>	F81	Third overfrequency element F81

Functions	Element	Description
1f<	1f< t1f<	Start Trip First underfrequency element F81
2f<	2f< t2f<	Start Trip Second underfrequency element F81
3f<	3f< t3f<	Start Trip Third underfrequency element F81
1Uo>	1Uo> t1Uo>	Start Trip First zero sequence voltage element F59Uo
2Uo>	2Uo> t2Uo>	Start Trip Second zero sequence voltage element F59Uo
U1<	U1< tu1<	Start Trip Positive sequence undervoltage element F27U1
U2>	U2> tu2>	Start Trip Negative sequence overvoltage element F59U2
Wi	tWi>	Circuit breaker maintenance level
TCS	tTCS	Trip coil supervision
IRF	IRF tIRF	Start Trip Internal Relay Failure
RT	RT tRT	Start Trip Remote Trip
BF	tBF	Trip Breaker Failure
	Gen.Start Gen.Trip	Start Trip Generic Start Generic Trip
	manOpCmd	Manual Open Command
	L/Rdisc	Local/Remote signal Discrepancy
	CL-Cmd	Close Command
	C/Bfail	Circuit Breaker failure
	OscilloTriggerLogic	User Variable for Oscillographic Recording
	UserVar 1	User Variable
	to	
	UserVar 25	
	Vcc	Reserved
	Gnd	Reserved
	Reset	Reset signal Logic
	P1	Push-button Open
	P2	Push-button Close
	0.D1 0.D1Not ---	Digital Input on Main Relay
	0.D6 0.D6Not 1.D1 1.D1Not ---	Digital input on Expansion Board
	1.D15 1.D15Not 2.D1 2.D1Not ---	Digital input on Expansion Board
	2.D15 2.D15Not 0.R1 0.R2 0.R3 0.R4 0.R5 0.R6	Output relay on Main Relay
	1.R1 ---- 1.R14	Output relay on Expansion Board

15.5 - Example

ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]		None	Off	Normally open	Automatic reset	0.1	Off
2	0.R2 [Master board, R:2]		None	Off	Normally open	Automatic reset	0.1	Off

15.5.1 – "Relay"

Relay internal name

15.5.2 – "Linked function"

Select the function for tripping the output relay (for multiple association use "User Variable")

15.5.3 – "Operation Logic"

Not Used

15.5.4 – "Logical Status"

Relay Logical status

15.5.5 – "Output Configuration"

Normally Deenergized The output relay is deenergized in normal conditions and gets energized on activation of the controlling Functional Output; reset means deenergizing.

Normally Energized The output relay is energized in normal conditions and gets deenergized on activation of the controlling Functional Output; reset means energizing.

15.5.6 – "tON - Operation Time"

This timer controls the duration of the activation of the output relay.


tON : (0.01-10)s, step 0.01s

15.5.7 – "Relay Status"

Relay – Physical status

15.5.8 – Functions - Operation Mode

- Automatic** : In this mode the output relay is “operated” (energized if “N.D.”, deenergized if “N.E.”) when the controlling Functional Output is activated and it is reset to the “non operated” condition when the Functional Output gets deactivated but, anyhow, not before the time “tON” has elapsed (minimum duration of the operation time)
- Manual** : In this mode the output relay is “operated” when the controlling Functional Output is activated and remains in the operated condition until a manual reset command is issued by the FMR keyboard (local commands menu) or via the serial communication. In this mode the timer “tON” has no effect.
- Impulsive** : In this mode the output relay is “operated” when the controlling Functional Output is activated and it remains in the “operated” condition (energized if “N.D.”, deenergized if “N.E.”) for the set time “tON” independently from the status of the controlling Functional Output.

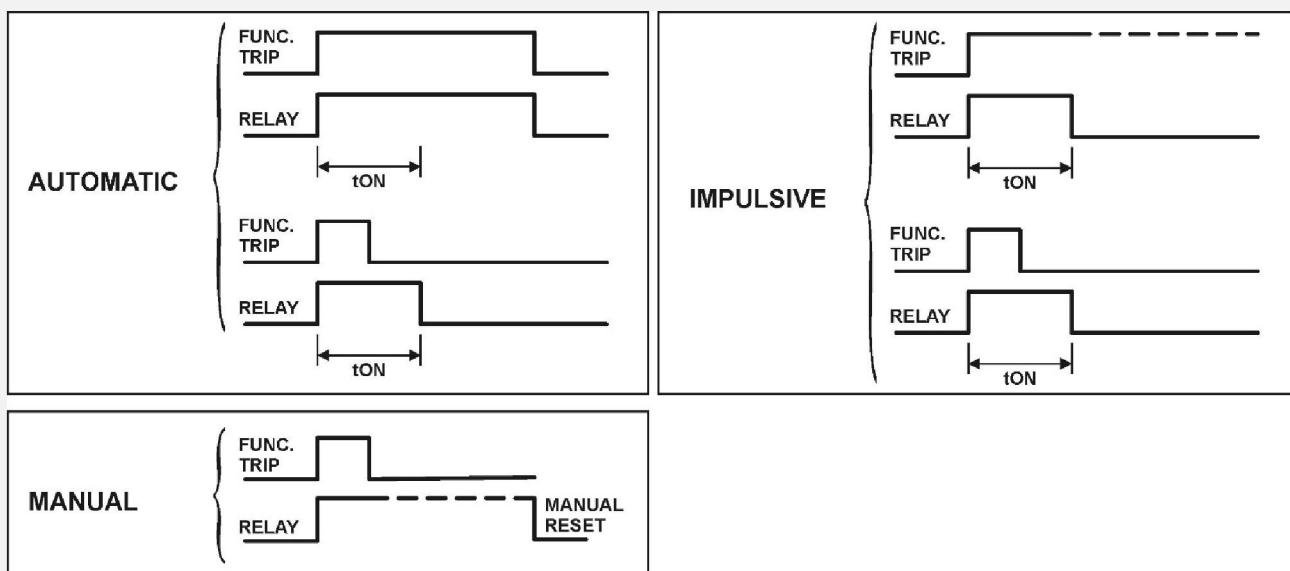


Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button



Select “DO Configuration”

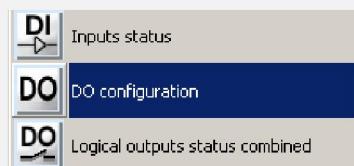


15.5.9 – Example: Change settings for "0.R1"

Change settings for "0.R1" : "1I>", "Normally Closed", "Pulse", "0.5".

ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]		None	Off	Normally open	Automatic reset	0.1	Off
2	0.R2 [Master board, R:2]		None	Off	Normally open	Automatic reset	0.1	Off


15.5.9.1 – "Linked Functions"

Select "**Linked Functions**" related to "0.D1" and press right button on mouse, select "Value change":

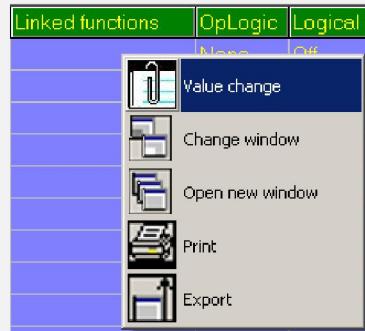


From box "Available", select "1I>" and press "Add".

Press "OK" for confirmation. (if Password is request, see § Password)

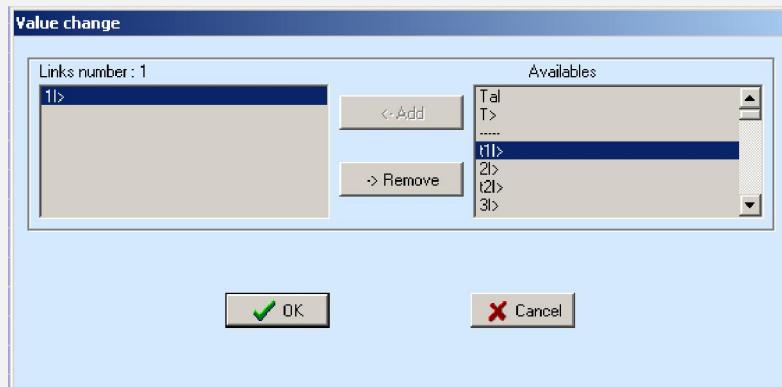


15.5.9.2 – "Output Config"

Select "**Output Config**" related to "0.R1" and press right button on mouse, select "**Value change**":

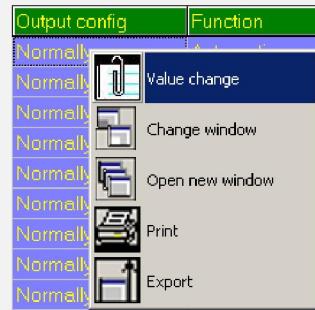


Select "**Normally Close**" from combo box and press "**OK**" (if Password is request, see § Password)

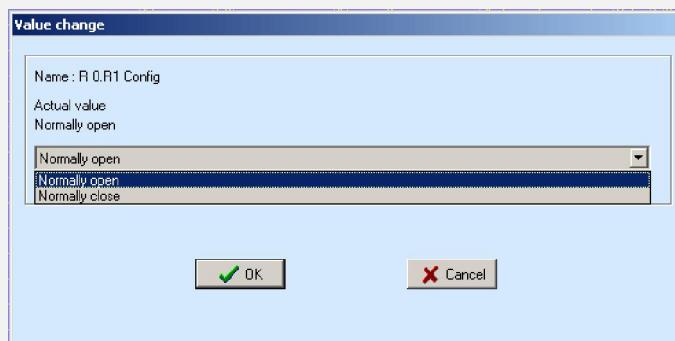


15.5.9.3 – "Function"

Select “**Function**” related to “0.R1” and press right button on mouse, select “Value change”:

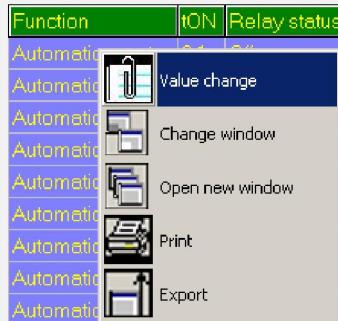


Select “**Pulse**” from combo box and press “OK” (if Password is request, see § Password):

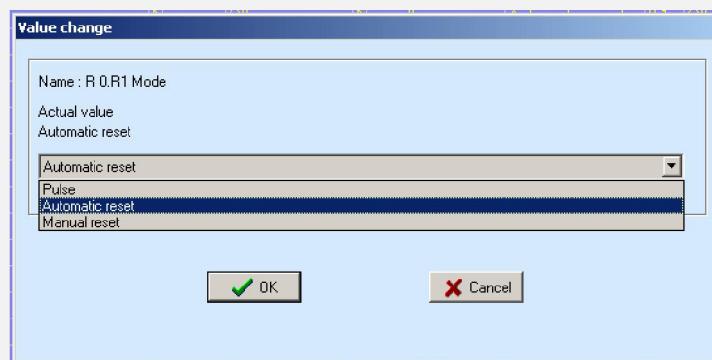15.5.9.4 – "tON"

Select “**tON**” related to “0.R1” and press right button on mouse, select “Value change”:



Select “**0.5**” from combo box and press “OK” (if Password is request, see § Password):

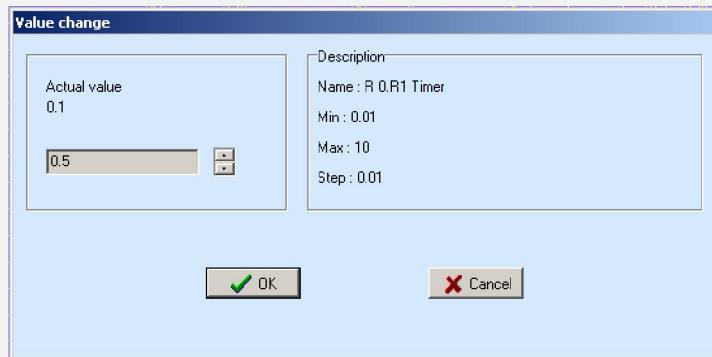

16. DATE and TIME

In this menu it is possible to configurate the Date and Time

Date:	20YY	/	MM	/	DD	(2000/01/01 ÷ 2099/12/31)
--------------	------	---	----	---	----	---------------------------

YY = Year / MM = Month / DD = Day

Time:	HH	:	MM	:	00	HH = hour / MM = Minutes / 00
--------------	----	---	----	---	----	-------------------------------

DofW:	Day	Es: Wednesday
--------------	-----	---------------

- 1  • Press "Menu" for access to the main menu with icons.
- 2  • Select icon "TimeDate" by pushbuttons "Increase" or "Decrease".
• Press "Select".
- 3  • Press "Modify".
- 4  • The last two figures of the Year will appear in bold character; by pushbuttons "Increase" or "Decrease" set the new figures.
• Press "Next" to go to the next setting.
- 5  • As above for changing the "Month"
• Press "Next" to go to the next setting.
- 6  • As above for changing the "Day"
• Press "Next" to go to the next setting.



- As above for changing the "Hours"
- Press "**Next**" to go to the next setting.



- As above for changing the "Minutes"
- Press "**Next**" to go to the next setting.



- The **Day of the Week** is calculated and displayed automatically.
- Press "**Exit**" to go back to the main menu.
- Press "**Modify**" to go back to the step "3"



Press the button "**Next**" to go back to the previous display.

16.1 – Clock synchronization

The internal clock has 1ms resolution and a stability of $\pm 35\text{ppm}$ in the operational temperature range.

It can be synchronized with an external time reference in the following ways:

- Using the "MSCom 2" software or from the DCS with the Modbus RTU protocol.

Note: On power supply failure an internal battery supports the internal clock for over two years.

17. Healthy (Diagnostic Information)

The relay operates a continuous checking of the vital functionalities and in case an internal failure is detected, the I.R.F. function (see § I.R.F.) is activated and the Power/IRF led is set to flashing.

Device	→	No Fail	→ No Fail
		Fail	→ Fail present
		MinorFail	→ Minor Fail
		HistoricalFail	→ Cleared Fail
		FW not comp.	→ Firmware not compatible

If an internal self-clearing (transient) fault is detected, it is recorded into an historical file without any other action.

18. Dev.Info (Relay Version)

In this menu it is possible to read the information relevant to relay unit.



SW Version	→ AcqUnit-I/O	# ####.##.##.#	Firmware version of acquisition unit
	→ ProtectUnit	# ####.##.##.#	Firmware version of CPU unit
Protect.Model	→	FeederManager	Protection Type
Serial Number	→	# ## / ## / ## / #####	Relay Serial Number
User Tag	→	UMRAV	Relay identification label.
Build	→	##### ##### #####	Build identification label.
Line	→	##### ##### #####	Line identification label. This information can only be modified by the interface program "MSCom2" and allows the user to give to the relay any suitable denomination.

19. Battery

The relay is equipped with a lithium battery type "**CR2477N 3V**", to support the internal clock and the oscillographic recording memory in case of programmed lack of power.
The expected minimum duration without power exceed 2 years.

ATTENTION!! Use only battery specified.

Instruction for replacement the battery:

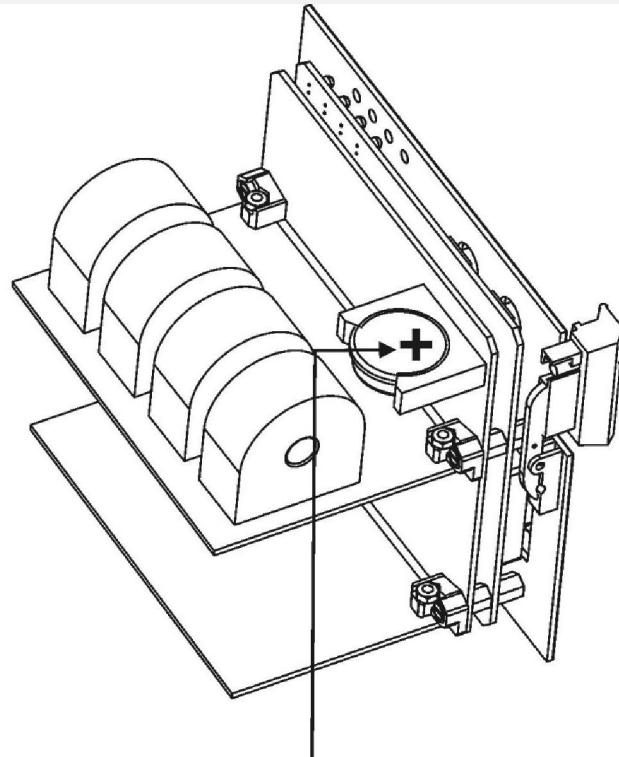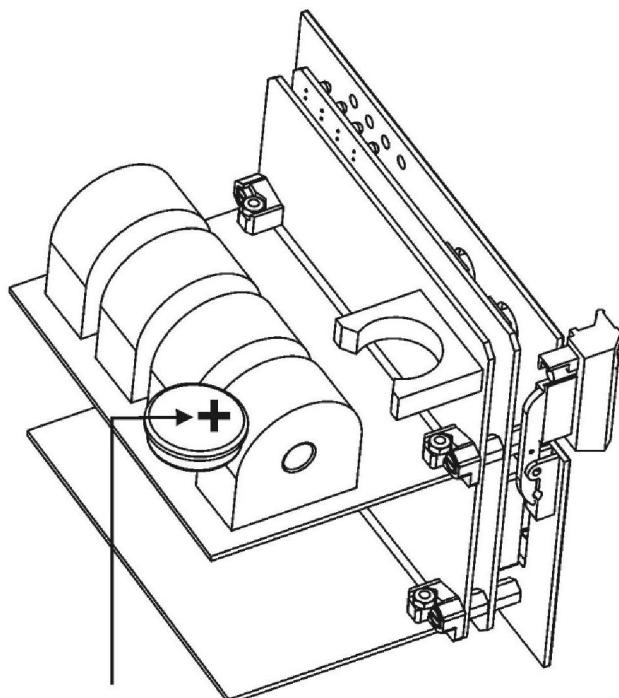

BATTERY

BATTERY

20. Maintenance


No maintenance is required. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorized Dealer mentioning the relay's Serial No reported in the label on relays enclosure.

21. Power Frequency Insulation Test


Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics.

When doing the insulation test, the terminals relevant to serial output, digital inputs and RTD input must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay should be isolated. This is extremely important as discharges eventually taking place in other parts or components of the board can severely damage the relays or cause damages not immediately evident to the electronic components.


22. Basic Relay - Wiring Diagram

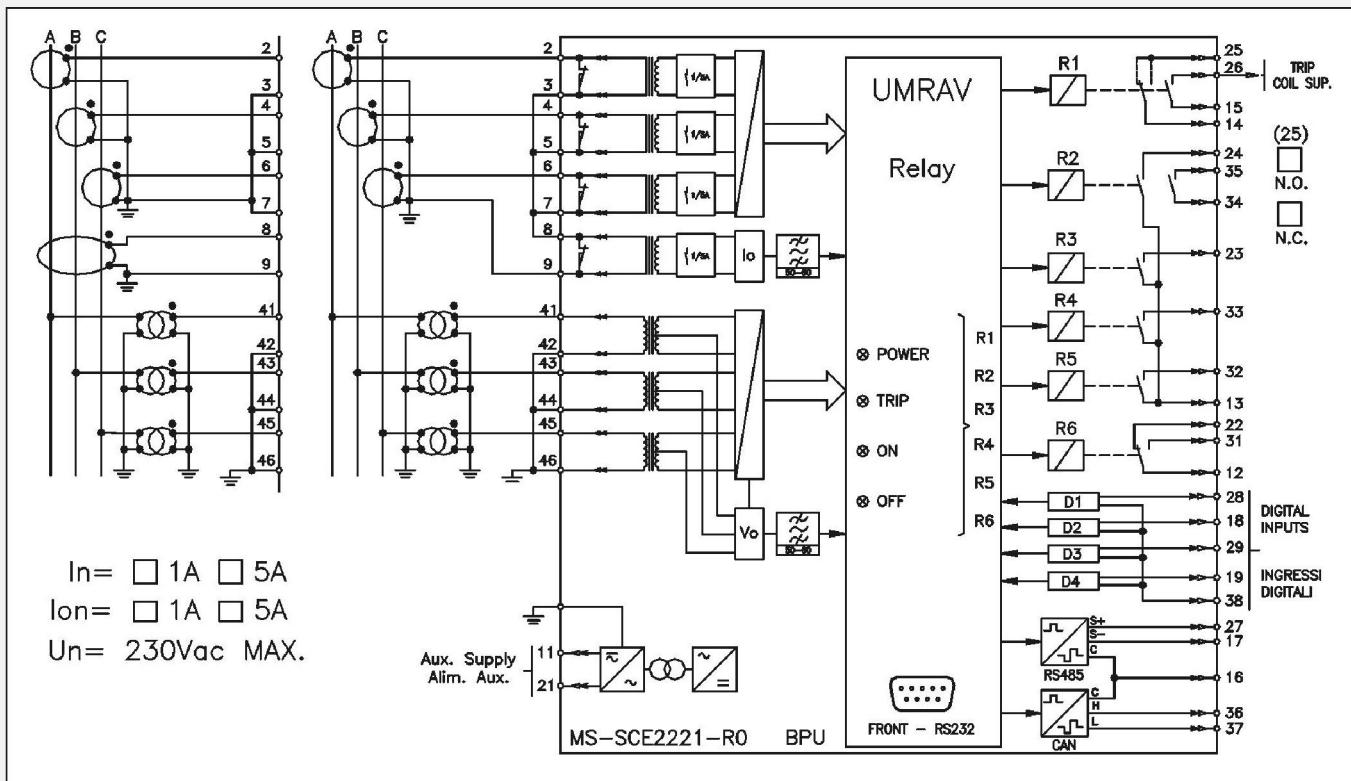

22.1 - 14DI - Expansion Module - Wiring Diagram (14 Digital Inputs)

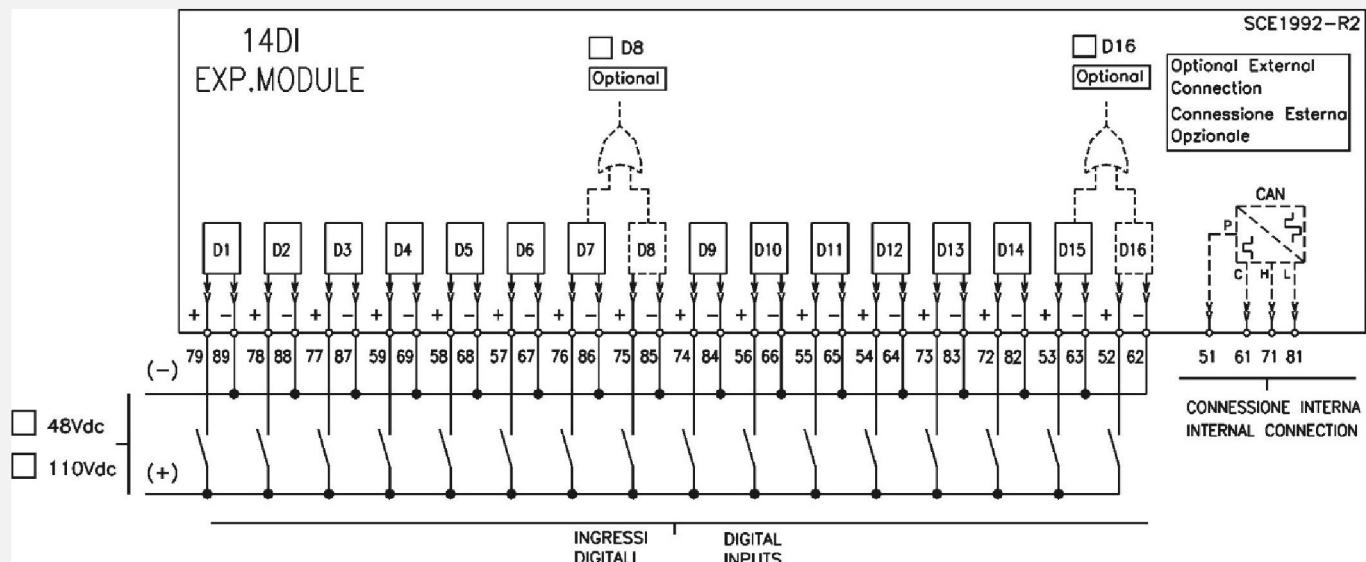


22.2 - 14DO-F - Expansion Module - Wiring Diagram (14 Digital Outputs)

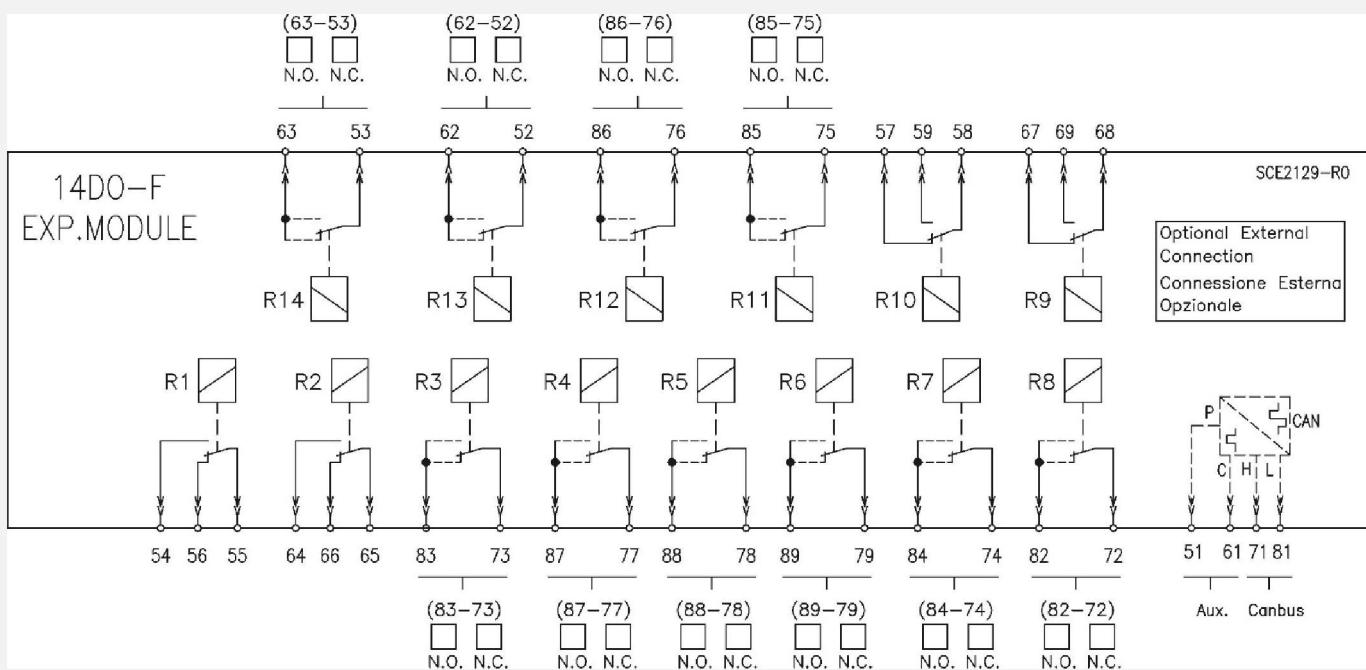

22.3 - PSU - Power Supply for Expansion Module - Wiring Diagram

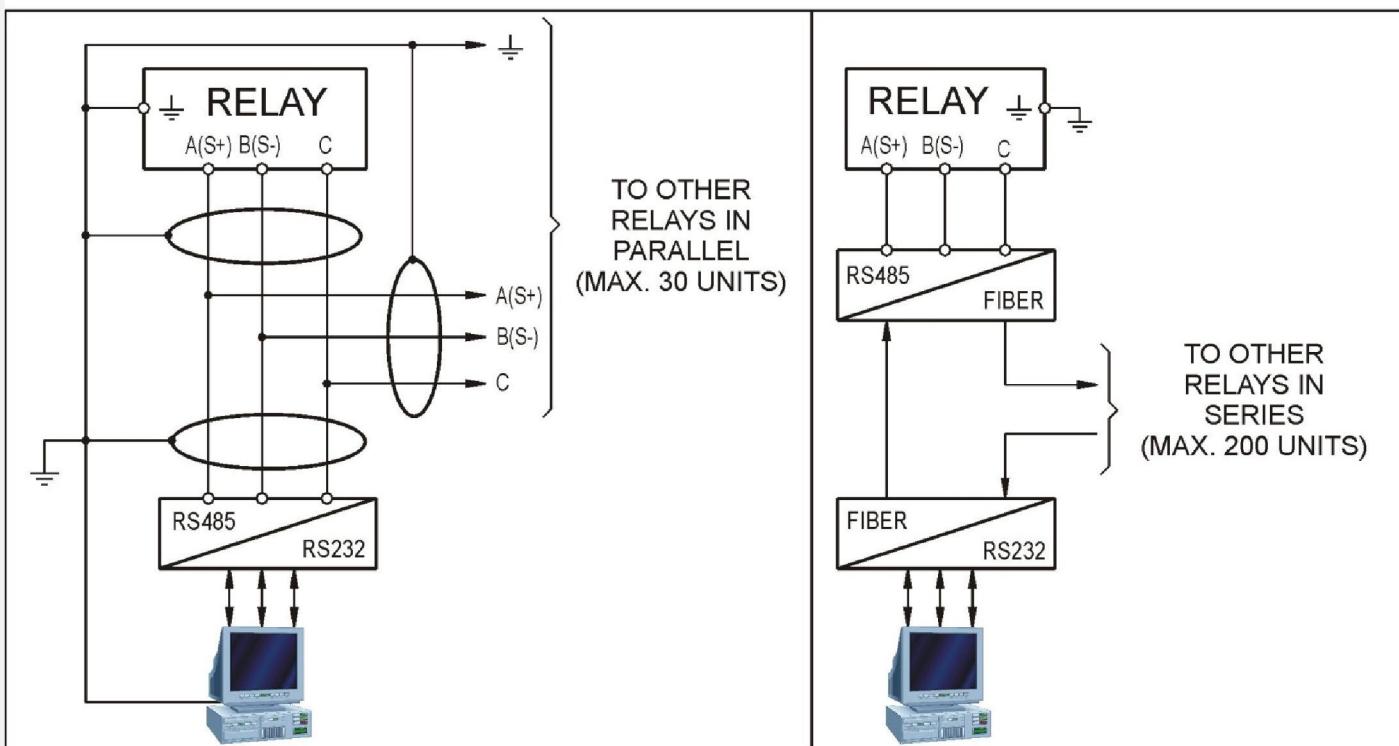



23. Wiring the Serial Communication Bus**CONNECTION TO RS485****FIBER OPTIC CONNECTION**

Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C.
A dedicated communication software (MSCom2) for Windows XP (or later) is available.

Please refer to the MSCom2 instruction manual for more information.

Maximum length of the serial bus can be up to 200m. For longer distance and for connection of up to 250 Relays, optical interconnection is recommended (please ask Microelettrica for accessories).


24. Basic Relay - Overall Dimensions

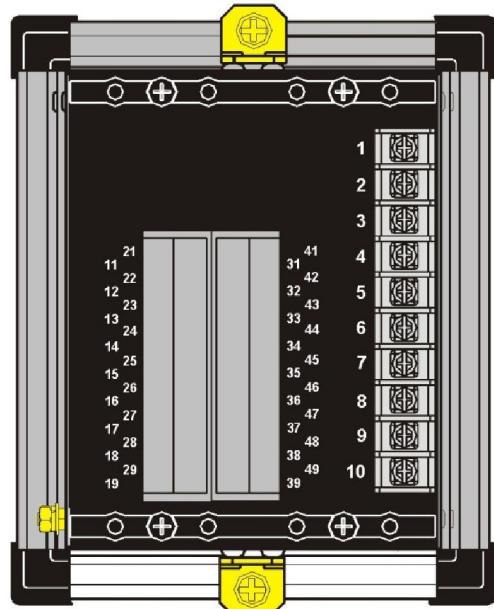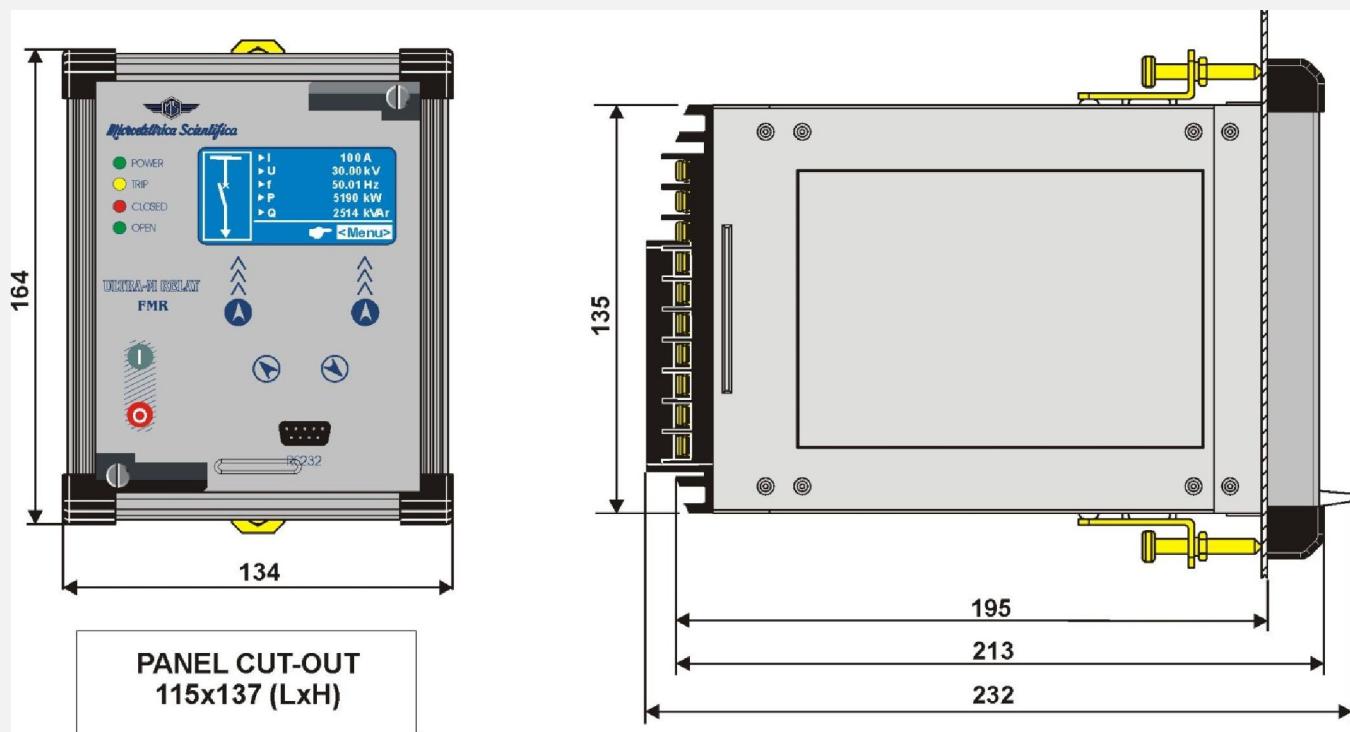

TERMINAL CONNECTION

Flush mounting protection degree: IP44 (IP54 on request).

24.1 - Expansion Module - Overall Dimensions

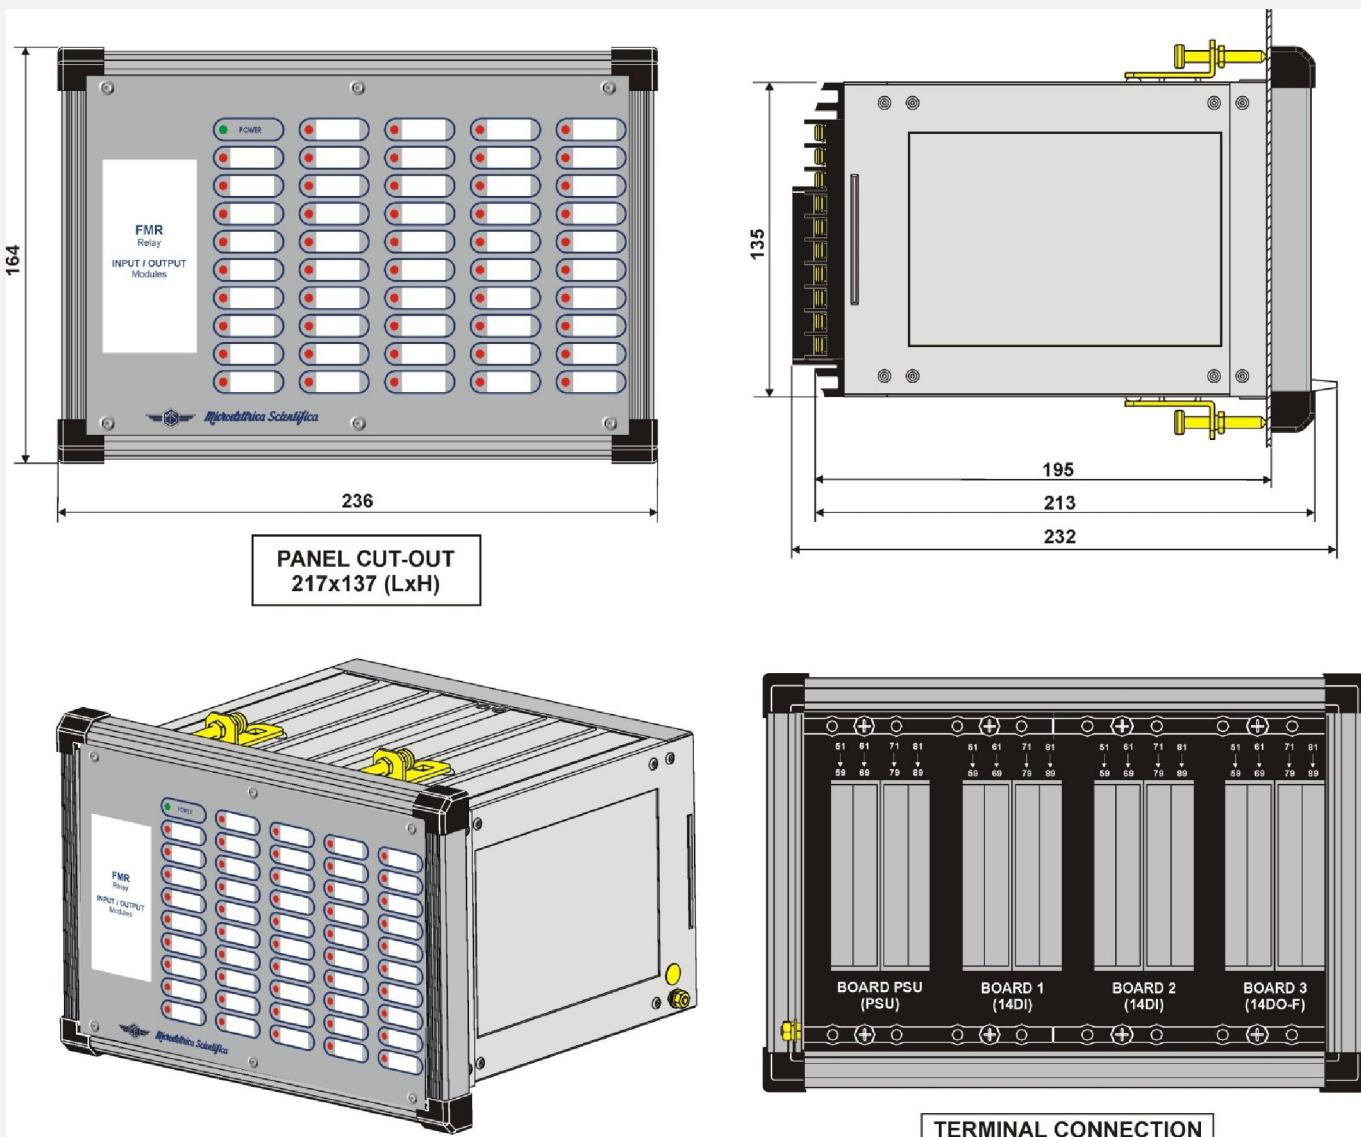


25. Direction for Pcb's Draw-Out and Plug-In**25.1 - Draw-out**

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.
Draw-out the PCB by pulling on the handles ③

25.2 - Plug-in

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.
Slide-in the card on the rails provided inside the enclosure.
Plug-in the card completely and press the handle to the closed position.
Rotate anticlockwise the screws ① and ② with the mark in the vertical position (locked).

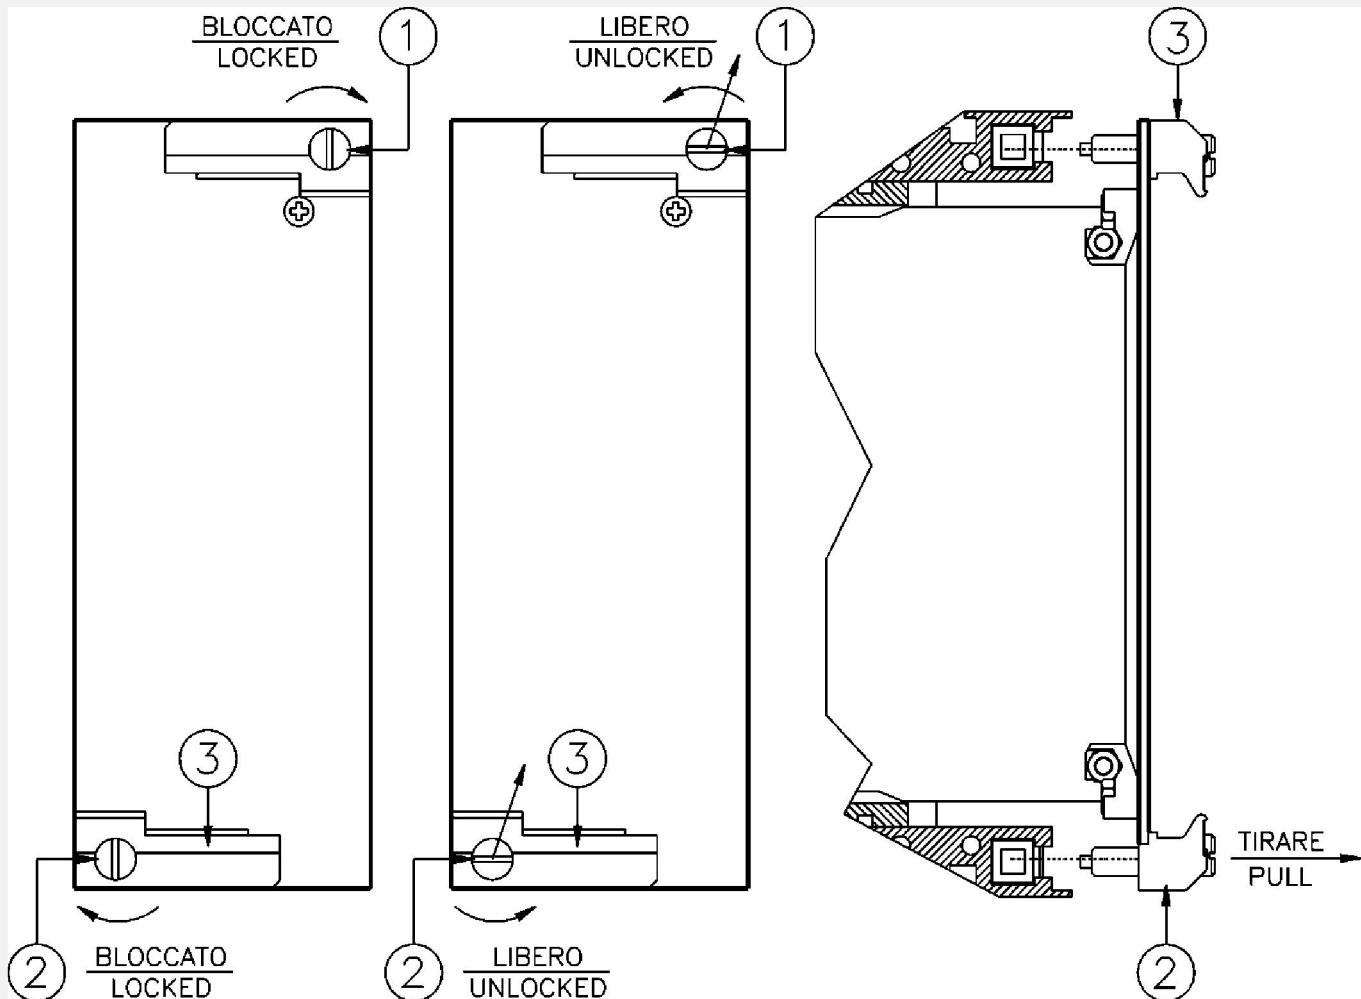

26. Electrical Characteristics**APPROVAL: CE****REFERENCE STANDARDS****IEC 60255 - EN50263 - CE Directive - EN/IEC61000 - IEEE C37**

<input type="checkbox"/> Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
<input type="checkbox"/> Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) - 1,2/50μs
<input type="checkbox"/> Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 60068)

<input type="checkbox"/> Operation ambient temperature	-10°C / +55°C
<input type="checkbox"/> Storage temperature	-25°C / +70°C
<input type="checkbox"/> Environmental testing (Cold)	IEC60068-2-1
	(Dry heat) IEC60068-2-2
	(Change of temperature) IEC60068-2-14
	(Damp heat, steady state) IEC60068-2-78 RH 93% Without Condensing AT 40°C

CE EMC Compatibility (EN50081-2 - EN50082-2 - EN50263)

<input type="checkbox"/> Electromagnetic emission	EN55022	industrial environment	
<input type="checkbox"/> Radiated electromagnetic field immunity test	IEC61000-4-3	level 3	80-2000MHz 10V/m
	ENV50204		900MHz/200Hz 10V/m
<input type="checkbox"/> Conducted disturbances immunity test	IEC61000-4-6	level 3	0.15-80MHz 10V
<input type="checkbox"/> Electrostatic discharge test	IEC61000-4-2	level 4	6kV contact / 8kV air
<input type="checkbox"/> Power frequency magnetic test	IEC61000-4-8		1000A/m 50/60Hz
<input type="checkbox"/> Pulse magnetic field	IEC61000-4-9		1000A/m, 8/20μs
<input type="checkbox"/> Damped oscillatory magnetic field	IEC61000-4-10		100A/m, 0.1-1MHz
<input type="checkbox"/> Immunity to conducted common mode disturbance 0Hz-150KHz	IEC61000-4-16	level 4	
<input type="checkbox"/> Electrical fast transient/burst	IEC61000-4-4	level 3	2kV, 5kHz
<input type="checkbox"/> HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3	400pps, 2,5kV (m.c.), 1kV (d.m.)
<input type="checkbox"/> Oscillatory waves (Ring waves)	IEC61000-4-12	level 4	4kV(c.m.), 2kV(d.m.)
<input type="checkbox"/> Surge immunity test	IEC61000-4-5	level 4	2kV(c.m.), 1kV(d.m.)
<input type="checkbox"/> Voltage interruptions	IEC60255-4-11		
<input type="checkbox"/> Resistance to vibration and shocks	IEC60255-21-1	- IEC60255-21-2	10-500Hz 1g

ELECTRIC RATED VALUE

<input type="checkbox"/> Accuracy at reference value of influencing factors	1% In - 0.1%On for measure 2% + to (to=20±30ms @ 2xIs) for times
<input type="checkbox"/> Rated Current	In = 1 or 5A - On = 1 or 5A
Current overload	80 In for 1 sec; 4 In continuous
Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A Neutral : 0.01VA at In = 1A ; 0.2VA at In = 5A
<input type="checkbox"/> Rated Voltage	Un = (50 ± 150)Vac
Voltage Overload	2Un permanent
Burden on voltage inputs	0,1VA at Un
<input type="checkbox"/> Average power supply consumption	< 10 VA
<input type="checkbox"/> Output relays	rating 5 A; Vn = 380 V A.C. resistive switching = 1100W (380V max) make = 30 A (peak) 0,5 sec. break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)

COMMUNICATION PARAMETER

<input type="checkbox"/> Rear serial port	RS485 - 9600 to 38400 bps - 8,n,1 - Modbus RTU - IEC60870-5-103
<input type="checkbox"/> Front serial port	RS232 - 9600 to 57600 bps - 8,n,1 - Modbus RTU

27. Software & Firmware Version**Firmware for version**

IAU (Intelligent Acquisition Unit)	021.01.X
IPU (Processor Unit)	501.25.01.X

Application Software

MSCom 2	1.03.32
----------------	---------

**MICROENER**

Quartier du pavé neuf — 49 rue de l'université — F 93191 Noisy Le Grand
Tél : +33 1 48 15 09 09 — Fax : +33 1 43 05 08 24 — Mail : info@microener.com - http://www.microener.com

The performances and the characteristics reported in this manual are not binding and can modified at any moment without notice