



MICROENER

OPERATING MANUAL

UFM-R-PL

(Multiple I/O Boards)

MO n°: 12JMC0591626 rév A



Téléphone : 01 48 15 09 09
www.microener.com

**OPERATING MANUAL
FEEDER MANAGER with
AUTORECLOSING RELAY
UFM-R-PL**

MO N°:
12JMC0591626

Rev. **A**
Page 2 / 122


MODIFICATIONS

Rev.	Description	Date	Checked by	Approved by
Z	Creation	2012/03/06	JMC	LA
A	First issue	2012/03/30	JMC	LA

GENERAL UTILIZATION AND COMMISSIONING DIRECTIONS.....	7
Storage and Transportation	7
Installation	7
Electrical Connection	7
Measuring Inputs and Power Supply	7
Outputs Loading	7
Protection Earthing	7
Setting and Calibration	7
Safety Protection	7
Handling	7
Maintenance.....	7
Waste Disposal of Electrical & Electronic Equipment.....	8
Fault Detection and Repair	8
GENERAL	9
Power Supply	9
FRONT PANEL	9
KEYBOARD AND DISPLAY.....	10
Display	10
ICONS OF DISPLAY.....	11
SIGNALIZATION	12
Leds Manual Reset.....	12
Display of the last trip	13
SIGNALIZATION MODULE (OPTIONAL).....	13
LOCAL COMMANDS (CMD).....	21
MEASURE.....	22
ENERGY	23
TRIP RECORDING (LTRIP)	24
COUNTERS.....	26
RCE (RECORDER CHRONOLOGIC EVENTS).....	28
Events on display.....	30
SYS (SYSTEM PARAMETERS).....	33
SETTINGS	36
Modifying the setting of variables	37
Password	38
Menu: Comm. (Communication parameters)	39
Description of variables	39
Front Panel serial communication port (RS232)	39
Cable for direct connection of Relay to Personal Computer	39
Main serial communication port (RS485)	40
Menu: LCD	40
Description of variables	40
Function: T> (Thermal Image F49)	42
Description of variables	42

Trip and Alarm.....	42
Function: 1I> (First Overcurrent Element F50/51)	45
Description of variables	45
Algorithm of the time current curves.....	46
IEC Curves	47
IEEE Curves	48
Operation of the phase Overcurrent Elements in function of variable "f(a)"	49
Operation of the Overcurrent Element with Voltage Control f(U)	51
Blocking Logic (BO-BI)	52
Automatic doubling of Overcurrent thresholds on current inrush	52
Function: 2I> (Second Overcurrent Element F50/51)	53
Description of variables	53
Function: 3I> (Third Overcurrent Element F50/51)	54
Description of variables	54
Function: 1Io> (First Earth Fault Element 50N/51N)	55
Description of variables	55
Operation mode of the Earth Fault elements programming the variable "f(a ₀)"	56
Function: 2Io> (Second Earth Fault Element 50N/51N)	57
Description of variables	57
Function: 3Io> (Second Earth Fault Element 50N/51N)	58
Description parameters	58
Function: 1Is> (First Negative Sequence Element F46)	59
Description of variables	59
Time/Current operation of the first Current Unbalance element "f(t)"	59
Function: 2Is> (Second Negative Sequence Element F46)	60
Description of variables	60
Function: 1U> (First Overvoltage Element F59)	61
Description of variables	61
Function: 2U> (Second Overvoltage Element F59)	61
Description of variables	61
Function: 1U< (First Undervoltage Element F27)	62
Description of variables	62
Function: 2U< (Second Undervoltage Element F27)	62
Description of variables	62
Function: 1f> (First Overfrequency Element F81>)	63
Description of variables	63
Function: 2f> (Second Overfrequency Element F81>)	63
Description of variables	63
Function: 1f< (First Underfrequency Element F81<)	64
Description of variables	64
Function: 2f< (Second Underfrequency Element F81<)	64
Description of variables	64
Function: 1Uo> (First Zero Sequence Overvoltage Element F59Uo)	65
Description of variables	65
Function: 2Uo> (Second Zero Sequence Overvoltage Element F59Uo)	65
Description of variables	65
Function: U1< (Positive Sequence Undervoltage Element F27U1)	66
Description of variables	66
Function: U2> (Negative sequence Overvoltage Element F59U2 or F47)	66
Description of variables	66
Function: Wi (Circuit Breaker maintenance level)	67
Description of variables	67
Operation (Accumulation of the interruption Energy)	67
Function: TCS (Trip Circuit Supervision)	68

Description of variables	68
Operation.....	68
Function: IRF (Internal Relay Fault).....	69
Description of variables	69
Operation.....	69
Function: RT (Remote Trip)	69
Description of variables	69
Operation.....	69
Function: TripTimeRd. (Trip Time Reduction)	70
Description of variables	70
Operation.....	70
Function: Reclos (Automatic Reclosure RCL).....	71
Definitions.....	71
Description of variables	72
Setting.....	73
Operation.....	76
Reclose Command	77
Display Message	77
Flow chart - Automatic Reclosure RCL.....	78
Function: CB Mngn (Control C/B)	79
Description of variables	79
Display Message	80
Function: Oscillo (Oscillographic Recording)	81
Description of variables	81
Operation.....	81
Available on MScOm2.....	82
Setting "User Trigger Oscillo"	84
Function: BreakerFail (Breaker Failure)	89
Description of variables	89
Operation.....	89
Function: ExtReset (External Reset Configuration)	89
Description of variables	89
USER VARIABLES.....	90
INPUT – OUTPUT (VIA MSCOM2 SOFTWARE)	96
Digital Inputs	96
"DI" Configuration (via MScOm2 software).....	97
Outputs Relay.....	100
"DO" Configuration	101
DATE & TIME	109
Clock synchronization.....	110
HEALTHY (DIAGNOSTIC INFORMATION).....	111
INFO (RELAY VERSION)	111
BATTERY	112
MAINTENANCE	112
POWER FREQUENCY INSULATION TEST	112
BASIC RELAY - WIRING DIAGRAM.....	113
UX10-4 - Expansion Module - Wiring Diagram (10 Digital Inputs + 4 Output Relays)	113
14DI - Expansion Module - Wiring Diagram (14 Digital Inputs).....	114

 <p>Téléphone : 01 48 15 09 09 www.microener.com</p>	OPERATING MANUAL FEEDER MANAGER with AUTORECLOSING RELAY UFM-R-PL	MO N°: 12JMC0591626
		Rev. A Page 6 / 122

14DO - Expansion Module - Wiring Diagram (14 Output Relays)114
14DO-S - Expansion Module - Wiring Diagram (14 Output Relays)115

WIRING THE SERIAL COMMUNICATION BUS116

BASIC RELAY - OVERALL DIMENSIONS.....117
(1 Expansion Module) & (2 Expansion Module) - Overall Dimensions118
Rack 3U – Overall Dimensions.....119

DIRECTION FOR PCB'S DRAW-OUT AND PLUG-IN120
Draw-out120
Plug-in120

ELECTRICAL CHARACTERISTICS121

SOFTWARE & FIRMWARE VERSION122

GENERAL UTILIZATION AND COMMISSIONING DIRECTIONS

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

Storage and Transportation

Must comply with the environmental conditions stated in the product's specification or by the applicable IEC standards.

Installation

Must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

Electrical Connection

Must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

Measuring Inputs and Power Supply

Carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

Outputs Loading

Must be compatible with their declared performance.

Protection Earthing

When earthing is required, carefully check its effectiveness.

Setting and Calibration

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

Safety Protection

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.


Handling

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules.

The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits produced by M.S. are completely safe from electrostatic discharge (8 kV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

Maintenance

Make reference to the instruction manual of the Manufacturer; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

 Téléphone : 01 48 15 09 09 www.microener.com	OPERATING MANUAL FEEDER MANAGER with AUTORECLOSING RELAY UFM-R-PL	MO N°: 12JMC0591626
		Rev. A Page 8 / 122

Waste Disposal of Electrical & Electronic Equipment

(Applicable throughout the European Union and other European countries with separate collection program). This product should not be treated as household waste when you wish dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequence to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resource.

Fault Detection and Repair

Internal calibrations and components should not be altered or replaced.
For repair please ask the Manufacturer or its authorized Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

GENERAL

Input currents are supplied to 4 current transformers: - three measuring phase current - one measuring the earth fault zero-sequence current.

Current input can be selected 1A or 5A by movable jumpers available on relay cards.

Input voltage are supplied to 4 Potential Transformers: three measuring phase-to-neutral voltage and one measuring the zero sequence voltage supplied by the secondary of three system P.Ts. Y/Open Delta connected.

The Measuring Ranges of the different inputs respectively are:

Phase Currents	: (0.1-40)In	Phase Voltage	: (0.01-2)Un
Neutral Current	: (0.01-10)On	Neutral Voltage	: (0.01-2)Un

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input currents and voltages are same as reported on the diagram and on the test certificate.


The auxiliary power is supplied by a built-in interchangeable module fully isolated and self protected.

Power Supply

The relay can be fitted with two different types of **power supply**:

Type 1) -	{	24V(-20%) / 110V(+15%) a.c.	Type 2) -	{	80V(-20%) / 220V(+15%) a.c.
		24V(-20%) / 125V(+20%) d.c.			90V(-20%) / 250V(+20%) d.c.

Before energizing the unit check that supply voltage is within the allowed limits.

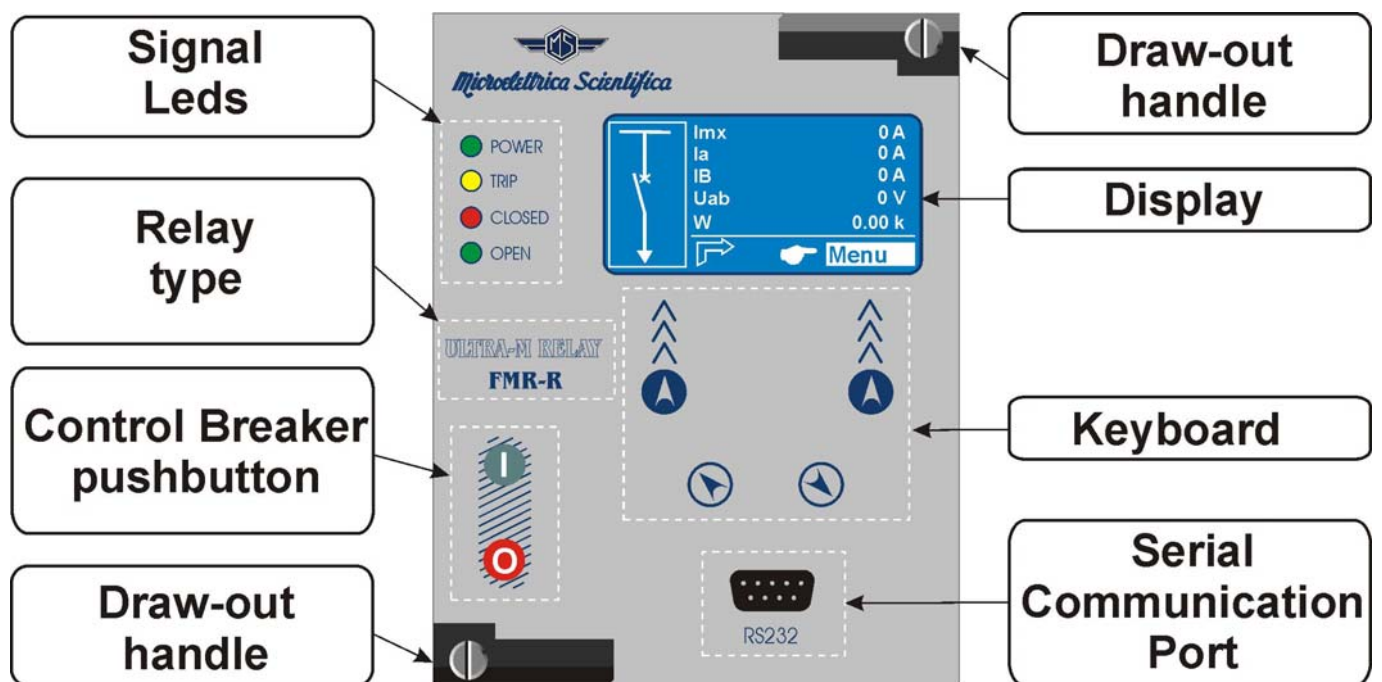FRONT PANEL


KEYBOARD AND DISPLAY

		Navigation menu	By these buttons the options showed in correspondence on the display are selected.
		Increase	These buttons are used to scroll the items of the different menus (Local Control, Measurements, Energy metering etc).
		Decrease	
		Open	these buttons (when enabled) operate Circuit Breaker Open/Close control (see § C/B Mngn)
		Close	







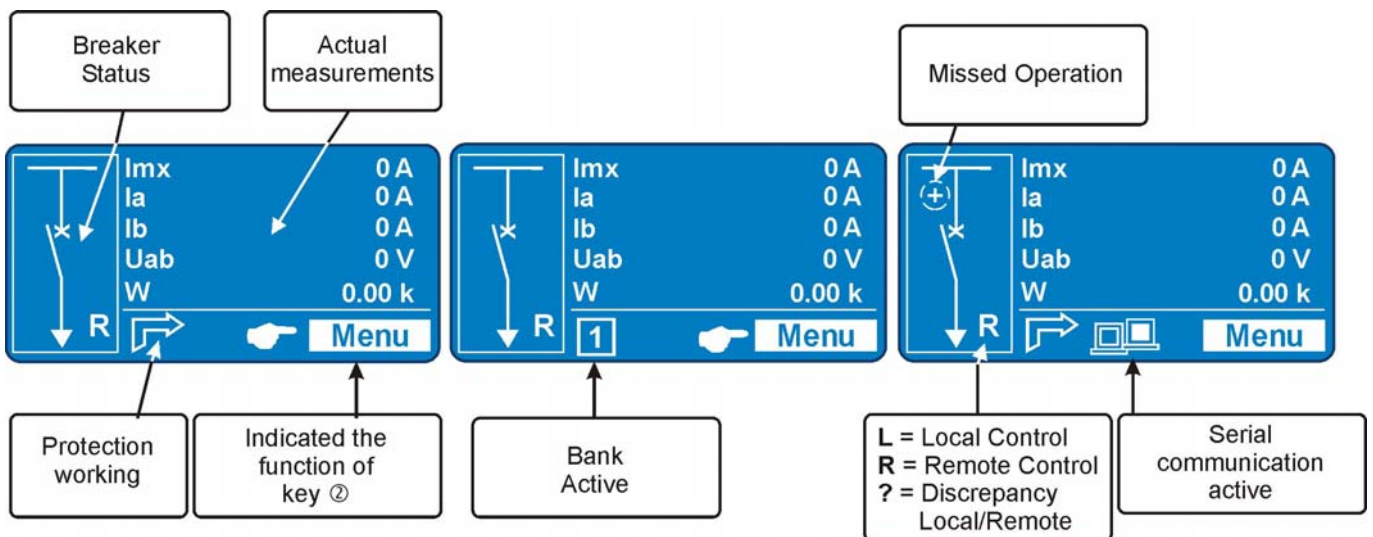




- By the key ② select the windows showing the ICONS of the available menus.
- By the key ③, ④ select the desired icon and enter by key ①
- The different elements can be selected by the key ③ and ④.
The details of the individual menus are given in the following paragraphs.

Display

The 128x64 pixel LCD display the available information (menu, etc.).




ICONS OF DISPLAY

	Cmd	Local Commands
	Measure	Actual Measurements
	Energy	Energy Measurements
	LTrip	Trip Recording
	Counter	Partial Counters (Resettable Counter)
	RCE	Event Recording
	Setting	Function Settings
	Sys	System Settings
	TimeDate	Time and Date
	Healthy	Diagnostic Information
	Info	Info Device

SIGNALIZATION

Four signal leds are provided:

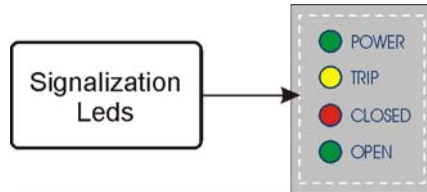

Green Led	POWER	<input type="checkbox"/> Illuminated	-	Relay working properly.
		<input type="checkbox"/> Flashing	-	Internal Relay Fault
Yellow Led	TRIP	<input type="checkbox"/> Off	-	No Trip
		<input type="checkbox"/> Illuminated	-	Trip occurred
		<input type="checkbox"/> Flashing	-	Function Timing
Reset from Illuminated status is manual				
Red Led	CLOSED	<input type="checkbox"/> Off	-	C/B Open
		<input type="checkbox"/> Illuminated	-	C/B Close
Green Led	OPEN	<input type="checkbox"/> Off	-	C/B Close
		<input type="checkbox"/> Illuminated	-	C/B Open
				Both Flashing Operation of Trip Circuit Supervision element.
<input type="checkbox"/> In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power supply is restored.				


Leds Manual Reset

For Leds' manual reset operate as follows:

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons. 	3		<ul style="list-style-type: none"> Select "LedClear". Press "Select" to execute the command. (See § Password).
2		<ul style="list-style-type: none"> Select icon "Cmd". Press "Select". 	4		<ul style="list-style-type: none"> When command has been executed the display shows "! Command Done";

Display of the last trip


Beside the signalization of the yellow led "Trip", indicating a generic function trip, the display shows a window indicating the last function that was tripped and the number of events that are stored in the memory. The display will show this window until the reset button or external reset are operated.

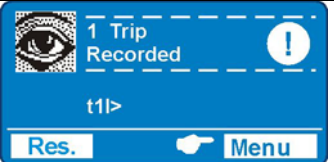1		<ul style="list-style-type: none">Press "Menu" to access to the main menu with icons.Press "Res." to erase visualization.Ex. "t1 >" (flashing) is the last trip.
----------	---	---

SIGNALIZATION MODULE (OPTIONAL)


The firmware can manage up to 53 signal leds, 4 led are available on the main relay module, the remaining are available on additional expansion modules (1 "Power" (green), 49 "Programmable" (red)) controlled via the CAN-Bus communication channel (external wired).

For Leds'

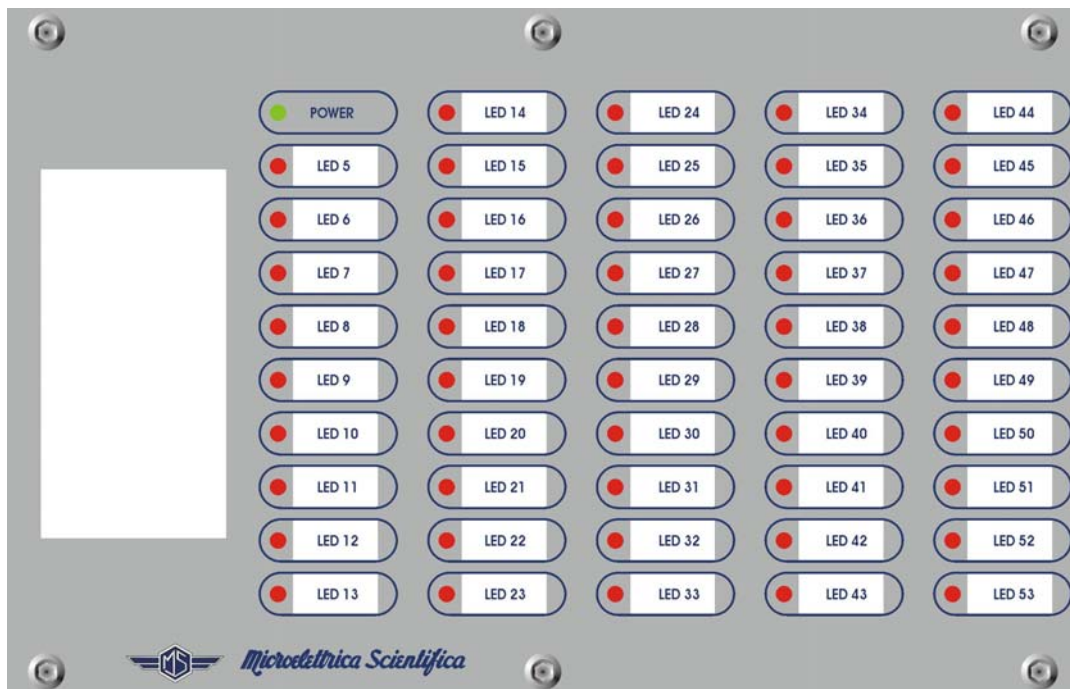


programming (only via MCom2) operate as follows:

- Open "MCom2" program and connect to the relay.
- Select "Change Windows" from "Menu" button

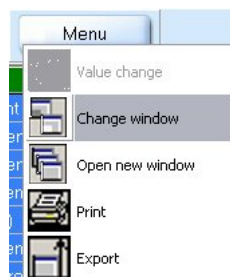

Select "Led Setting"

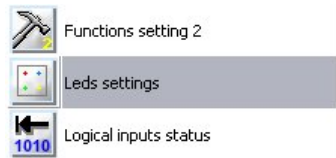

The window for led configuration will show:

ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	1 >

Name

Led name – for leds position see picture

Link enable

<i>Linked</i>	=	Enable to operate
<i>No Linked</i>	=	Disable

<i>Light-OFF</i>	=	Normal condition	See "Light Prog"
<i>Light-ON</i>	=	When cause appear led is illuminated	
<i>Flashing</i>	=	When cause appear led is flashing	

Status

Light Prog.

<i>Light-ON</i>	=	When cause appear led is illuminated
<i>Flashing</i>	=	When cause appear led is flashing

Funct. Mode

<i>Volatile</i>	=	When cause disappear led turn-off (Not memorized)
<i>Latched</i>	=	When cause disappear led remain illuminated (memorized)

Functions

Select the function assigned to specific led (see table 1).
 Its possible to configure only one function for each led.
 For configuration multiple functions use "UserVar" function.

Table 1

	SCDop	<i>Scada open breaker command</i>	
	SCDcl	<i>Scada close breaker command</i>	
	SCDop2	<i>Scada open breaker 2 command (generic command)</i>	
	SCDcl2	<i>Scada close breaker 2 command (generic command)</i>	
	SCDop3	<i>Scada open breaker 3 command (generic command)</i>	
	SCDcl3	<i>Scada close breaker 3 command (generic command)</i>	
	SCDop4	<i>Scada open breaker 4 command (generic command)</i>	
	SCDcl4	<i>Scada close breaker 5 command (generic command)</i>	
	DisRCL	<i>Scada disable reclose command</i>	
	EnRCL	<i>Scada enable reclose command</i>	
T>	Tal	<i>Alarm</i>	<i>Thermal Image T></i>
	T>	<i>Trip</i>	
1I>	1I>	<i>Start</i>	<i>First overcurrent element F50-51</i>
	t1I>	<i>Trip</i>	
2I>	2I>	<i>Start</i>	<i>Second overcurrent element F50-51</i>
	t2I>	<i>Trip</i>	
3I>	3I>	<i>Start</i>	<i>Third overcurrent element F50-51</i>
	t3I>	<i>Trip</i>	
1Io>	1Io>	<i>Start</i>	<i>First earth fault element F50N-51N</i>
	t1Io>	<i>Trip</i>	
2Io>	2Io>	<i>Start</i>	<i>Second earth fault element F50N-51N</i>
	t2Io>	<i>Trip</i>	
3Io>	3Io>	<i>Start</i>	<i>Third earth fault element F50N-51N</i>
	t3Io>	<i>Trip</i>	
1Is>	1Is>	<i>Start</i>	<i>First negative sequence current element F46</i>
	t1Is>	<i>Trip</i>	
2Is>	2Is>	<i>Start</i>	<i>Second negative sequence current element F46</i>
	t2Is>	<i>Trip</i>	
1U>	1U>	<i>Start</i>	<i>First overvoltage element F59</i>
	t1U>	<i>Trip</i>	
2U>	2U>	<i>Star</i>	<i>Second overvoltage element F59</i>
	t2U>	<i>Trip</i>	
1U<	1U<	<i>Start</i>	<i>First undervoltage element F27</i>
	t1U<	<i>Trip</i>	
2U<	2U<	<i>Start</i>	<i>Second undervoltage element F27</i>
	t2U<	<i>Trip</i>	
1f>	1f>	<i>Start</i>	<i>First overfrequency element F81</i>
	t1f>	<i>Trip</i>	
2f>	2f>	<i>Start</i>	<i>Second overfrequency element F81</i>
	t2f>	<i>Trip</i>	
1f<	1f<	<i>Start</i>	<i>First underfrequency element F81</i>
	t1f<	<i>Trip</i>	
2f<	2f<	<i>Start</i>	<i>Second underfrequency element F81</i>
	t2f<	<i>Trip</i>	
1Uo>	1Uo>	<i>Start</i>	<i>First zero sequence voltage element F59Uo</i>
	t1Uo>	<i>Trip</i>	
2Uo>	2Uo>	<i>Start</i>	<i>Second zero sequence voltage element F59Uo</i>
	t2Uo>	<i>Trip</i>	
U1<	U1<	<i>Start</i>	<i>Positive sequence undervoltage element F27U1</i>
	tU1<	<i>Trip</i>	
U2>	U2>	<i>Start</i>	<i>Negative sequence overvoltage element F59U2</i>
	tU2>	<i>Trip</i>	
Wi	tWi>	<i>Circuit breaker maintenance level</i>	
TCS	TCS	<i>Start</i>	<i>trip coil supervision</i>
	tTCS	<i>Trip</i>	

IRF	IRF	<i>Start</i>	<i>Internal Relay Failure</i>
	tIRF	<i>Trip</i>	
RT	RT	<i>Start</i>	<i>Element Remote Trip</i>
	tRT	<i>Trip</i>	

TripTimeR	<i>Trip time reduction active</i>		
RCLf	<i>Autoreclosure failed</i>		
RCLrun	<i>Autoreclosure in progress</i>		
TwRCL	<i>Trip not enabled for Automatic Reclosure</i>		
RCL-OK	<i>Successful Automatic Reclosure</i>		
ManCL-OK	<i>Manual Closure</i>		
BiRCL	<i>Presence Reclosure external lockout cause (input/CB Failure)</i>		
Gr1to2	<i>Switch to SetUp Group2</i>		
manOpCmd	<i>Manual Open Command</i>		
CL-Cmd	<i>Close Command</i>		
C/Bfail	<i>Circuit Breaker failure</i>		
L/Rdisc	<i>Local/Remote signal Discrepancy</i>		
BF	<i>Breaker Failure</i>		
Gen.Start	<i>Start Generic</i>		
Gen.Trip	<i>Trip Generic</i>		
UserTriggerOscillo	<i>User Variable for Oscillographic Recording</i>		
UserVar<0>	<i>User Variable</i>		
to			
UserVar<24>			
Vcc	<i>Reserved</i>		
Gnd	<i>Reserved</i>		
ResLog	<i>Reset signal logic</i>		
P1	<i>Push-button Open</i>		
P2	<i>Push-button Close</i>		
0.D1	<i>Digital Input "0.D1"</i>	<i>activated</i>	<i>Digital Input on Main Relay</i>
0.D1Not	<i>Digital Input "0.D1"</i>	<i>deactivated</i>	
to			
0.D4	<i>Digital Input "0.D4"</i>	<i>activated</i>	
0.D4Not	<i>Digital Input "0.D4"</i>	<i>deactivated</i>	
1.D1	<i>Digital Input "1.D1"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
1.D1Not	<i>Digital Input "1.D1"</i>	<i>deactivated</i>	
to			
1.D15	<i>Digital Input "1.D15"</i>	<i>activated</i>	
1.D15Not	<i>Digital Input "1.D15"</i>	<i>deactivated</i>	
2.D1	<i>Digital Input "2.D1"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
2.D1Not	<i>Digital Input "2.D1"</i>	<i>deactivated</i>	
to			
2.D15	<i>Digital Input "2.D15"</i>	<i>activated</i>	
2.D15Not	<i>Digital Input "2.D15"</i>	<i>deactivated</i>	

Example: Change settings for "ed5"

Change settings for "Led5" : "Enable", "Flashing", "Latched", "1I>".


Led 1	=	(see § Signalization on Main Relay)
Led 2	=	If we change the link of these leds, the label written on the front panel will not match anymore. are provided in signalization module
Led 3	=	
Led 4	=	
Led 5	=	
Led 53	=	

Main Windows:


ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	1I>
2	Led 2	Not linked	Light off	Light on	Volatile	1I>
3	Led 3	Not linked	Light off	Light on	Volatile	1I>
4	Led 4	Not linked	Light off	Light on	Volatile	1I>
5	Led 5	Not linked	Light off	Light on	Volatile	1I>

"Enable"

Select "Link enable" related to "Led 5" and press right button on mouse, select "Value change":

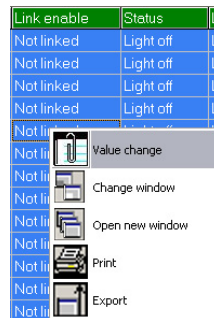


Select "Linked" from combo box and press "OK" (if Password is request, see § Password):

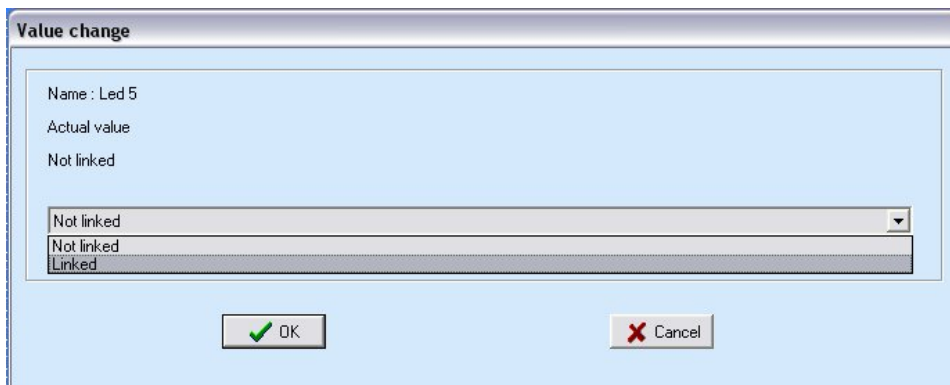


“Flashing”

Select **“Light prog”** related to Led 5 and press right button on mouse, select **“Value change”**:

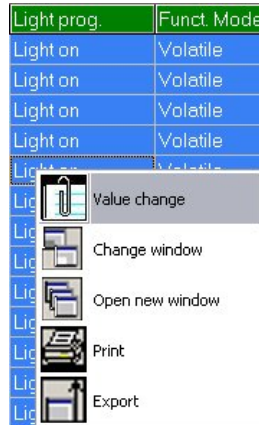

Select **“Flashing”** from combo box and press **“OK”** (if Password is request, see § Password):

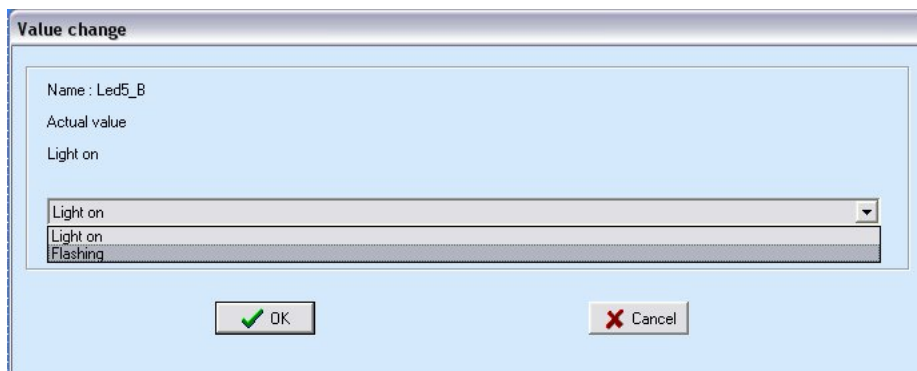

"Latched"

Select "**Latched**" related to Led 5 and press right button on mouse, select "Value change":

Funct. Mode	Functions
Volatile	1 >
Volatile	1 >
Volatile	1 >
Volatile	1 >
Value change	
Change window	
Open new window	
Print	
Export	


Select "**Latched**" from combo box and press "OK" (if Password is request, see § Password):

Value change


Name : Led5_L
Actual value
Volatile

“Functions”

Select “**Functions**” related to Led 5 and press right button on mouse, select “Value change”:

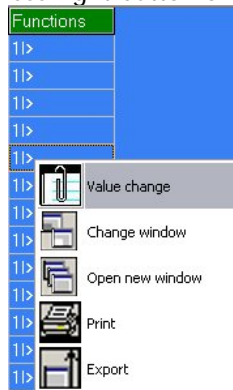

Select “**11>**” from combo box and press “OK” (if Password is request, see § Password):

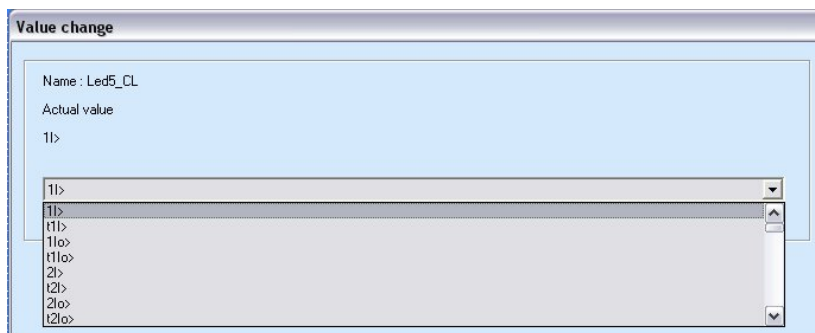





LOCAL COMMANDS (CMD)

"**Cmd**" allow to operate from relay front face controls like Thermal Memory reset, Leds reset, etc.




Menu			Description	Password
→	Led	Clear	Reset of signal Leds	No
→	Relays	Clear	Manual reset of output relays	No
→	Breaker	Close	Manual C/B closing (conditioned by Password)	Yes
→	Breaker	Open	Manual C/B opening (conditioned by Password)	Yes
→	Event	Clear	Reset of all Events recorded	Yes
→	HistFail	Clear	Reset of Internal Failure Historic records	Yes
→	Reset	Term	Reset to zero of the accumulations relevant to Thermal Image and Interruption Energy.	Yes
→	Leds	Test	Signal Leds test	No
→	Force	Osc	Issue a trigger on oscillographic recording	Yes

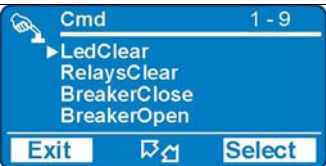To operate one command by the Front Face Keyboard, proceed as follows (Led Reset in the present example).

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select "Cmd" icon with pushbutton "Increase" or "Decrease". Press "Select" for access.
3		<ul style="list-style-type: none"> Select with pushbutton "Increase" or "Decrease" the menu "LedClear". Press "Select" to execute the command. (if Password is request, see § Password).
4		<ul style="list-style-type: none"> When command has been executed the display shows "! Command Done"; go to "3".

MEASURE

Real time values as measured during the normal operation.

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select "Measure" icon with pushbutton "Increase" or "Decrease". Press "Select" for access.
3		<ul style="list-style-type: none"> Scroll the menu "Measure" with pushbutton "Increase" or "Decrease" to display the measurement. Press "Exit" to go to the main menu.

→ Imx	(0 ÷ 9999)	A	Largest phase current (Ia, Ib, Ic).	
→ Ia	(0 ÷ 9999)	A	Phase A current	(R.M.S. ampere)
→ Ib	(0 ÷ 9999)	A	Phase B current	(R.M.S. ampere)
→ Ic	(0 ÷ 9999)	A	Phase C current	(R.M.S. ampere)
→ Io	(0 ÷ 9999)	A	Zero Sequence Current	(fundamental frequency value 3Io)
→ I1	(0.00 ÷ 99.99)	In	Positive sequence current	
→ I2	(0.00 ÷ 99.99)	In	Negative sequence current	
→ Frq	(0.00 ÷ 99.99)	Hz	Frequency	
→ Uan	(0 ÷ 999999)	V	Phase Voltage "A-N"	(R.M.S. value)
→ Ubn	(0 ÷ 999999)	V	Phase Voltage "B-N"	(R.M.S. value)
→ Ucn	(0 ÷ 999999)	V	Phase Voltage "C-N"	(R.M.S. value)
→ Uab	(0 ÷ 999999)	V	Phase-to-phase Voltage "A-B"	(R.M.S. value)
→ Ubc	(0 ÷ 999999)	V	Phase-to-phase Voltage "B-C"	(R.M.S. value)
→ Uca	(0 ÷ 999999)	V	Phase-to-phase Voltage "C-A"	(R.M.S. value)
→ Uo	(0 ÷ 999999)	V	Zero Sequence Voltage	(fundamental frequency value 3Vo)
→ V1	(0.00 ÷ 99.99)	Vn	Positive Sequence Voltage	
→ V2	(0.00 ÷ 99.99)	Vn	Negative Sequence Voltage	
→ PhA	(0 ÷ 359)	°	Phase angle "Ia ^ Uan"	
→ PhB	(0 ÷ 359)	°	Phase angle "Ib ^ Ubn"	
→ PhC	(0 ÷ 359)	°	Phase angle "Ic ^ Ucn"	
→ Ph0	(0 ÷ 359)	°	Phase angle "Io ^ Uo"	
→ W	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	k	Three Phase Active Power	(kW)
→ VAR	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	k	Three Phase Reactive Power	(kVAR)
→ VA	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	k	Three Phase Apparent Power	(kVA)
→ Cos	(0.000 ÷ 1.000)	-	Power Factor	
→ Tem	(0 ÷ 9999)	%T	Thermal status as % of the full load continuous operation temperature Tn	
→ Wir	(100 ÷ 0)	%W	Amount still remaining of permissible interruption energy before Circuit Breaker maintenance is requested.	

ENERGY

Real time energy measurements

<i>Display</i>	→	+ kWh	(0 – 9999999)	Exported Active Energy
	→	- kWh	(0 – 9999999)	Imported Active Energy
	→	+ kRh	(0 – 9999999)	Exported Reactive Energy
	→	- kRh	(0 – 9999999)	Imported Reactive Energy

<i>Erase</i>	→	All Energy counters are cleared
--------------	---	---------------------------------

When the measurement exceed "9999999" the counters restart from "0".




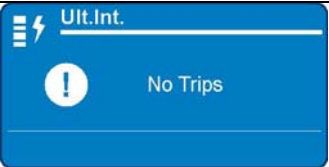

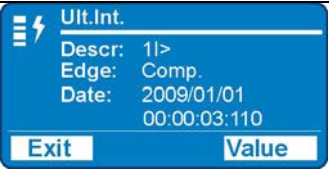
1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select "Energy" icon with pushbutton "Increase" or "Decrease". Press "Select" for access.
3		<ul style="list-style-type: none"> Select "Display" with pushbutton "Increase" or "Decrease". Press "Select" for access.
4		<ul style="list-style-type: none"> Display of Real time Energy measurements. Press "Exit" to go back to the level "3".
5		<ul style="list-style-type: none"> Select "Erase" with pushbutton "Decrease" to clear all reading. Press "Select". (if Password is request, see § Password).
6		<ul style="list-style-type: none"> When command has been execute the display shows "! Command Done"; to go to the level "5". Press "Exit" to go back to the main menu.




TRIP RECORDING (LTRIP)

Display of the function which caused the tripping of the relay plus values of the measurement at the moment of tripping. The last 10 events are recorded.

The memory buffer is refreshed at each new relay tripping (FIFO logic).

Display	→	Reading of recorded Trips.
Erase	→	Clear all Trip recorded.

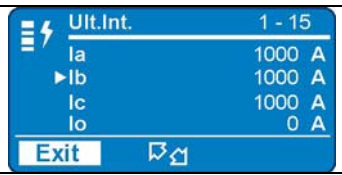1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select "L Trip" icon with pushbutton "Increase" or "Decrease". Press "Select" for access.
3		<ul style="list-style-type: none"> Select "Display" with pushbutton "Increase" or "Decrease". Press "Select" for access. For "Erase" go to "8"
4		<ul style="list-style-type: none"> If no trip is recorded the display shows "! No Trips".
5		<ul style="list-style-type: none"> If any trip was recorded, select "View" to display the chronological list of the records. By the keys "Increase" or "Decrease" select the date of the record to be checked.
6		<ul style="list-style-type: none"> Will be shown: <ul style="list-style-type: none"> "Descr" the function that caused the event (Example: t1I> = Trip) "Edge" if the function was tripped (Rise) or reset (Fall) "Date", date of trip, year/month/day, hour:minutes:seconds:milliseconds Press "Value", for reading the value of input quantities on tripping.


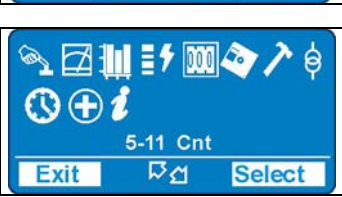


7		<ul style="list-style-type: none">• Scroll with pushbuttons "<i>Increase</i>" or "<i>Decrease</i>" the available measurements.• Select "<i>Exit</i>" to go back to "5" for another selection, or "2" go back to the main menu.
8		<ul style="list-style-type: none">• Select "<i>Erase</i>" with button "<i>Decrease</i>".• Press "<i>Select</i>" to execute the commands; All Trips recorded are erased. (if Password is request, see § Password).
9		<ul style="list-style-type: none">• When command has been executed the display shows "<i>! Command Done</i>";• Press "<i>Exit</i>" to go back to the main menu.

COUNTERS

Counters of the number of operations for each of the relay functions.

By the interface program "MSCom 2" it is possible to individually reset the counters and set an initial starting number.

Display				
T>	0	Operations counters	Thermal Image	
1I>	0	Operations counters	First	overcurrent element
2I>	0	Operations counters	Second	overcurrent element
3I>	0	Operations counters	Third	overcurrent element
1Io>	0	Operations counters	First	Earth Fault element
2Io>	0	Operations counters	Second	Earth Fault element
3Io>	0	Operations counters	Third	Earth Fault element
1Is>	0	Operations counters	First	Negative Sequence element
2Is>	0	Operations counters	Second	Negative Sequence element
1U>	0	Operations counters	First	Overvoltage element
2U>	0	Operations counters	Second	Overvoltage element
1U<	0	Operations counters	First	Undervoltage element
2U<	0	Operations counters	Second	Undervoltage element
1f>	0	Operations counters	First	Overfrequency element
2f>	0	Operations counters	Second	Overfrequency element
1f<	0	Operations counters	First	Underfrequency element
2f<	0	Operations counters	Second	Underfrequency element
1Uo>	0	Operations counters	First	Zero Sequence overvoltage element
2Uo>	0	Operations counters	Second	Zero Sequence overvoltage element
IRF	0	Operations counters	Internal Relay Fault	
U2>	0	Operations counters	Negative	Sequence overvoltage element
U1<	0	Operations counters	Positive	Sequence undervoltage element
TCS	0	Operations counters	Trip Circuit Supervision	
BrkF	0	Operations counters	Breaker failure to open	
Wi	0	Operations counters	Circuit Breaker maintenance alarm	
RT	0	Operations counters	Remote Trip	
RCL f	0	Operations counters	Autoreclosure Failed	
TwRCL	0	Operations counters	Trip not enabled for initiating Automatic Reclosure	
RCL ok	0	Operations counters	Autoreclosure successful	
MCL ok	0	Operations counters	Manual Reclosure successful	
RCL BL	0	Operations counters	Autoreclosure blocked (Lock-Out)	
Aut Op	0	Operations counters	Automatic C/B Openings	
Aut CL	0	Operations counters	Automatic C/B Closings	
Man Op	0	Operations counters	Manual C/B Openings	
Man CL	0	Operations counters	Manual C/B Closings	
OvrOp	0	Operations counters	Overall C/B Openings total (Man+Aut)	
OvrCL	0	Operations counters	Overall C/B Closings total (Man+Aut)	

1		• Press " Menu " for access to the main menu with icons.
2		• Press " Counter " for access.
3		• Press " Display " for access.
4		• Display of the number of operations of each individual function. • With pushbuttons " Increase " or " Decrease " scroll the parameters • Press " Exit " go back to "3".




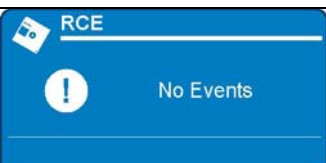



RCE (RECORDER CHRONOLOGIC EVENTS)


Display of the function which caused any of the following events: - *Status change of digital Inputs/Outputs.* - *Start of protection functions – Trip of protection function – Function reset.*

The last 100 events are recorded.

The memory buffer is updated at each new event.

<i>Display</i>	→	Reading events recorded.
<i>Erase</i>	→	Clear all events recorded.

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select "RCE" icon with pushbutton "Increase" or "Decrease". Press "Select" for access.
3		<ul style="list-style-type: none"> Select "Display" with pushbutton "Increase" or "Decrease". Press "Select" for access. For "Erase" go to "7"
4		<ul style="list-style-type: none"> If no event is recorded the display shows message "! No Events".
5		<ul style="list-style-type: none"> If any event was recorded, select "View" to display the chronological list of the records. By the keys "Increase" or "Decrease" select the date of the record to be checked.
6		<ul style="list-style-type: none"> Will be shown: <ul style="list-style-type: none"> "Descr" the function that caused the event (Example: 1l> = Start, t1l> = Trip) "Edge" if the function was tripped (Rise) or reset (Fall) "Date", date of trip, year/month/day, hour:minutes:seconds:milliseconds
7		<ul style="list-style-type: none"> Select "Erase" with button "Decrease". Press "Select" to execute the commands; All Events recorded are erased. (if Password is request, see § Password).

- 8
- 
- When command has been execute the display shows "**! Command Done**";
 - Press "**Exit**" to go back to the main menu.

Events on display

Functions	Events Displayed	Events Description MScom2		Status	
				Rise	Fall
T>	Tal	Alarm	Thermal Image T>	Rise	
	T>	Trip		Rise	Fall
1I>	1I>	Start	First overcurrent element F50-51	Rise	
	t1I>	Trip		Rise	Fall
2I>	2I>	Start	Second overcurrent element F50-51	Rise	
	t2I>	Trip		Rise	Fall
3I>	3I>	Start	Third overcurrent element F50-51	Rise	
	t3I>	Trip		Rise	Fall
1Io>	1Io>	Start	First earth fault element F50N-51N	Rise	
	t1Io>	Trip		Rise	Fall
2Io>	2Io>	Start	Second earth fault element F50N-51N	Rise	
	t2Io>	Trip		Rise	Fall
3Io>	3Io>	Start	Third earth fault element F50N-51N	Rise	
	t3Io>	Trip		Rise	Fall
1Is>	1Is>	Start	First negative sequence current element F46	Rise	
	t1Is>	Trip		Rise	Fall
2Is>	2Is>	Start	Second negative sequence current element F46	Rise	
	t2Is>	Trip		Rise	Fall
1U>	1U>	Start	First overvoltage element F59	Rise	
	t1U>	Trip		Rise	Fall
2U>	2U>	Star	Second overvoltage element F59	Rise	
	t2U>	Trip		Rise	Fall
1U<	1U<	Start	First undervoltage element F27	Rise	
	t1U<	Trip		Rise	Fall
2U<	2U<	Start	Second undervoltage element F27	Rise	
	t2U<	Trip		Rise	Fall
1f>	1f>	Start	First overfrequency element F81	Rise	
	t1f>	Trip		Rise	Fall
2f>	2f>	Start	Second overfrequency element F81	Rise	
	t2f>	Trip		Rise	Fall
1f<	1f<	Start	First underfrequency element F81	Rise	
	t1f<	Trip		Rise	Fall
2f<	2f<	Start	Second underfrequency element F81	Rise	
	t2f<	Trip		Rise	Fall
1Uo>	1Uo>	Start	First zero sequence voltage element F59Uo	Rise	
	t1Uo>	Trip		Rise	Fall
2Uo>	2Uo>	Start	Second zero sequence voltage element F59Uo	Rise	
	t2Uo>	Trip		Rise	Fall
U1<	U1<	Start	Positive sequence undervoltage element F27U1	Rise	
	tU1<	Trip		Rise	Fall
U2>	U2>	Start	Negative sequence overvoltage element F59U2	Rise	
	tU2>	Trip		Rise	Fall
Wi	tWi>	Circuit breaker maintenance level		Rise	
TCS	TCS	Start	trip coil supervision	Rise	
	tTCS	Trip		Rise	Fall
IRF	IRF	Start	Internal Relay Failure	Rise	
	tIRF	Trip		Rise	
RT	Start RT	Start	Element Remote Trip	Rise	
	RemTrip	Trip		Rise	

Functions	Events Displayed	Events Description MScom2	Status	
	79X	<i>Reclosure command</i>	Rise	
	FR	<i>Reclosure failure</i>	Rise	
	CRC	<i>Recloser cycle in progress</i>	Rise	
	TWR	<i>Trip without reclosure</i>	Rise	
	RecIDone	<i>Reclosure succesfull</i>	Rise	
	StartTnExt	<i>Start reclaim time [TrExt] on external lockout</i>	Rise	
	StopTrExt	<i>Stop reclaim time [TrExt] on external lockout</i>	Rise	
	RCLInterr.	<i>Reclosure interrupted by setup cause</i>	Rise	
	CH-Riusc.	<i>Manual close succesfull</i>	Rise	Fall
	BiRCL	<i>Presence reclosure external lockout cause (input/CB Failure)</i>	Rise	
	StartR1	<i>Start first reclosure</i>	Rise	
	StartR2	<i>Start second reclosure</i>	Rise	
	StartR3	<i>Start third reclosure</i>	Rise	
	StartR4	<i>Start fourth reclosure</i>	Rise	
	StartTr-d1	<i>Start Reclaim and Discrimination time on first closure</i>	Rise	
	StartTr-d2	<i>Start Reclaim and Discrimination time on second closure</i>	Rise	
	StartTr-d3	<i>Start Reclaim and Discrimination time on third closure</i>	Rise	
	StartTr-d4	<i>Start Reclaim and Discrimination time on fourth closure</i>	Rise	
	CRIntScDis	<i>Cycle blocked by not reclosing trip</i>	Rise	
	CRIntApInt	<i>Cycle blocked by intentional C/B open</i>	Rise	
	CRIntBinp	<i>Cycle interrupted by external cause</i>	Rise	
	CRCInChCB	<i>Cycle blocked by intentional C/B close</i>	Rise	
	StartRChM	<i>Start manual reclosure cycle</i>	Rise	
	FrLTr	<i>Trip in last reclaim time available</i>	Rise	
	Gr1-Gr2	<i>Switch to setup Bank 2</i>	Rise	Fall
	RCLInterr	<i>Reclosure interrupt by persistent fault</i>	Rise	
	SeqC	<i>Sequence coordination (Start mew/next RCL cycle)</i>	Rise	
	L/Rdisc.	<i>Local/Remote signal Discrepancy</i>	Rise	
	manOpKey	<i>Circuit Breaker intentional open by Key</i>	Rise	
	manOpLocC	<i>Circuit Breaker intentional open by local command</i>	Rise	
	manOpRemC	<i>Circuit Breaker intentional open by remote command</i>	Rise	
	manOpExtIn	<i>Circuit Breaker intentional open by external input</i>	Rise	
	ExterManOp	<i>Circuit Breaker intentional external open</i>	Rise	
	manCIKey	<i>Circuit Breaker intentional close by Key</i>	Rise	
	manCILocC	<i>Circuit Breaker intentional close by local command</i>	Rise	
	manCIRemC	<i>Circuit Breaker intentional close by remote command</i>	Rise	
	manCIExtIn	<i>Circuit Breaker intentional close by external input</i>	Rise	
	ExterManCh	<i>Circuit Breaker intentional external close</i>	Rise	
	CB-Fail	<i>Circuit Breaker failure</i>	Rise	Fall
	0.D0	<i>Digital Input</i>	Rise	Fall

	0.D4			
	1.D1	<i>Digital input</i>	Rise	Fall

	1.D15			
	2.D1	<i>Digital input</i>	Rise	Fall

	2.D15			
	0.R1	<i>Output relay</i>	Rise	Fall



Téléphone : 01 48 15 09 09
www.microener.com

**OPERATING MANUAL
FEEDER MANAGER with
AUTORECLOSING RELAY
UFM-R-PL**

MO N°:
12JMC0591626

Rev. **A**
Page 32 / 122

	0.R6			
	1.R1	<i>Output relay</i>	Rise	Fall

	1.R14			
	2.R1	<i>Output relay</i>	Rise	Fall

	2.R14			
	UpDateMon	<i>Update Monitor</i>	Rise	Fall
	IPU boot	<i>IPU boot</i>	Rise	

SYS (SYSTEM PARAMETERS)


Setting of system parameters.

CT&PTs	Phase CT	Prim.	→	1000	A	(1 ÷ 9999)	step	1	A	
		Sec.	→	1	A	(1 / 5)				(1)
	PT (Ph-Ph)	Prim.	→	10.00	kV	(0.10 ÷ 500.00)	step	0.01	kV	
		Sec.	→	100	V	(50 ÷ 150)	step	1	V	(2)(3)
	Neut. CT	Prim.	→	1000	A	(1 ÷ 9999)		1	A	
		Sec.	→	1	A	(1 / 5)				(1)

Nom. Val. (System Rated Values)	→	Freq.	50	Hz	(50 / 60)			
	→	In	500	A	(1 ÷ 9999)		1	A
	→	Un	10.00	kV	(0.10 ÷ 500.00)		0.01	kV

Setup Group	→	Group	1		(1 / 2)
--------------------	---	--------------	---	--	---------

(1) Move the switch in the corresponding founding to the required input current as herebelow shorted.

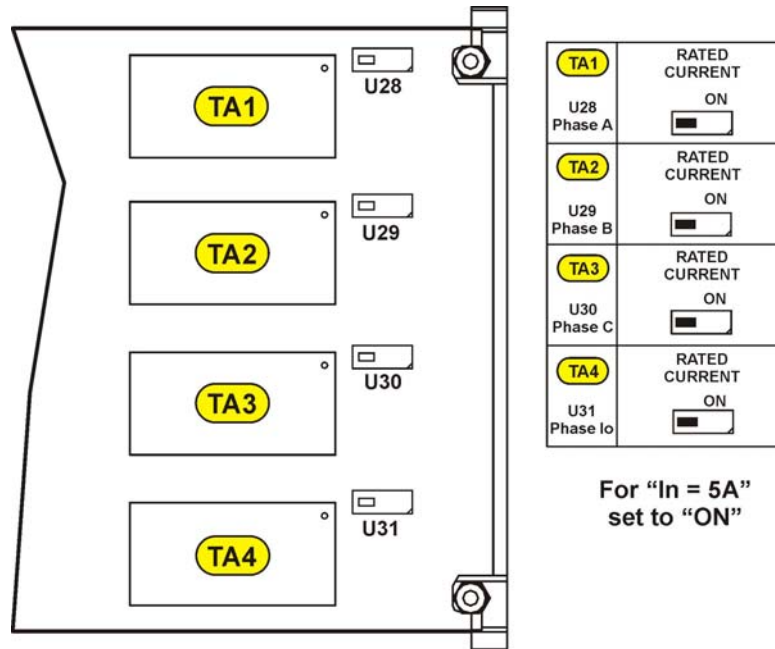





(2) Set the value of the phase-to-phase PT voltage.

$$\text{Example: Example : TV } \frac{10000 : \sqrt{3}}{100 : \sqrt{3}} \rightarrow \text{ set } \frac{\text{Prim.} = 10000}{\text{Sec.} = 100}$$




(3) Zero sequence voltage input is to be supplied by three system P.Ts. Y/Open Delta connected; the open delta connected secondary are rated 1/3 of the phase-to-phase secondary voltage (Example: 10000 / 100:√3 / 100:3).

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select "Sys" icon with pushbuttons "Increase" or "Decrease". Press "Select" for access.
3		<ul style="list-style-type: none"> Select "CT&PTs". Press "Select" for access.
4		<ul style="list-style-type: none"> Select "Phase CT". Press "Select" for access.
5		<ul style="list-style-type: none"> Select "Prim." to modify the primary value of Phase CT, or press "Decrease" and select "Sec." to modify the secondary value of Phase CT. Press "Modify" to modify the parameter. (if Password is request, see § Password).
6		<ul style="list-style-type: none"> The value appear as bold figure. Use pushbuttons "Increase" or "Decrease" to set the value. Press "Write" to confirm the value
7		<ul style="list-style-type: none"> The value is now set. To set a new value return to the point "5". Press "Exit".
8		<ul style="list-style-type: none"> The display show "Confirm the change?". Choose "Yes" to convalidate the changes. Choose "No" to not confirm the changes. After set confirmation (or non confirmation) the display goes back to point "4".

9	 <div style="float: right; text-align: right;">Sys 2 - 3</div> <p>CT&PTs ▶ Nom.Val. SetUp Group</p> <div style="display: flex; justify-content: space-between; border-top: 1px solid white; padding-top: 2px;"> Exit ↩ Select </div>	<ul style="list-style-type: none"> To modify the input quantities, select with pushbutton "<i>Decrease</i>", "<i>Nom.Val.</i>". Press "<i>Select</i>" for access.
10	 <div style="float: right; text-align: right;">Sys 1 - 5</div> <p>Freq ▶ 50 Hz In 500 A Un 10.00 kV</p> <div style="display: flex; justify-content: space-between; border-top: 1px solid white; padding-top: 2px;"> Exit ↩ Modify </div>	<ul style="list-style-type: none"> To set the input quantities see points "5-6-7-8" .
11	 <div style="float: right; text-align: right;">Sys 3 - 3</div> <p>CT&PTs Nom.Val. ▶ SetUp Group</p> <div style="display: flex; justify-content: space-between; border-top: 1px solid white; padding-top: 2px;"> Exit ↩ Select </div>	<ul style="list-style-type: none"> To select the Active Bank of setting press "<i>SetUp Group</i>".
12	 <div style="float: right; text-align: right;">Sys 1 - 1</div> <p>▶ Group 1</p> <div style="display: flex; justify-content: space-between; border-top: 1px solid white; padding-top: 2px;"> Exit ↩ Select </div>	<ul style="list-style-type: none"> Select with pushbuttons "<i>Increase</i>" or "<i>Decrease</i>", the Bank to be Active.

SETTINGS

Two complete Goup of settings of the programmable variables are available in the "**SETTING**" menu.
 Both "Group #1" and "Group #2" include the hereunder listed variables.

1			Indicates the Setting Group that is actually being modified.
			This symbol indicates that the function is enabled; symbol missing indicates that the function is disabled.

→ Comunic.	Serial communication parameters
→ LCD	Visualization parameters
→ T>	Thermal Image
→ 1I>	First overcurrent Element
→ 2I>	Second overcurrent Element
→ 3I>	Third overcurrent Element
→ 1Io>	First Earth Fault Element
→ 2Io>	Second Earth Fault Element
→ 3Io>	Third Earth Fault Element
→ 1Is>	First Negative Sequence Current Element
→ 2Is>	Second Negative Sequence Current Element
→ 1U>	First Overvoltage Element
→ 2U>	Second Overvoltage Element
→ 1U<	First Undervoltage Element
→ 2U<	Second Undervoltage Element
→ 1f>	First Overfrequency Element
→ 2f>	Second Overfrequency Element
→ 1f<	First Underfrequency Element
→ 2f<	Second Underfrequency Element
→ 1Uo>	First Zero Sequence Voltage Element
→ 2Uo>	Second Zero Sequence Voltage Element
→ U1<	Positive Sequence Undervoltage Element F27U1
→ U2>	Negative sequence Overvoltage Element F59U2 or F47
→ Wi	Amount of Energy to reach the C/B maintenance level
→ TCS	Setting variables for Trip Circuit Supervision
→ IRF	Internal Relay Fault
→ RT	Remote Trip
→ TripTimeRd	Trip time Reduction
→ AutomRecl.	Automatic Reclosure
→ CB Manage	C/B command Local / Remote setting
→ Oscillo	Setting variables for Oscillographic recording
→ BreakerFail	Setting variables for Breaker Failure detection
→ ExtReset	Configuration for external reset input

Modifying the setting of variables

To modify any variable setting by the keyboard proceed as follows:
 (example: change setting of element "1I>", from "Is 4.000 In" to "Is 3.500 In")

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons. 	6		<ul style="list-style-type: none"> The value appear as bold figure.
2		<ul style="list-style-type: none"> Select icon "Setting" by pushbuttons "Increase" or "Decrease". Press "Select". 	7		<ul style="list-style-type: none"> Set new values pushbuttons "Increase" or "Decrease" buttons Press "Write".
3		<ul style="list-style-type: none"> Select by pushbuttons "Increase" or "Decrease" the parameter "1I>". Press "Select". 	8		<ul style="list-style-type: none"> If the change of parameters is completed, press "Exit".
4		<ul style="list-style-type: none"> Select by buttons "Increase" or "Decrease" the menu "Oper.Levels". Press "Select". 	9		<ul style="list-style-type: none"> "Yes" confirm all changes. "No" voids all the changes.
5		<ul style="list-style-type: none"> The arrow aside "Is" shows the parameter selected for changing Press "Modify". If Password is request, see § Password 	10		<ul style="list-style-type: none"> The relay returns to point "4".

Password

The password is requested any time the user wishes to modify any password protected parameter (example "1l>" menu "Setting").

The factory default password is "1111".

The password is only modifiable with "MSCom 2" software (see Manual "MSCom 2").

When password is requested, proceed as follows:

1		<ul style="list-style-type: none"> Use the key and "Increase" and "Decrease" and set the first digit of password. 	5		<ul style="list-style-type: none"> Use the key or "Increase" or "Decrease" to set the third digit.
2		<ul style="list-style-type: none"> Press "Next" to validate and go to the next digit. 	6		<ul style="list-style-type: none"> Press "Next" to validate and go to the next digit.
3		<ul style="list-style-type: none"> Use the key or "Increase" or "Decrease" to set second digit. 	7		<ul style="list-style-type: none"> Use the key or "Increase" or "Decrease" to set the fourth digit.
4		<ul style="list-style-type: none"> Press "Next" to validate and go to the next digit. 	8		<ul style="list-style-type: none"> Press "Next" to validate and go to modify the next parameter.
By key " Prev " go back to previous digit.					
The password validity expires 60 sec after the last setting modification or as soon as you go back to the main menu					
1		<ul style="list-style-type: none"> If set the incorrect password the display shows "! Wrong code". 	2		<ul style="list-style-type: none"> The display will repeat the initial interrogation

Menu: Comm. (Communication parameters)

<i>Options</i>	→	BRLoc	38400	[9600 / 19200 / 38400 / 57600]
	→	BRRem	19200	[9600 / 19200 / 38400]
	→	PRRem	Modbus	[Modbus / IEC103]

Node Address	→	Indir.	1	[1 ÷ 255]
---------------------	---	---------------	---	-----------


Description of variables

<input type="checkbox"/> BRLoc	:	RS232 local (Front Panel) serial communication speed
<input type="checkbox"/> BRRem	:	RS485 remote (Rear terminal block) serial communication speed
<input type="checkbox"/> PRRem	:	Protocol for remote (Rear terminal block) serial communication RS485
<input type="checkbox"/> Indir.	:	Identification number for the connection on serial communication bus

Front Panel serial communication port (RS232)

A D-Sub, -pin female socket is available on Relay's front face for connection to the local RS232 serial communication line. Through this port - and by the interface program available from Microelettrica Scientifica S.p.A. (MCom 2 for Windows 98/ME/2000/XP) – it is possible to connect a Personal Computer to download all available information, operate any control and program the relay; the protocol used is " Modbus RTU".

Cable for direct connection of Relay to Personal Computer

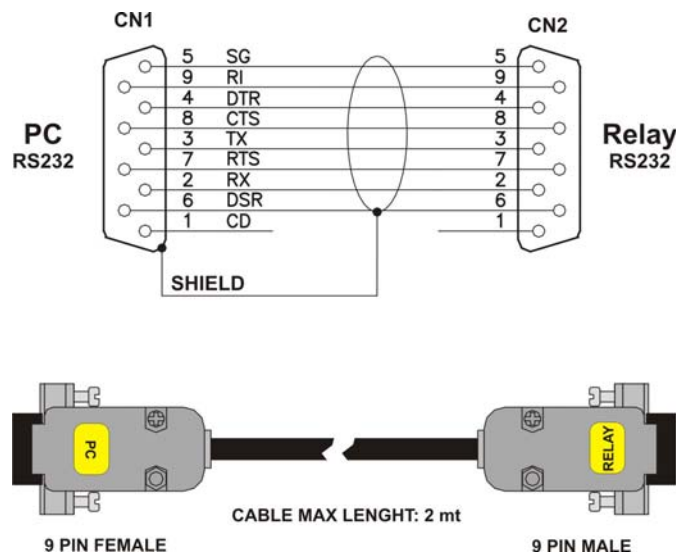

Main serial communication port (RS485)

From the Relay's back terminal board, a RS485 ports is available for communication with SCADA system with Protocol Modbus RTU or IEC60870-5-103 (selectable).

The communication interface allows to program all settings, operate all commands and download all information and records.

The physical connection can be via a normal pair of wires (RS485) or, on request, via fiber optic.

Menu: LCD

<i>Options</i>	→	Lang	English	[English / Loc.Lang]
	→	Light	Autom.	[Autom. / On]
	→	Row1	Imx	[Imx / Ia / Ib / Ic / Io / I1 / I2 / Frq / Uan / Ubn / Ucn / Uab / Ubc / Uca / Uo / V1 / V2 / Pha / Phb / Phc / Ph0 / W / VAr / VA / Cos / Tem / Wir / LocRm / RCI / LCR / Empty]
	→	Row2	Ia	
	→	Row3	Ib	
	→	Row4	Uab	
	→	Row5	W	
	→	Leds	4	

Description of variables

<input type="checkbox"/>	Lang	:	Set Language						
<input type="checkbox"/>	Light	:	Set Display backlight						
<input type="checkbox"/>	Row1	:	Choosing the variable to be displayed in the rows on main menu						
<input type="checkbox"/>	Row2	:							
<input type="checkbox"/>	Row3	:							
<input type="checkbox"/>	Row4	:							
<input type="checkbox"/>	Row5	:							
<input type="checkbox"/>	Leds	:	Configuration Leds number						
			4	:	4	Base leds only			
			11	:	4	Base leds only	+	7	configurable leds
			18	:	4	Base leds only	+	14	configurable leds
			25	:	4	Base leds only	+	21	configurable leds
			32	:	4	Base leds only	+	28	configurable leds
			39	:	4	Base leds only	+	35	configurable leds
			46	:	4	Base leds only	+	42	configurable leds
			53	:	4	Base leds only	+	49	configurable leds

This menu allows to customize the Language and the Display's backlight.

The standard languages are English and Italian. On request, other languages can be loaded (French, German, etc..).

The Display backlight can be programmed always on "ON" or switched-on "Automatically" for a few second at any operation of the keyboard "Auto".

Example: set Local Language.

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons. 	5		<ul style="list-style-type: none"> Select "Loc.Lang". Press "Write". If Password is requested, see § Password
2		<ul style="list-style-type: none"> Select icon "Setting" by pushbuttons "Increase" or "Decrease". Press "Select". 	6		<ul style="list-style-type: none"> Press "Exit".
3		<ul style="list-style-type: none"> Select "Group 1" or "Group 2". Select "LCD". Select "Options". Press "Select". 	7		<ul style="list-style-type: none"> "Yes" confirms all changes. "No" void all changes.
4		<ul style="list-style-type: none"> Select "Lang". Press "Modify". 	8		<ul style="list-style-type: none"> After set confirmation the display shows "Please Wait".

Function: T> (Thermal Image F49)

<i>Status</i>	→	Enab.	No		[No / Yes]			
<i>Options</i>	→	OPMOD	I1 I2		[I1 I2 – I _{max}]			
<i>Oper.Levels</i>	→	Tal	10.000	%Tn	[10 ÷ 100]	step	1.000	%Tn
	→	Is	0.500		[0.5 ÷ 1.5]	step	0.010	
	→	Kt	1.000	min	[1 ÷ 600]	step	0.010	min

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	OPMOD	:	Operation Mode
<input type="checkbox"/>	Tal	:	Temperature prealarm level
<input type="checkbox"/>	Is	:	Continuous admissible current
<input type="checkbox"/>	Kt	:	Warming-up Time Constant of the load

Trip and Alarm

The algorithm compares the amount of heat accumulated "T" ($\equiv i^2 \cdot t$) to the steady state amount of heat "Tn" corresponding to continuous operation of the rated current "In".
 When the ratio "T/Tn" reaches the level set for Thermal Alarm "Tal" or the max allowed heating, the relay trips accordingly

Operation mode "I_{max}"

With this option, the largest of the three phase currents measured is used to compute the Thermal Image:

$$I = \text{MAX}(I_a, I_b, I_c)$$

Operation mode "I1-I2"

With this option, a composition of Positive and Negative Sequence components of the current measured is used to compute the Thermal Image:

$$I = \sqrt{(I_1)^2 + 3(I_2)^2}$$

Trip time of the Thermal Image Element


The trip time of the Thermal Image Element is a function of the current "I" flowing into the load and depends on its warming-up Time Constant "Kt", on the previous thermal status "Ip" and on the maximum admissible continuous current "Is" according to the equation:

$$t = Kt \cdot \ell_n \frac{\left(\frac{I}{I_n}\right)^2 - \left(\frac{I_p}{I_n}\right)^2}{\left(\frac{I}{I_n}\right)^2 - \left(\frac{I_s}{I_n}\right)^2}$$

- t** = Time to relay tripping
- Kt** = Load thermal time constant
- I** = Actual load current
- In** = Load rated current
- Is** = Continuous admissible current
- Ip** = Steady state current before the overload
- ℓ_n = Natural Logarithm

When the heating exceeds the set alarm level "Tal" or the max. allowed level ("I" > "Is" for the time "t") the output relays programmed for these function will be operated. Reset will take place when the heating will drop below 99% of the trip level.

Thermal Image Curves (TU1024 Rev.1)

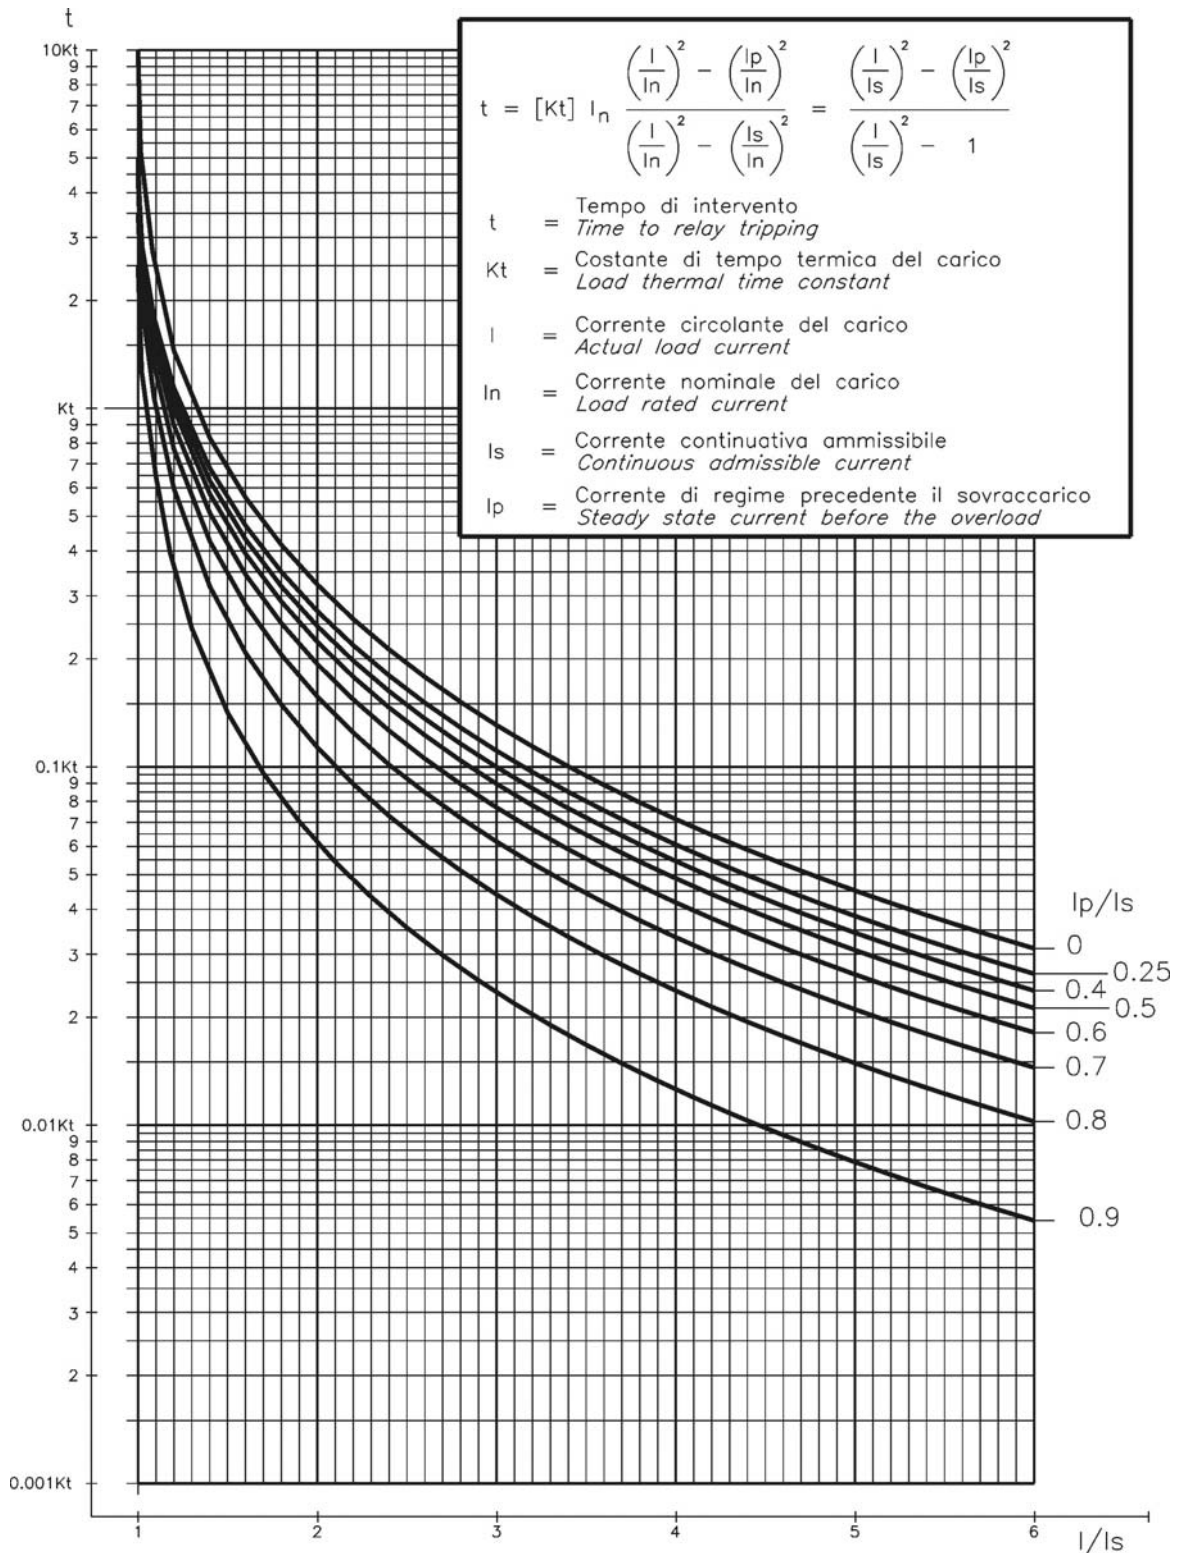

Function: 1I > (First Overcurrent Element F50/51)

Status	→	Enab.	No		[No / Yes]
Options	→	f(t)	Type - D		[D / A / B / C / I / VI / EI / MI / SI]
	→	tBI	Off		[Off / 2tBO]
	→	f(a)	Disable		[Disable / Sup / Dir]
	→	f(U)	Disable		[Disable / Enable]
Oper. Levels	→	Is	4.000	In	(0.100÷4) step 0.010 In
	→	a	359.000	°	(0.000÷359) step 1.000 °
Timers	→	ts	100.00	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s (1)

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)		
<input type="checkbox"/>	f(t)	:	Operation characteristic (Time/Current curve):		(see § 14.6.2)
			(D)	=	Independent definite time
			(A)	=	IEC Inverse Curve type A
			(B)	=	IEC Very Inverse Curve type B
			(C)	=	IEC Extremely Inverse Curve type C
			(I)	=	IEEE Inverse Curve
			(VI)	=	IEEE Very Inverse Curve
			(EI)	=	IEEE Extremely Inverse Curve
			(MI)	=	IEEE Moderate Inverse Curve
			(SI)	=	IEEE Short Inverse Curve
<input type="checkbox"/>	tBI	:	Blocking input reset time		
			Off	=	Permanent block
			2tBO	=	Set 2xtBO.
<input type="checkbox"/>	f(a)	:	Operation mode:		
			Disable	=	Non Directional
			Sup.	=	Directional Supervision
			Dir.	=	Total Directional
<input type="checkbox"/>	f(U)	:	Voltage restraint		
<input type="checkbox"/>	Is	:	Minimum operation level		
<input type="checkbox"/>	a	:	Reference phase current displacement angle for Directional operation		
<input type="checkbox"/>	ts	:	Trip time delay		
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.		

Algorithm of the time current curves

The Time Current Curves are generally calculated with the following equation

$$(1) \quad t(I) \left[\frac{A}{\left(\frac{I}{I_s}\right)^a - 1} + B \right] \cdot K \cdot T_s + T_r \quad \text{where}$$

$t(I)$ = Actual trip time delay when the input current equals "I"

I_s = Set minimum pick-up level

$$K = \left(\frac{A}{10^a - 1} + B \right)^{-1}$$

T_s = Set time delay: $t(I) = T_s$ when $\frac{I}{I_s} = 10$

t_r = Operation time of the output relay on pick-up.

The parameters A, B and a have different values for the different Time Current Curves.

Curve Name	Curve Identifier	A	B	a
IEC A Inverse	A	0.14	0	0.02
IEC B Very Inverse	B	13.5	0	1
IEC C Extremely Inverse	C	80	0	2
IEEE Moderate Inverse	MI	0.0104	0.0226	0.02
IEEE Short Inverse	SI	0.00342	0.00262	0.02
IEEE Very Inverse	VI	3.88	0.0963	2
IEEE Inverse	I	5.95	0.18	2
IEEE Extremely Inverse	EI	5.67	0.0352	2

For the IEC curves, being $B = 0$, the Time/Current equation (1), becomes:

$$(1') \quad t(I) = \frac{(10^a - 1)T_s}{\left(\frac{I}{I_s}\right)^a - 1} + t_r = \frac{Kt}{\left(\frac{I}{I_s}\right)^a - 1} + t_r$$


Where $Kt = (10^a - 1)T_s$ is the time multiplier

When "f(t) = D" is programmed, the trip time delay is Definite and independent from the current: excess "t = ts".

The maximum measuring current is "40xIn" for phase elements and "10xOn" for the neutral elements.

Trip takes place when the current measured exceeds (no matter how much) the set level "Is" for the set time "ts".


IEC Curves

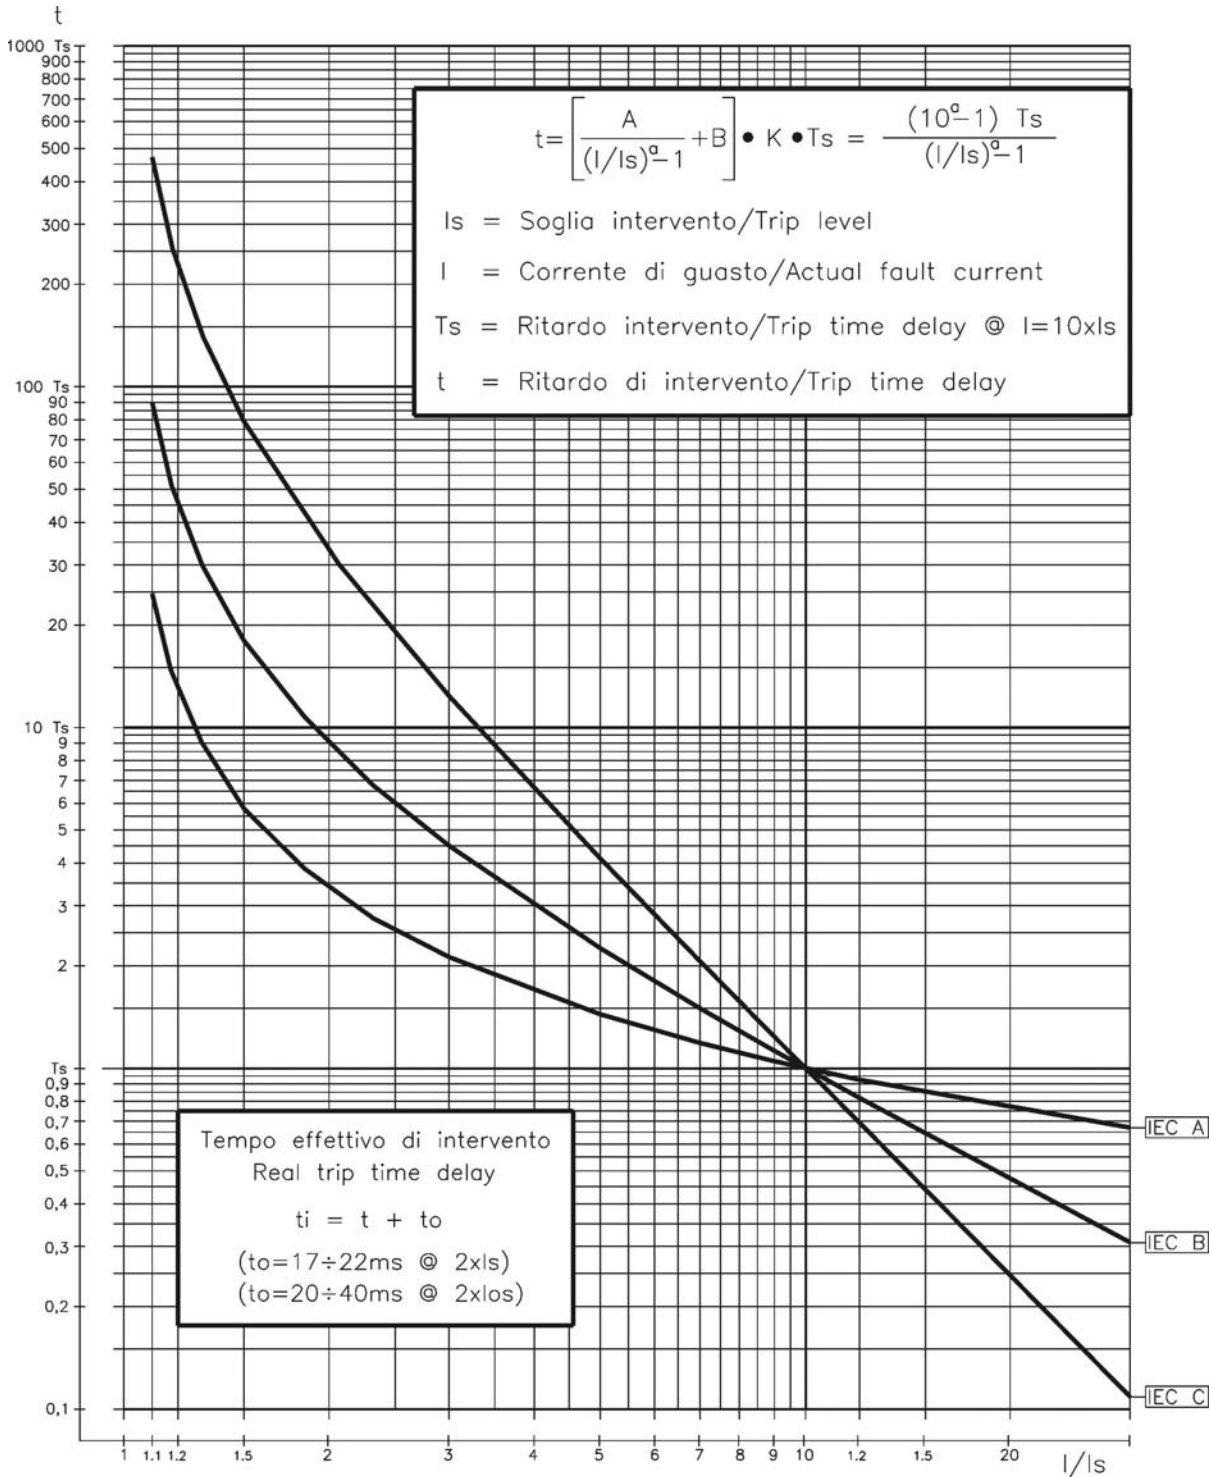

Curve Type	A	B	K	a
IEC A	0.14	0	0.336632	0.02
IEC B	13.5	0	0.666667	1
IEC C	80	0	1.2375	2

Max. "I" Phase = 40xIn
 Max. "I" Neutral = 10x0n

IEEE Curves

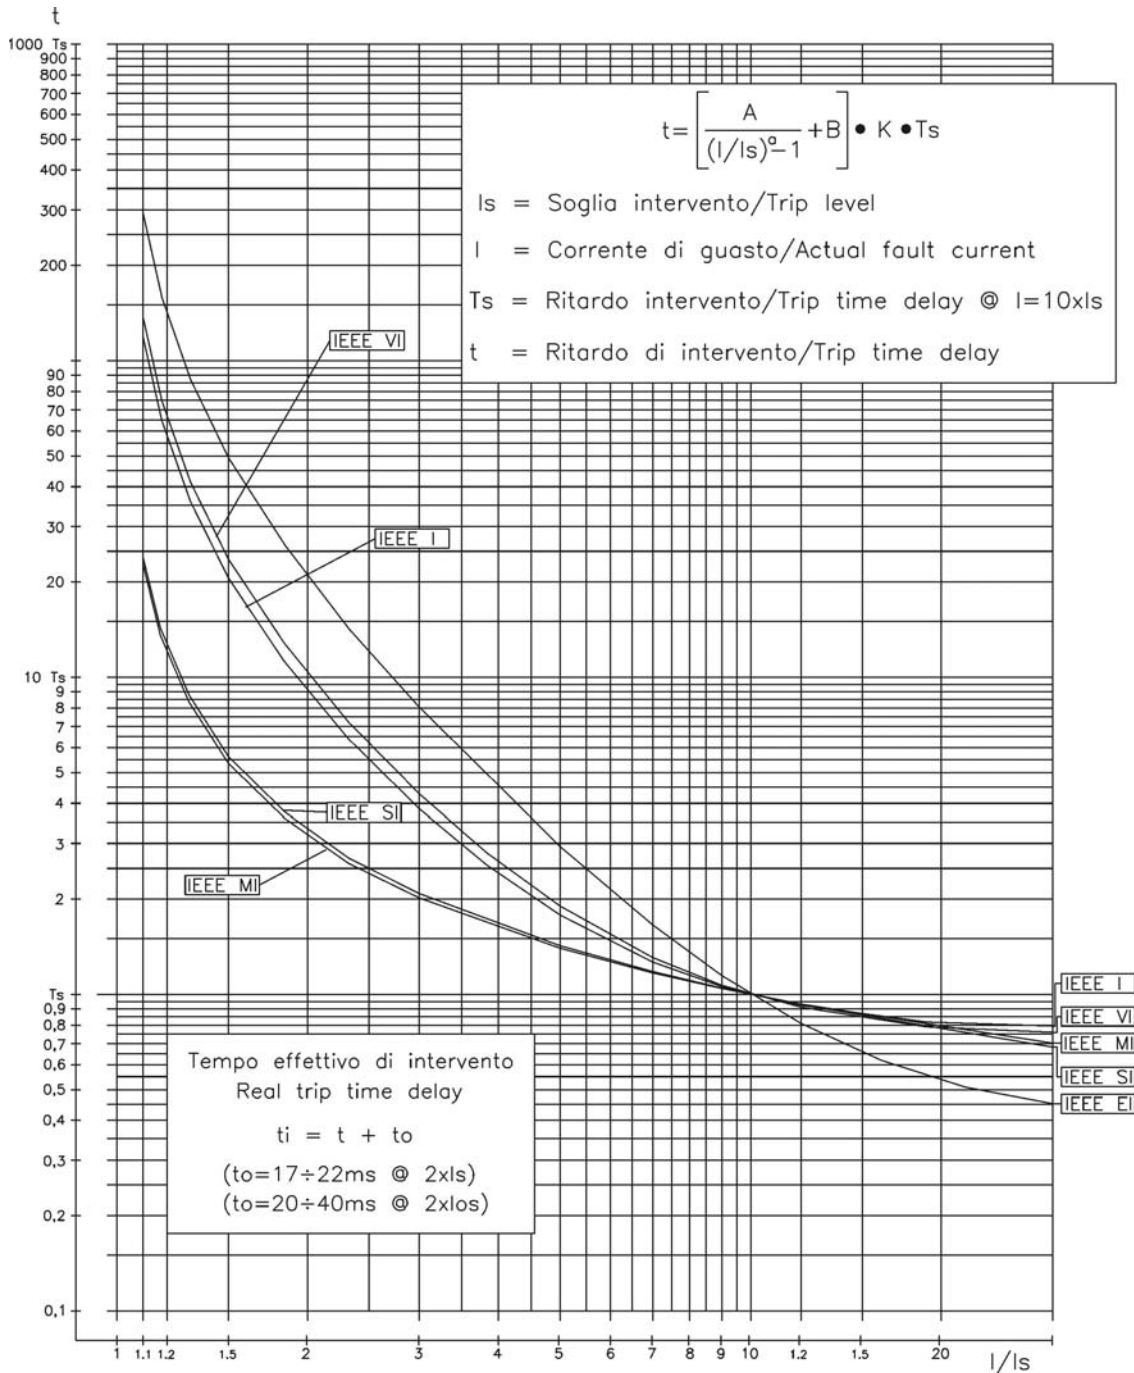

Curve Type	A	B	K	a
MI= IEEE Moderate Inv.	0.0104	0.0226	4.110608	0.02
SI= IEEE Short Inv.	0.00342	0.00262	13.30009	0.02
VI= IEEE Very Inv.	3.88	0.0963	7.380514	2
I= IEEE Inverse	5.95	0.18	4.164914	2
EI= IEEE Extremely Inv.	5.67	0.0352	10.814	2

Max. "I" Phase = 40xIn
 Max. "I" Neutral = 10x0n


Operation of the phase Overcurrent Elements in function of variable "f(a)"

On each phase the relay measures the current "Ix" and its displacement "φx" from the relevant phase-to-neutral voltage "Ex".

Different operation modes are possible according to the programming of the variable "f(a)".

- Is = Minimum operation current level.
- a = Operation reference angle (phase x; x = A, B, C).
- Ix = Measured input current (largest among the three phase currents IA, IB, IC).
- φx = Phase displacement of current "Ix" from phase-to-neutral "Ex" (X = A, B, C).
- Idx = Component of "Ix" on the direction "a".

A) Set f(a) = Disab.

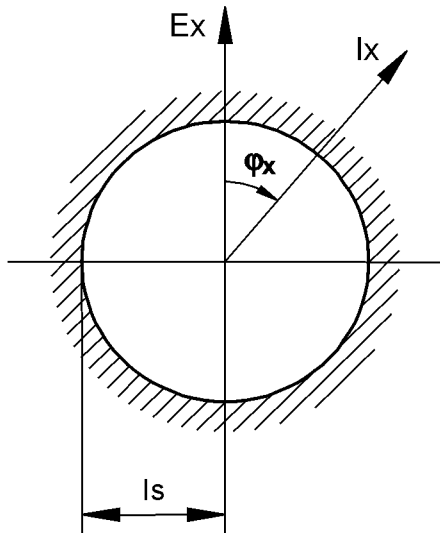

$I_x > [I_s]$

The overcurrent element operates independently from the current direction.


B) Set f(a) = Sup.

The Overcurrent element only supervises the direction of the current:

the operation conditions are:


- Input voltage above 1-2% of the rated input value.
- Input current above the set level: $I_x > [I_s]$
- Phase displacement "φx" within $\pm 90^\circ$ from the reference direction "a".

$(a - 90^\circ) < \varphi_x < (a + 90^\circ)$

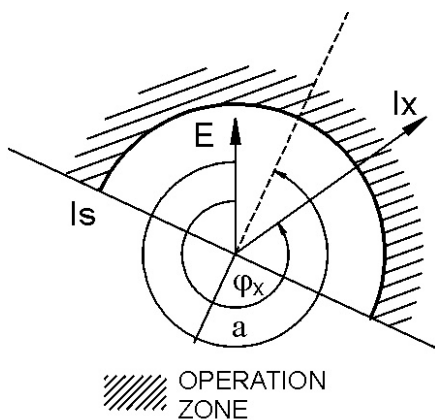

OPERATION ZONE

C) Set $f(a) = \text{Dir.}$

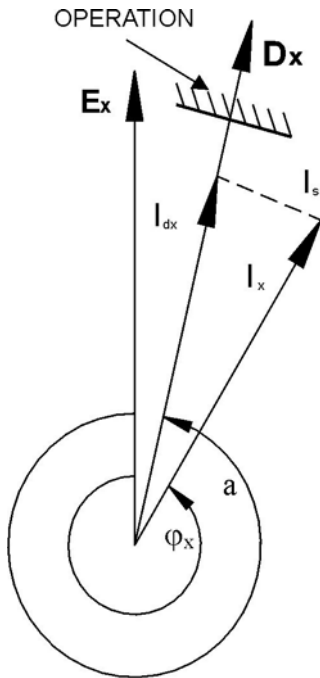

The overcurrent element operates in a real directional mode measuring the component "Id_x" of the input current in the reference direction "a" (x = A, B, C).

$$I_{dA} = I_A \cos(\varphi_A - a) \quad I_{dB} = I_B \cos(\varphi_B - a) \quad I_{dC} = I_C \cos(\varphi_C - a)$$


The overcurrent starts to operate when the component "Id_x" of the input current in the direction "D_x" (versor displaced of "a" from the phase-to-neutral voltage "Ex") exceeds the set level "I_s".

$$I_{dx} = I_x \cos(\varphi_x - a) \geq I_s$$

In details:

- When $\varphi_x = a$: $I_{dx} = I_x \rightarrow$ operation if $I_x > I_s$
- When $(\varphi_x - a) = 90^\circ$: $I_{dx} = 0 \rightarrow$ no operation
- When $(\varphi_x - a) > 90^\circ$: I_{dx} opposite to $D_x \rightarrow$ no operation

The operation is practically independent from the voltage as low as 1-2% of rated value.

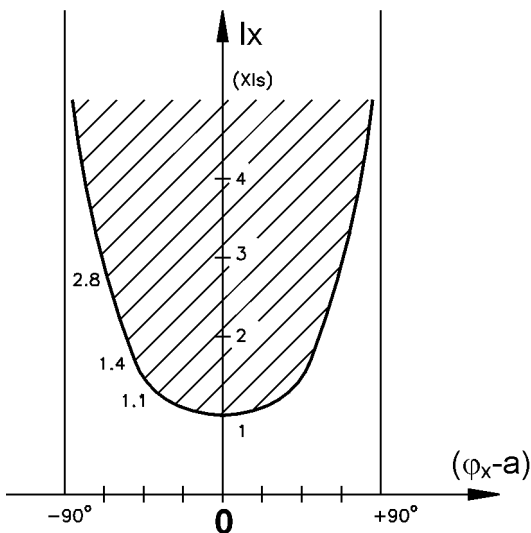


Recommended Reference angles for different applications:

- Measurement of resistive component of current (active power) :
 Direct : $a = 0^\circ$ - Reverse : $a = 180^\circ$
- Directional phase fault detection:
 Direct : $a = 300^\circ$ (60° lag) - Reverse : $a = 120^\circ$
- Measurement of inductive reactive component:
 Direct : $a = 270^\circ$ (90° lag) - Reverse : $a = 90^\circ$
- Measurement of capacitive reactive component:
 Direct : $a = 90^\circ$ (90° lead) - Reverse : $a = 270^\circ$

Operation of the Overcurrent Element with Voltage Control f(U)

When the "Voltage Restraint" function is enabled (F(U)=Enable), the set minimum pick-up level "Is" of the overcurrent elements, changes proportionally to the smallest of the input phase-to-phase voltages: $I_s = F(U)$.

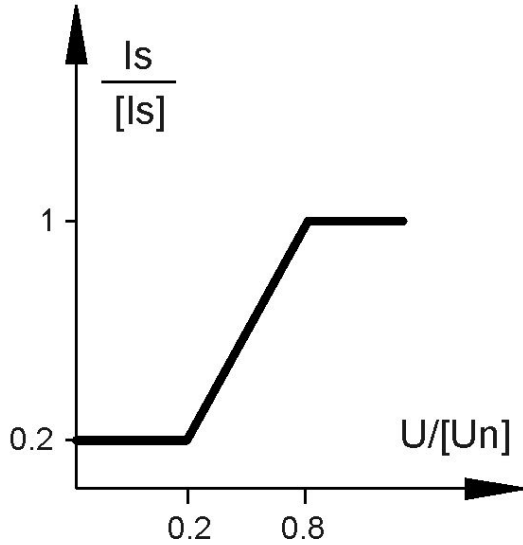

$$\frac{I_s}{[I_s]} = \frac{\text{Actual pick - up level}}{[\text{Set pick - up level}]}$$

$$\frac{U}{[U_{ns}]} = \frac{\text{Actual input voltage}}{[\text{Set rated input voltage}]}$$

the algorithm uses the smallest among the ratios

$$\frac{E_x \cdot \sqrt{3}}{[U_{ns}]} \quad (x = A, B, C)$$

Practically, between 0.2 Un and 0.8 Un, the trip level of the Overcurrent element varies according to the equation:

$$\frac{I_s}{[I_s]} = \frac{0.8}{0.6} \cdot \left(\frac{U}{[U_{ns}]} - 0.8 \right) + 1$$

Below 0.2 [Un] $\frac{I_s}{[I_s]} = 0.2$

Above 0.8 [Un] $\frac{I_s}{[I_s]} = 1$

Blocking Logic (BO-BI)

For each Protection Function it is possible to activate a Blocking Logic allowing for inhibiting their operation by external signals supplied to the Digital Input.

Output Blocking signal "BO"

All the protection functions that can be programmed to operate in the blocking logic mode, element, have an instantaneous element (beside the time delayed) which is operated as soon as the controlled quantity exceeds the set trip level ($I > [Is]$ for current, etc..) and is instantaneously reset when the input quantity drops below the reset level (normally 0.95Is).

The instantaneous element can control one of the user programmable output relays that, by its contacts, makes the signal available for blocking an external element (BO = Blocking Output).

In case, "tBO" sec after the set trip time "ts" has expired, the Protection function is still in operation (current above trip level), the Blocking Output relay (instantaneous element) is anyhow reset to eventually remove the Blocking signal from a back-up protection.

Blocking Input "BI"

For all the functions controllable by the Blocking Logic, it is possible to inhibit the time delayed tripping by an external signal that activates a Digital Input programmed for this functionality.

The programmed Digital Input gets activated by an external cold contact closing across its terminals.

With the variable "tBI" set to "OFF" (tBI=OFF), the tripping of the delayed function is blocked as long as the Blocking Input signal is present at the terminals of the Digital Input.

With the variable "tBI" set to "2xtBI" (tBI=2xtBI), 2xtBI seconds after the set trip time delay of the function has expired the blocking input is anyhow ignored and the function enabled to trip.

Automatic doubling of Overcurrent thresholds on current inrush

For some of the phase Overcurrent functions it is possible to have the set trip level [Is] automatically doubled when strong inrush current is detected.

If at circuit Breaker switch-on (i.e. when the input current rises from zero to a minimum measurable value) the current increases from 0 to 1.5 times the rated value [In] in less than 60ms, the set minimum pick-up level [Is] is dynamically doubled ([Is]→[2Is]) and keeps this value until the input current drops below 1.25xIn or the set time [t2xI] has elapsed.

This functionality is very useful to avoid spurious tripping of the instantaneous, or short-time delayed Overcurrent elements, that could be experienced at switch-on of reactive loads like Transformer or Capacitors.



Function: 2I> (Second Overcurrent Element F50/51)

Stats	→	Enab.	No	[No / Yes]
--------------	---	--------------	----	------------

Options	→	tBI	Off	[Off / 2tBO]
	→	f(a)	Disable	[Disable / Sup / Dir]
	→	2xI	Disable	[Disable / Enable]
	→	f(U)	Disable	[Disable / Enable]

Oper. Levels	→	Is	40.000	In	(0.100÷40)	step	0.010	In
	→	a	359.000	°	(0.000÷359)	step	1.000	°

Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s
	→	tBO	0.75	s	(0.05÷0.75)	step	0.01	s
	→	t2xI	100.00	s	(0.02÷100)	step	0.01	s
	→	td2xI	0.06	s	fixed			

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tBI	:	Blocking input reset time
		Off	= Permanent block
		2tBO	= Set 2xtBO.
<input type="checkbox"/>	f(a)	:	Operation mode:
		Disable	= Non Directional
		Sup.	= Directional Supervision
		Dir.	= Total Directional
<input type="checkbox"/>	2xI	:	Automatic doubling of trip level on inrush
<input type="checkbox"/>	f(U)	:	Voltage restraint
<input type="checkbox"/>	Is	:	Minimum operation level
<input type="checkbox"/>	a	:	Reference phase current displacement angle for Directional operation
<input type="checkbox"/>	ts	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.
<input type="checkbox"/>	t2xI	:	Maximum time of automatic threshold doubling on inrush
<input type="checkbox"/>	td2xI	:	Time for calculation of current rate of rise.

Function: 3I> (Third Overcurrent Element F50/51)

Status	→	Enab.	No		[No / Yes]
---------------	---	--------------	----	--	------------

Options	→	tBI	Off		[Off / 2tBO]
	→	f(a)	Disable		[Disable / Sup / Dir]
	→	2xI	Disable		[Disable / Enable]

Oper. Levels	→	I_s	40.000	I_n	(0.100÷40)	step	0.010	In
	→	a	359.000	°	(0.000÷359)	step	1.000	°

Timers	→	t_s	100.00	s	(0.02÷100)	step	0.01	s
	→	tBO	0.75	s	(0.05÷0.75)	step	0.01	s
	→	t2xI	100.00	s	(0.02÷100)	step	0.01	s
	→	td2xI	0.06	s	fixed			

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tBI	:	Blocking input reset time
			Off = Permanent block
			2tBO = Set 2xtBO.
<input type="checkbox"/>	f(a)	:	Operation mode:
			Disable = Non Directional
			Sup. = Directional Supervision
			Dir. = Total Directional
<input type="checkbox"/>	2xI	:	Automatic doubling of trip level on inrush
<input type="checkbox"/>	I_s	:	Minimum operation level.
<input type="checkbox"/>	a	:	Reference phase current displacement angle for Directional operation
<input type="checkbox"/>	t_s	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.
<input type="checkbox"/>	t2xI	:	Maximum time of automatic threshold doubling on inrush
<input type="checkbox"/>	td2xI	:	Time for calculation of current rate of rise

Function: 1lo> (First Earth Fault Element 50N/51N)

Status	→	Enab.	No		[No / Yes]
Options	→	f(t)	Type - D		[D / A / B / C / I / VI / EI / MI / SI]
	→	tBI	Off		[Off / 2tBO]
	→	f(a_o)	Disable		[Disable / Dir]
Oper. Levels	→	Is	0.010	On	(0.01÷4.00) step 0.01 On
	→	Vo	0.000	%Un	(0.000÷20) step 0.100 %Un
	→	a_o	0.000	°	(0.000÷359) step 1.000 °
	→	a_z	0.000	°	(0.000÷359) step 1.000 °
Timers	→	ts	100.00	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

Description of variables


<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	f(t)	:	Operation characteristic (Time/Current curve):
			(D) = Independent definite time
			(A) = IEC Inverse Curve type A
			(B) = IEC Very Inverse Curve type B
			(C) = IEC Extremely Inverse Curve type C
			(I) = IEEE Inverse Curve
			(VI) = IEEE Very Inverse Curve
			(EI) = IEEE Extremely Inverse Curve
			(MI) = IEEE Moderate Inverse Curve
			(SI) = IEEE Short Inverse Curve
<input type="checkbox"/>	tBI	:	Blocking Input reset time
			<i>Off</i> = Permanent block
			<i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/>	f(a_o)	:	Operation mode:
			<i>Disable</i> = Non Directional
			<i>Dir.</i> = Total Directional
<input type="checkbox"/>	Is	:	Minimum operation level
<input type="checkbox"/>	Vo	:	Minimum residual voltage level for enabling the directional operation
<input type="checkbox"/>	a_o	:	Reference Zero Sequence current displacement angle for Directional operation
<input type="checkbox"/>	a_z	:	Trip sector amplitude
<input type="checkbox"/>	ts	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

Operation mode of the Earth Fault elements programming the variable "f(a_o)"

The relay measures the current "3I_o" and the input voltage "3V_o" of the Earth Fault input and the displacement "φ_o" of the current from the voltage. Different operation modes are programmable by the variable "f(a_o)".

- ❑ **I_s** = Set minimum pick-up residual current "3I_o".
- ❑ **V_o** = Set minimum residual voltage (3V_o) to enable operation.
- ❑ **a_o** = Set displacement of the reference current direction.
- ❑ **3I_o** = Earth Fault current.
- ❑ **3V_o** = Earth Fault voltage.
- ❑ **φ_o** = I_o/V_o phase displacement.
- ❑ **a_z** = Angle defining the directional operation area around the reference direction.

The Directional Earth Fault element can operate in two different modes:

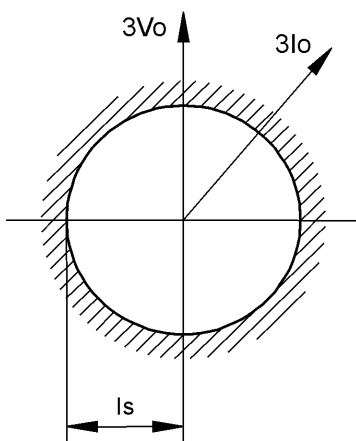

f(a_o) = Dis (Disable)


Operation is Non Directional without any influence by the Zero Sequence Voltage "V_o" and the displacement "φ_o".

- ❑ Operation starts when : 3I_o ≥ [I_s]

f(a_o) = Dir (Directional).

Operation starts when the following 3 conditions are present:

- ❑ The Residual Voltage "3V_o" exceeds the set level "V_o" : 3V_o ≥ [V_o]
 - ❑ The Residual Current "3I_o" exceeds the set level "I_s" : 3I_o ≥ [I_s]
 - ❑ The angle "φ_o" is within "± a_z" from "a"
- $$(a_o - a_z) \leq \varphi_o \leq (a_o + a_z)$$

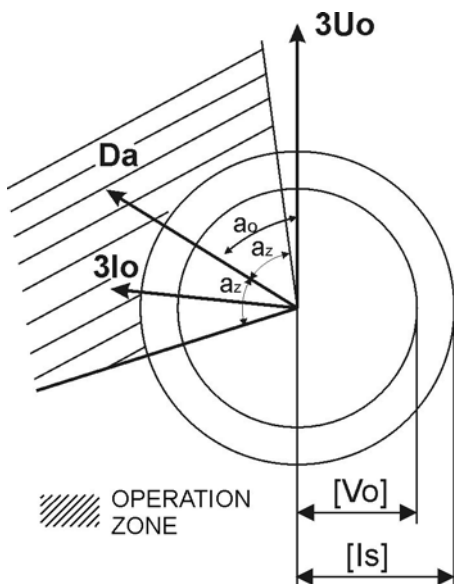

- ❑ 3U_o > [V_o]
- ❑ 3I_o > [I_s]
- ❑ (a_o - a_z) ≤ φ_o ≤ (a_o + a_z)

Function: 2lo> (Second Earth Fault Element 50N/51N)

Status	→	Enab.	No		[No / Yes]
Options	→	tBI	Off		[Off / 2tBO]
	→	f(a_o)	Disable		[Disable / Dir]
Oper. Levels	→	I_s	0.010	On	(0.01÷9.99) step 0.01 On
	→	V_o	0.000	%Un	(0.000÷20) step 0.100 %Un
	→	a_o	0.000	°	(0.000÷359) step 1.000 °
	→	a_z	0.000	°	(0.000÷359) step 1.000 °
Timers	→	t_s	100.00	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tBI	:	Blocking Input reset time
			<i>Off</i> = Permanent block
			<i>2tBO</i> = Set 2xtBO.
<input type="checkbox"/>	f(a_o)	:	Operation mode:
			<i>Disable</i> = Non Directional
			<i>Dir.</i> = Total Directional
<input type="checkbox"/>	I_s	:	Minimum operation level
<input type="checkbox"/>	V_o	:	Minimum residual voltage level for enabling the directional operation
<input type="checkbox"/>	a_o	:	Reference Zero Sequence current displacement angle for Directional operation
<input type="checkbox"/>	a_z	:	Trip sector amplitude
<input type="checkbox"/>	t_s	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

Function: 3lo > (Second Earth Fault Element 50N/51N)

Status	→	Enab.	No		[No / Yes]
Options	→	tBI	Off		[Off / 2tBO]
	→	f(a₀)	Disable		[Disable / Dir]
Oper. Levels	→	Is	0.010	On	(0.01÷9.99) step 0.01 On
	→	Vo	0.000	%Un	(0.000÷20) step 0.100 %Un
	→	a₀	0.000	°	(0.000÷359) step 1.000 °
	→	a_z	0.000	°	(0.000÷359) step 1.000 °
Timers	→	ts	100.00	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

Description parameters

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tBI	:	Blocking Input reset time
		<i>Off</i>	= Permanent block
		<i>2tBO</i>	= Set 2xtBO.
<input type="checkbox"/>	f(a₀)	:	Operation mode:
		<i>Disable</i>	= Non Directional
		<i>Dir.</i>	= Total Directional
<input type="checkbox"/>	Is	:	Minimum operation level
<input type="checkbox"/>	Vo	:	Minimum residual voltage level for enabling the directional operation
<input type="checkbox"/>	a₀	:	Reference Zero Sequence current displacement angle for Directional operation
<input type="checkbox"/>	a_z	:	Trip sector amplitude
<input type="checkbox"/>	ts	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

Function: 1Is> (First Negative Sequence Element F46)

Status	→	Enab.	No		[No / Yes]
Options	→	t(t)	Type-D		[D / A / B / C / I / VI / EI / MI / SI]
	→	tBI	Off		[Off / 2tBO]
Oper. Levels	→	Is	4.000	In	(0.1÷4) step 0.01 In
Timers	→	ts	100.00	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	f(t)	:	Operation characteristic (Time/Current curve):
		(D)	= Independent definite time
		(A)	= IEC Inverse Curve type A
		(B)	= IEC Very Inverse Curve type B
		(C)	= IEC Extremely Inverse Curve type C
		(I)	= IEEE Inverse Curve
		(VI)	= IEEE Very Inverse Curve
		(EI)	= IEEE Extremely Inverse Curve
		(MI)	= IEEE Moderate Inverse Curve
		(SI)	= IEEE Short Inverse Curve
<input type="checkbox"/>	tBI	:	Blocking Input reset time
		Off	= Permanent block
		2tBO	= Set 2xtBO.
<input type="checkbox"/>	Is	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

Time/Current operation of the first Current Unbalance element "f(t)"

the relay measures the Negative Sequence component "I₂" of the input current.
 The Time/Current curves can be selected by programming the variable "f(t)":

<input type="checkbox"/>	f(t) = D	Independent definite time operation.
<input type="checkbox"/>	f(t) = I, VI, EI, MI, SI, A, B, C	Dependent Inverse time operation

Function: 2Is> (Second Negative Sequence Element F46)

<i>Status</i>	→	Enab.	No		[No / Si]
<i>Options</i>	→	tBI	Off		[Off / 2tBO]
<i>Oper. Levels</i>	→	Is	4.000	In	(0.1÷4) step 0.01 In
<i>Timers</i>	→	ts	100.00	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tBI	:	Blocking Input reset time
		Off	= Permanent block
		2tBO	= Set 2tBO.
<input type="checkbox"/>	Is	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay
<input type="checkbox"/>	tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

Function: 1U> (First Overvoltage Element F59)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	90.000	%Un	(10÷190)	step	1	%Un
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 2U> (Second Overvoltage Element F59)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	90.000	%Un	(10÷190)	step	1	%Un
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 1U< (First Undervoltage Element F27)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	90.000	%Un	(10÷190)	step	1	%
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 2U< (Second Undervoltage Element F27)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	90.000	%	(10÷190)	step	1	%
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 1f> (First Overfrequency Element F81>)

Status	→	Enab.	No		[No / Yes]
Oper. Levels	→	fs	40.000	Hz	(40÷70) step 0.01 Hz
Timers	→	ts	10.00	s	(0.02÷1000) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	fs	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 2f> (Second Overfrequency Element F81>)

Status	→	Enab.	No		[No / Yes]
Oper. Levels	→	fs	40.000	Hz	(40÷70) step 0.01 Hz
Timers	→	ts	10.00	s	(0.02÷1000) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	fs	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 1f< (First Underfrequency Element F81<)

Status	→	Enab.	No		[No / Yes]
Oper. Levels	→	fs	40.000	Hz	(40÷70) step 0.01 Hz
Timers	→	ts	10.00	s	(0.02÷1000) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	fs	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 2f< (Second Underfrequency Element F81<)

Status	→	Enab.	No		[No / Yes]
Oper. Levels	→	fs	40.000	Hz	(40÷70) step 0.01 Hz
Timers	→	ts	10.00	s	(0.02÷1000) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	fs	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 1Uo> (First Zero Sequence Overvoltage Element F59Uo)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	1.000	%Un	(1÷100)	step	1	%Un
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: 2Uo> (Second Zero Sequence Overvoltage Element F59Uo)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	1.000	%Un	(1÷100)	step	1	%Un
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: U1< (Positive Sequence Undervoltage Element F27U1)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	90.000	%Un	(10÷190)	step	1	%Un
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: U2> (Negative sequence Overvoltage Element F59U2 or F47)

Status	→	Enab.	No		[No / Yes]			
Oper. Levels	→	Us	90.000	%Un	(10÷190)	step	1	%Un
Timers	→	ts	100.00	s	(0.02÷100)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Us	:	Minimum operation level
<input type="checkbox"/>	ts	:	Trip time delay

Function: Wi (Circuit Breaker maintenance level)

Status	→	Enab.	No		[No / Yes]
Oper. Levels	→	Ii	1.000	In	(0.1÷99) step 0.1 In
	→	Wi	1.000		(1÷9999) step 1

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	Ii	:	Circuit Breaker Rated Current in multiples of the Relay rated input current In
<input type="checkbox"/>	Wi	:	Maximum allowed amount of accumulated interruption energy before maintenance as stated by the C/B Manufactured.

Operation (Accumulation of the interruption Energy)

The relay computes the Arc Energy developed during each interruption of the Circuit Breaker and accumulates these values.

When the amount of the accumulated energy exceeds a settable level the relay gives out an alarm to signalize that maintenance inspection of the Circuit Breaker is needed.

The operation of this function is based on the following parameters:

$$Ii = Ii = (0.1-99)In$$

$$Wi = Wi = (1 - 9999)$$

"Wi" is set as a multiple of the conventional interruption energy unit.

Any time the Circuit Breaker opens (change of status from closed to open of the digital input connected to the normally open contact 52a of the C/B) the relay decreases the amount of energy corresponding to a number of conventional units:

$$nWc = \frac{W}{Wc} = \frac{I^2 \cdot tx}{Ii^2 \cdot ti}$$

where:

$$W = I^2 \cdot tx \quad \text{Interruption Energy during the interruption time "tx" with interruption current "I".}$$

$$Wc = Ii^2 \cdot ti \quad \text{Conventional unit of interruption energy corresponding to C/B rated current and rated interruption time "ti".}$$

When the set Energy level before maintenance is decreased to zero a user programmable output relay is operated.

Reset to Zero of the Energy accumulation is available in the menu "**Cmd**" (Reset Term).

Function: TCS (Trip Circuit Supervision)

Status	→	Enab.	No	[No / Yes]
---------------	---	--------------	----	------------

Timers	→	ts	0.10	s	(0.1÷100)	step	0.01	s
---------------	---	-----------	------	---	-----------	------	------	---

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	ts	:	Trip time delay

Operation

The relay includes a complete Circuit Breaker Trip Circuit Supervision unit that is associated to the Contact "15-26" of the "R1" Output Relay.

The contact of "R1" is used to trip the C/B as reported in the drawing here below.

The supervision works when the C/B is closed and recognizes the Trip Circuit as sound as far as the current flowing exceeds "1mA".


In case of Trip Circuit Fault detection, the diagnostic relay is operated and the Led starts flashing (see § Signalization).

To have Supervision also with the C/B open one N/C contact (52b) from the C/B and an external resistor "R" are needed.

$$R[k\Omega] \leq \frac{V}{1mA} - R_{52} \quad \text{where} \quad R_{52} = \text{Trip Coil internal resistance [k}\Omega\text{]}$$

$V = \text{Trip Circuit Voltage}$

$$P_R \geq 2 \cdot \frac{V^2}{R} [W] \quad \text{Designe power of external resistance "R"}$$

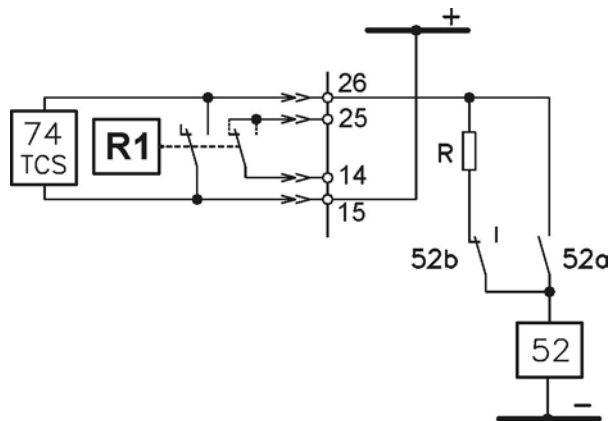

Circuit Breaker Trip is controlled by output relay "R1" whereas tripping of the "TCS" function operates another user programmable output relay.

Function: IRF (Internal Relay Fault)

In this menu it is possible to configure the operation of the Relay Internal Fault detection element

Status	→	Enab.	No	[No / Yes]
Timers	→	tIRF	5.00 s	(5÷200) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tIRF	:	Trip time delay

Operation

Tripping of the function operates a user programmable output relay.

Function: RT (Remote Trip)

In this menu it is possible to configure the operation of Remote Trip via the relevant Digital Input.

Status	→	Enab.	No	[No / Yes]
Options	→	RTon	FallEdge	[RiseEdge – FallEdge]
Timers	→	ts	5.00 s	(0.00÷10.00) step 0.01 s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	RTon	:	Remote trip Edge selector
<input type="checkbox"/>	ts	:	Remote Trip time delay

Operation

This function operate when the Digital Input "RT" is activated.

It can also be used to receive an external command from another protection. (Temperature sensor, RTD, etc.)

Function: TripTimeRd. (Trip Time Reduction)

<i>Status</i>	→	Enab.	No		[No / Yes]			
<i>Timers</i>	→	tHold	0.00	s	(0.00÷180)	step	1	s
	→	tC1 I	0.02	s	(0.02÷100)	step	0.01	s
	→	tC2 I	0.02	s	(0.02÷100)	step	0.01	s
	→	tC3 I	0.02	s	(0.02÷100)	step	0.01	s
	→	tC1 Io	0.02	s	(0.02÷100)	step	0.01	s
	→	tC2 Io	0.02	s	(0.02÷100)	step	0.01	s
	→	tC3 Io	0.02	s	(0.02÷100)	step	0.01	s
	→	tC1 Uo	0.02	s	(0.02÷100)	step	0.01	s
	→	tC2 Uo	0.02	s	(0.02÷100)	step	0.01	s
	→	tCRT	0.00	s	(0.00÷10)	step	0.1	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	tHold	:	Duration of the trip time reduction; is set to 0,00 the reduction function does not operate.
<input type="checkbox"/>	tC1 I	:	Reduced trip time for 1I>
<input type="checkbox"/>	tC2 I	:	Reduced trip time for 2I>
<input type="checkbox"/>	tC3 I	:	Reduced trip time for 3I>
<input type="checkbox"/>	tC1 Io	:	Reduced trip time for 1Io>
<input type="checkbox"/>	tC2 Io	:	Reduced trip time for 2Io>
<input type="checkbox"/>	tC3 Io	:	Reduced trip time for 3Io>
<input type="checkbox"/>	tC1 Uo	:	Reduced trip time for 1Uo>
<input type="checkbox"/>	tC2 Uo	:	Reduced trip time for 2Uo>
<input type="checkbox"/>	tCRT	:	Reduced trip time for RT

Operation

When this function is enabled, after a manual or automatic reclosure, the trip time delay of the protection functions is reduced from the original set value to the new time delay "tc" until "tHold" is expired.

Anyhow when the ongoing reclose cycle is over and the relay is ready for new reclose cycle, the original trip time delay is restored.

Functions originally programmed for a inverse time operation, during "tHold" operate as independent time function with definite time delay "tc".

Function: Reclos (Automatic Reclosure RCL)

Definitions

- ❑ **Shot Number (ShNum = 0, 1, 2, 3, 4):**
Number of autoreclosure commands that can be issued in a Reclosure cycle before lock-out.
- ❑ Selection of the reclose shot of a cycle (R1, R2, ...) that can be initiated by the tripping of selectable protection elements (1I<, 2I>, ...).
- ❑ **Set Group Change-over (GR1-2):**
Determines the reclosure shot in a cycle after switch the relay automatically switches from setting group 1 to setting group 2.
At the end of the reclaim time "Tr" the setting group 1 is automatically restored.
- ❑ **Sequence Coordination (SeqC), (tSeqC):**
When "SeqC" is set to "enable", it allows the reclose element to count any downstream recloser operation, taking place within the sequence coordination time "tSeqC", as its own, thereby preventing unnecessary operations of the back-up device for a fault beyond the downstream device. This is particularly useful when the back-up breaker feeds several branch reclosers, only one of which is experiencing a fault.
- ❑ **Reclosure time (t1, t2, t3, t4):**
It is the reclose dead time before a reclosure command (R1, R2, R3, R4) is issued after C/B opening.
- ❑ **Reclaim time (Tr1, Tr2, Tr3, Tr4):**
It is the reclaim time started after any automatic reclosure command.
Any initiation signal (trip of enabled protection or seqC function) detected during "Trx" starts the next autoreclosure shot of the cycle.
Any initiation signal detected during "Trx" after the last shot of the reclose cycle, produces the lock-out status.
- ❑ **Discrimination time (Td1, Td2, Td3):**
Any new trip detected after a automatic reclosure shot, during the time "Tdx" (Td<Tr) produces the "lock-out" status with display information "Failed Reclosure".
- ❑ **Reclaim time after manual closure (TrCL):**
It is the reclaim time started after a manual closure of the C/B.
Tripping of any protection element detected during "TrCL", produces the lock-out status.
Tripping of an "enabled" protection, shows the display "Failed" Reclosure.
- ❑ **Holding time of the external lock-out signal (ThExt):**
The digital input programmed to detected an external reclosure lock-out signal, remains activated for the time the signal is present plus the holding time "ThExt" from the external signals removal.

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)		
<input type="checkbox"/>	ShNum	:	Number of Shots available in one Autoreclosure Cycle		
<input type="checkbox"/>	R1I>	:	Allows to select one or more of the Shots of a Cycle to be initiated by tripping of the function.....:	1I>	
<input type="checkbox"/>	R2I>	:	Same as above.....:	2I>	
<input type="checkbox"/>	R3I>	:	Same as above.....:	3I>	
<input type="checkbox"/>	R1Io>	:	Same as above.....:	1Io>	
<input type="checkbox"/>	R2Io>	:	Same as above.....:	2Io>	
<input type="checkbox"/>	R3Io>	:	Same as above.....:	3Io>	
<input type="checkbox"/>	R1Uo>	:	Same as above.....:	1Uo>	
<input type="checkbox"/>	R2Uo>	:	Same as above.....:	2Uo>	
<input type="checkbox"/>	RRT	:	Same as above.....:	RT	
<input type="checkbox"/>	GR1-2	:	Change-over SetGroup 1 to SetGroup 2		
<input type="checkbox"/>	SeqC	:	Sequence coordination		
<input type="checkbox"/>	tSeqC	:	Sequence coordination time		
<input type="checkbox"/>	t1	:	Reclosure time of 1st AR shot		
<input type="checkbox"/>	Tr1	:	Reclaim time of 1st AR shot		
<input type="checkbox"/>	Td1	:	Discrimination of 1st AR shot		
<input type="checkbox"/>	t2	:	Reclosure time of 2nd AR shot		
<input type="checkbox"/>	Tr2	:	Reclaim time of 2nd AR shot		
<input type="checkbox"/>	Td2	:	Discrimination of 2nd AR shot		
<input type="checkbox"/>	t3	:	Reclosure time of 3rd AR shot		
<input type="checkbox"/>	Tr3	:	Reclaim time of 3rd AR shot		
<input type="checkbox"/>	Td3	:	Discrimination of 3rd AR shot		
<input type="checkbox"/>	t4	:	Reclosure time of 4th AR shot		
<input type="checkbox"/>	Tr4	:	Reclaim time of 4th AR shot		
<input type="checkbox"/>	TrCL	:	Reclaim time on manual closure		
<input type="checkbox"/>	ThExt	:	Hold of lock-out signal after removal of external lock-out		

Setting

<i>Status</i>	→	Enab.	No	[No / Yes]
---------------	---	--------------	----	------------

<i>Options</i>	→	ShNum	1	[0 - 1 - 2 - 3 - 4]
	→	R 1I>	Recl. Dis.	→ Recl. Dis = Automatic Reclosure (AR) disable 1 = AR Enable on shot 1 2 = AR Enable on shot 2 1+2 = AR Enable on shot 1+2 3 = AR Enable on shot 3 1+3 = AR Enable on shot 1+3 2+3 = AR Enable on shot 2+3 1+2+3 = AR Enable on shot 1+2+3 4 = AR Enable on shot 4 1+4 = AR Enable on shot 1+4 2+4 = AR Enable on shot 2+4 1+2+4 = AR Enable on shot 1+2+4 3+4 = AR Enable on shot 3+4 1+3+4 = AR Enable on shot 1+3+4 2+3+4 = AR Enable on shot 2+3+4 1+2+3+4 = AR Enable on shot 1+2+3+4 (*) see example
	→	R 2I>	Recl. Dis.	Same as above
	→	R 3I>	Recl. Dis.	Same as above
	→	R 1Io>	Recl. Dis.	Same as above
	→	R 2Io>	Recl. Dis.	Same as above
	→	R 3Io>	Recl. Dis.	Same as above
	→	R 1Uo>	Recl. Dis.	Same as above
	→	R 2Uo>	Recl. Dis.	Same as above
	→	R RT	Recl. Dis.	Same as above
	→	GR1-2	Disable	[Disable / Shot1 / Shot2 / Shot3 / Shot4]
	→	SeqC	Disable	[Disable / Enable]

<i>Timers</i>	→	tSeqC	0.00	s	(0.00 ÷ 5.00)	step	0.01	s
	→	t1	0.30	s	(0.10 ÷ 200)	step	0.1	s
	→	Tr1	5.00	s	(5.00 ÷ 200)	step	1	s
	→	Td1	0.00	s	(0.00 - 5.00)	step	0 / 5	s
	→	t2	1.00	s	(0.10 ÷ 1000)	step	0.1	s
	→	Tr2	5.00	s	(5.00 ÷ 200)	step	1	s
	→	Td2	0.00	s	(0.00 - 5.00)	step	0 / 5	s
	→	t3	3.00	s	(0.10 ÷ 1000)	step	0.1	s
	→	Tr3	5.00	s	(5.00 ÷ 200)	step	1	s
	→	Td3	0.00	s	(0.00 - 5.00)	step	0 / 5	s
	→	t4	10.00	s	(0.10 ÷ 1000)	step	0.1	s
	→	Tr4	5.00	s	(5.00 ÷ 200)	step	1	s
	→	TrCL	5.00	s	(5.00 ÷ 200)	step	1	s
	→	ThExt	5.00	s	(5.00 ÷ 200)	step	1	s

Example

example: programming of the Reclose Shots initiated by tripping of the protection function 1I>.

R 1I>	=	Recl.Dis.	:	no shot is initiated on tripping of the function 1I>.
R 1I>	=	1	:	only the shot n°1 of the AR cycle is initiated on tripping of the function 1I>.
R 1I>	=	1+2	:	only the shots n°1 and 2 of the AR cycle are initiated on tripping of the function 1I>.
R 1I>	=	1+2+3	:	only the shots n°1 and 2 and 3 of the AR cycle are initiated on tripping of the function 1I>.
R 1I>	=	1+2+3+4	:	all the shots n°1 and 2 and 3 and 4 of the AR cycle are initiated on tripping of the function 1I>.

R RT	=	Recl.Dis.	:	no shot is initiated on Remote Trip signal (RT).
R RT	=	1	:	only the shot n°1 of the AR cycle is initiated on Remote Trip signal (RT).
R RT	=	1+2	:	only the shots n°1 and 2 of the AR cycle are initiated on Remote Trip signal (RT).
R RT	=	1+2+3	:	only the shots n°1 and 2 and 3 of the AR cycle are initiated on Remote Trip signal (RT).
R RT	=	1+2+3+4	:	all the shots n°1 and 2 and 3 and 4 of the AR cycle are initiated on Remote Trip signal (RT).

Similarly for the other variables (R 2I>, R 3I>, R 1Io>, R 2Io>, R 3Io>, R 1Uo>, R 2Uo>).

Operation

The Autoreclose function is based on the setting of the variables described in the § Setting and involves the following operational status (§ Definition and Description variable).

E/D	Enable/Disable	Autoreclosing function Enabled/Disabled.
S0	"Wait C/B cl"	Waiting for C/B's manual closure
Sx=S1	"Ready"	Ready to start a AR Cycle after manual C/B closure
Sx=Sh	"Progress"	Ready to operate the next AR shot of the Cycle.
L.O.	"Lock-out"	Function blocked due to external blocking signal present at the relevant Digital Input, or due to the detection of a failure of the Circuit Breaker operation.

The status of the Circuit Breaker (C/B) is indicated by one normally open contact of the C/B itself and it is detected by the digital input "C/B" of the relay that has been programmed for monitoring C/B status (see § Physical Input).

A reclose shot is started after a C/B's opening operated by one of the relay's protection elements programmed to initiate this reclose shot; C/B's opening operated by one element not programmed to initiate the next reclosure shot, interrupts the Reclose cycle and activates the status "TwRCL" (Trip without Reclosure) of the relay. C/B's opening operated manually interrupts the Reclose cycle: the display of the relay shows "WaitC/Bcl" (Wait for C/B manual closure).

- Any time the Circuit Breaker (C/B) is manually closed the Reclaim time "TrCL" is started.
- Any time the C/B is reclosed by one AR shot (Sh1, 2, 3, 4) the relevant reclaim time (Tr1, Tr2, Tr3, Tr4) and the discrimination time (Td1, Td2, Td3) are started.
- After a manual closure of the C/B, tripping of any of the relay protection elements during "TrCL" makes the relay enter into the Lock-Out status (L.O.). In the L.O. status the relay, after breaker opening, does not produce any command for automatic reclose ; in this situation the "RCL" display indicates "Failed" Reclosure; if programmed the output relay (RCLf) is operated.
- Reset from the L.O. status take place when C/B manually closed or when the digital input "ExtReset" (if programmed) is activated.
- If none of the relay protection elements trips during "TrCL" after a manual closure of the C/B, the relay is ready to start the Automatic Reclose Sequence; the display indications are : RCL = Ready, LRC = Manual Close.
- The tripping of any element programmed for the operation of the next reclosure during the reclaim time "Trx" makes the relay proceed with the reclosing cycle.
- After "Trx" is expired the relay is ready for a new AR Cycle.

N.B.

For operation of the Autoreclose Function C/B trip must be controlled by output relay "R1", and C/B close must be controlled by relay "R2".

Reclose Command

As soon as the C/B is opened due to tripping of one of the relay's elements programmed to initiate the next automatic reclose the relevant reclose, the relevant time delay (t1, t2, t3, t4) is started and at the end of this time the reclose command is issued by the relay.

The C/B is then automatically reclosed, the reclaim time "Trx" and the discrimination time "TDx" are started.

If during Tdx the C/B is again opened by any relay's protection element the relay goes in to L.O. status.

If during Trx the C/B is again opened by tripping of a protection element programmed to initiate the next AR shot, the C/B is reclosed after the relevant delay time "tx".

When the last shot of the AR Cycle sequence has been done, any further tripping during tr produces the relay's lock-out status.

If after any reclose shot no tripping takes place during "Tr", the relay gets ready for a new AR Cycle.


Display Message



RCL	Status of the current Autoreclosure.		
	Disable	:	Disabled
	WaitC/Bcl	:	Wait for C/B manual closure
	Ready	:	Ready
	Progress	:	In Progress
	LockOut	:	LockOut

LRC	Last Autoreclosure		
	ManClose	:	Manual Closure
	Success	:	Successful Automatic Reclosure
	Failed	:	Reclosure Failed
	TwRCL	:	Trip without Automatic Reclosure
	Blocked	:	Blocked by external cause
	NotAvail	:	Information not Available

Flow chart - Automatic Reclosure RCL

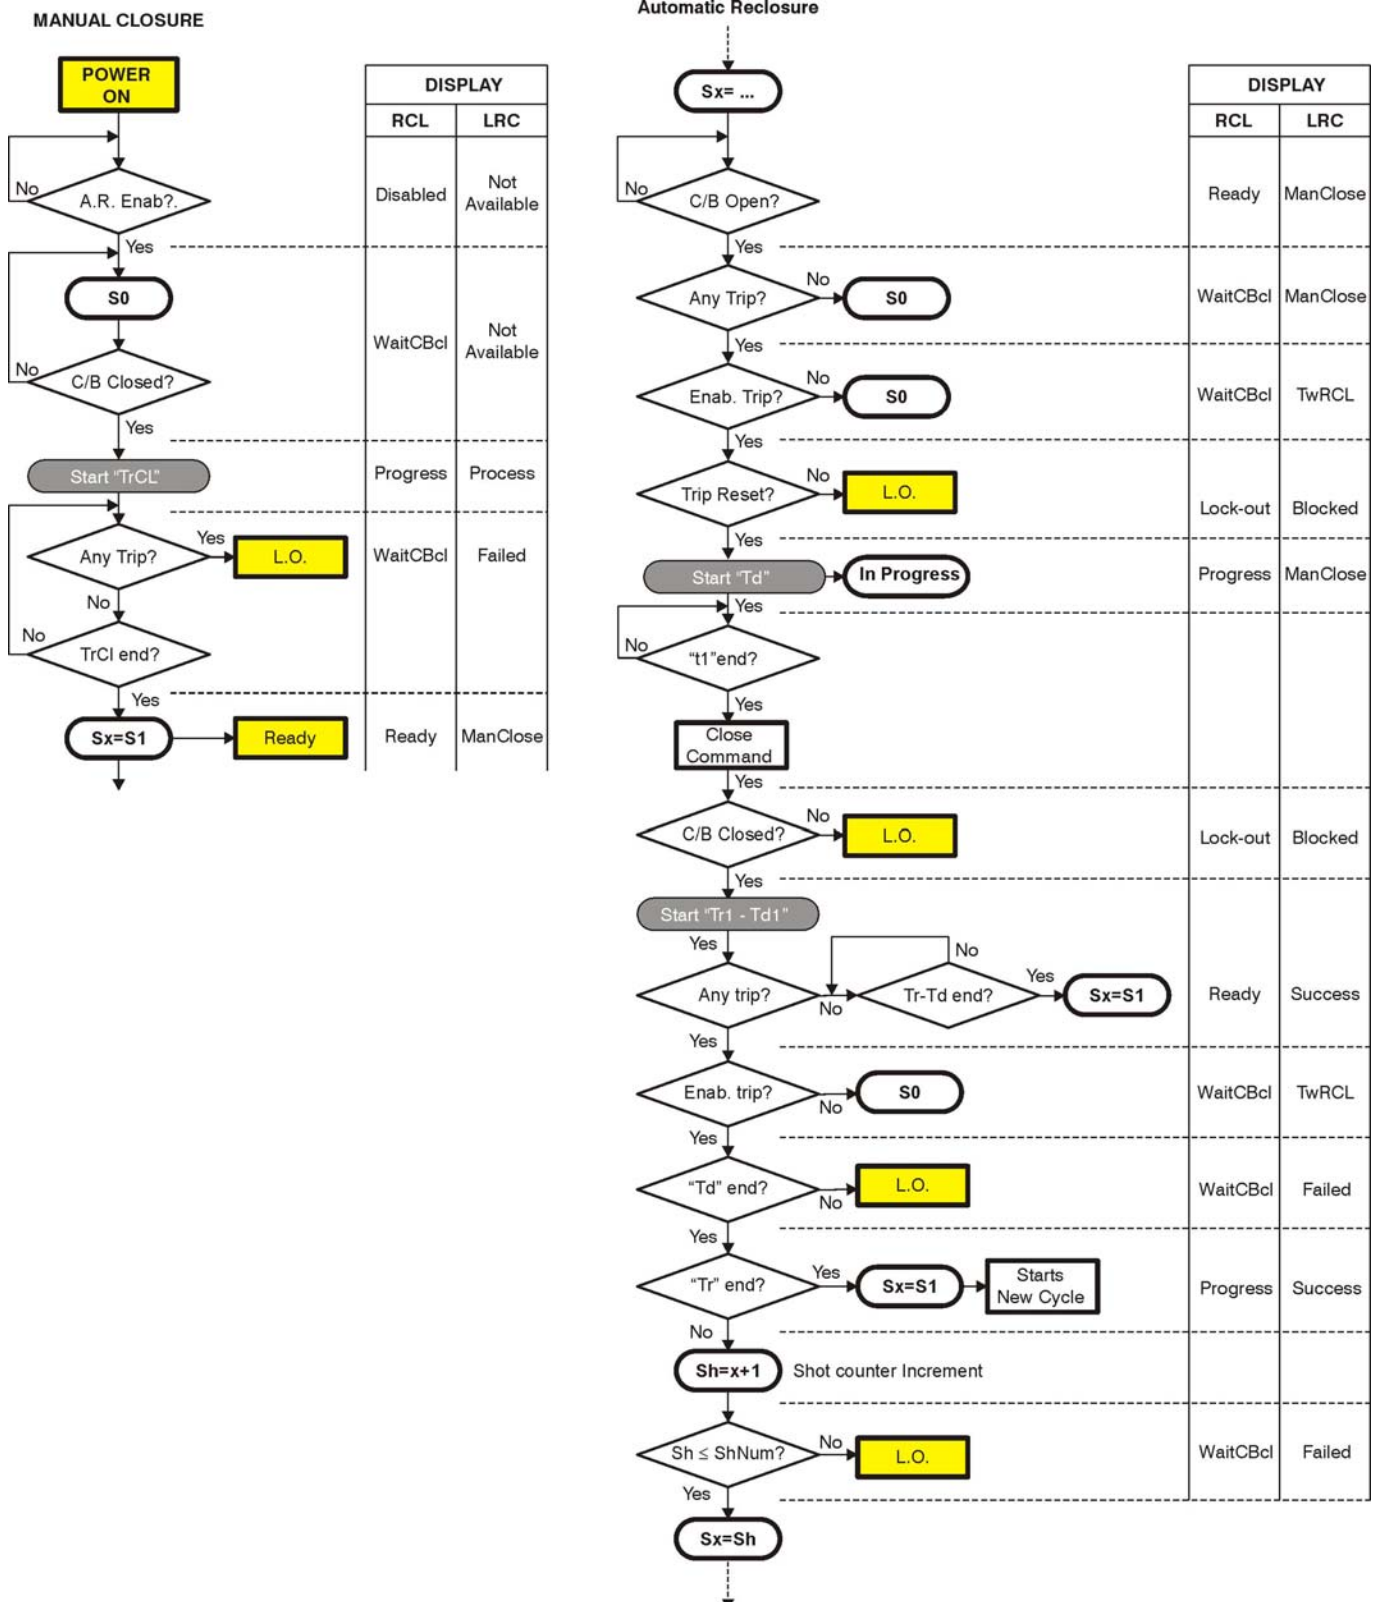


Function: CB Mngn (Control C/B)

This menu allows to configure the command for C/B operation.

<i>Options</i>	→	L/R	Ignored		[Ignored – Active]
	→	Key	Enable		[Disable – Enable]

<i>Timers</i>	→	tL/R	0.05	s	(0.05 ÷ 1.00)	step	0.05	s
	→	tC/Bs	0.50	s	(0.05 ÷ 1.00)	step	0.05	s

Description of variables

<input type="checkbox"/>	L/R	:	Selection of Local/Remote C/B operation mode Ignored or Active					
<input type="checkbox"/>	Key 	:	Disable	=	The pushbuttons on Front Panel are disabled; the operation of the C/B can be controlled by; 1 - serial bus commands 2 - commands available in the menu " <i>Cmd</i> " (Password protected). 3 - Digital Inputs.			
			Enable	=	The C/B can be controlled also by the pushbuttons available on Relay's Front Face.			
<input type="checkbox"/>	tL/R	:	Admissible time before detection of the Local/Remote discrepancy alarm.					
<input type="checkbox"/>	tC/Bs	:	Maximum admissible delay for detection of status signal after C/B operation.					

Display Message

1		<ul style="list-style-type: none"> • L • “<i>L</i>” the control of C/B is in “Local” mode
2		<ul style="list-style-type: none"> • R • “<i>R</i>” the control of C/B is in “Remote” mode
3		<ul style="list-style-type: none"> • ? If the symbol “?” show up the relay is in discrepancy Local/Remote. The commands can be send from “Local” or “Remote”.
4		<ul style="list-style-type: none"> • + This symbol indicates the CB breaker failure (example: C/B closing failure)

Function: Oscillo (Oscillographic Recording)

Status	→	Enab.	No	[No / Yes]
---------------	---	--------------	----	------------

Options	→	Trig	Start	[Start / Trip / OnCmd / REUserLg / REUserLg]
----------------	---	-------------	-------	--

Timers	→	tPre	0.50	s	(0.01÷0.50)	step	0.01	s
	→	tPost	0.50	s	(0.01÷1.50)	step	0.01	s

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)					
<input type="checkbox"/>	Trig	:	Selection of the Trigger command source (start recording):					
			<i>Start</i>	=	Trigger on time start of protection functions			
			<i>Trip</i>	=	Trigger on trip (time delay end) of protection functions			
			<i>OnCmd</i>	=	On Asynchronous Force trigger command			
			<i>REUserLg</i>	=	On rising edge of "User Logic"	(see § "User Trigger Oscillo")		
			<i>FEUserLg</i>	=	On falling edge of "User Logic"			
<input type="checkbox"/>	tPre	:	Recording time before Trigger					
<input type="checkbox"/>	tPost	:	Recording time after Trigger					

Operation

In the options: "Trig = Start" and "Trig = Trip", the oscillographic recording starts respectively when any protection function starts operating or trip (provided the function was programmed "Enab = Yes").

The "Oscillo" Function includes the wave Form Capture of the input quantities and can totally store a record of 3 seconds.

The number of events recorded depends on the duration of each individual recording (tPre + tPost).

In any case the number of event stored can not exceed ten (10 x 0.3 sec).

Any new event beyond the 3 sec capacity of the memory, cancels and overwrites the former records (FIFO Memory).

Available on MScOm2

	SCDop	<i>Scada open breaker command</i>			
	SCDcl	<i>Scada close breaker command</i>			
	SCDop2	<i>Scada open breaker 2 command (generic command)</i>			
	SCDcl2	<i>Scada close breaker 2 command (generic command)</i>			
	SCDop3	<i>Scada open breaker 3 command (generic command)</i>			
	SCDcl3	<i>Scada close breaker 3 command (generic command)</i>			
	SCDop4	<i>Scada open breaker 4 command (generic command)</i>			
	SCDcl4	<i>Scada close breaker 5 command (generic command)</i>			
	DisRCL	<i>Scada disable reclose command</i>			
	EnRCL	<i>Scada enable reclose command</i>			
T>	Tal	<i>Alarm</i>	<i>Thermal Image T></i>		
	T>	<i>Trip</i>			
1I>	1I>	<i>Start</i>	<i>First overcurrent element F50-51</i>		
	t1I>	<i>Trip</i>			
2I>	2I>	<i>Start</i>	<i>Second overcurrent element F50-51</i>		
	t2I>	<i>Trip</i>			
3I>	3I>	<i>Start</i>	<i>Third overcurrent element F50-51</i>		
	t3I>	<i>Trip</i>			
1Io>	1Io>	<i>Start</i>	<i>First earth fault element F50N-51N</i>		
	t1Io>	<i>Trip</i>			
2Io>	2Io>	<i>Start</i>	<i>Second earth fault element F50N-51N</i>		
	t2Io>	<i>Trip</i>			
3Io>	3Io>	<i>Start</i>	<i>Third earth fault element F50N-51N</i>		
	t3Io>	<i>Trip</i>			
1Is>	1Is>	<i>Start</i>	<i>First negative sequence current element F46</i>		
	t1Is>	<i>Trip</i>			
2Is>	2Is>	<i>Start</i>	<i>Second negative sequence current element F46</i>		
	t2Is>	<i>Trip</i>			
1U>	1U>	<i>Start</i>	<i>First overvoltage element F59</i>		
	t1U>	<i>Trip</i>			
2U>	2U>	<i>Star</i>	<i>Second overvoltage element F59</i>		
	t2U>	<i>Trip</i>			
1U<	1U<	<i>Start</i>	<i>First undervoltage element F27</i>		
	t1U<	<i>Trip</i>			
2U<	2U<	<i>Start</i>	<i>Second undervoltage element F27</i>		
	t2U<	<i>Trip</i>			
1f>	1f>	<i>Start</i>	<i>First overfrequency element F81</i>		
	t1f>	<i>Trip</i>			
2f>	2f>	<i>Start</i>	<i>Second overfrequency element F81</i>		
	t2f>	<i>Trip</i>			
1f<	1f<	<i>Start</i>	<i>First underfrequency element F81</i>		
	t1f<	<i>Trip</i>			
2f<	2f<	<i>Start</i>	<i>Second underfrequency element F81</i>		
	t2f<	<i>Trip</i>			
1Uo>	1Uo>	<i>Start</i>	<i>First zero sequence voltage element F59Uo</i>		
	t1Uo>	<i>Trip</i>			
2Uo>	2Uo>	<i>Start</i>	<i>Second zero sequence voltage element F59Uo</i>		
	t2Uo>	<i>Trip</i>			
U1<	U1<	<i>Start</i>	<i>Positive sequence undervoltage element F27U1</i>		
	tU1<	<i>Trip</i>			
U2>	U2>	<i>Start</i>	<i>Negative sequence overvoltage element F59U2</i>		
	tU2>	<i>Trip</i>			
Wi	tWi>	<i>Circuit breaker maintenance level</i>			
TCS	TCS	<i>Start</i>	<i>trip coil supervision</i>		

IRF	tTCS	<i>Trip</i>	<i>Internal Relay Failure</i>		
	IRF	<i>Start</i>			
RT	tIRF	<i>Trip</i>	<i>Element Remote Trip</i>		
	RT	<i>Start</i>			
	tRT	<i>Trip</i>			

	TripTimeR	<i>Trip time reduction active</i>		
	RCLf	<i>Autoreclosure failed</i>		
	RCLrun	<i>Autoreclosure in progress</i>		
	TwRCL	<i>Trip not enabled for Automatic Reclosure</i>		
	RCL-OK	<i>Successful Automatic Reclosure</i>		
	ManCL-OK	<i>Manual Closure</i>		
	BiRCL	<i>Presence Reclosure external lockout cause (input/CB Failure)</i>		
	Gr1to2	<i>Switch to SetUp Group2</i>		
	manOpCmd	<i>Manual Open Command</i>		
	CL-Cmd	<i>Close Command</i>		
	C/Bfail	<i>Circuit Breaker failure</i>		
	L/Rdisc	<i>Local/Remote signal Discrepancy</i>		
	BF	<i>Breaker Failure</i>		
	Gen.Start	<i>Start Generic</i>		
	Gen.Trip	<i>Trip Generic</i>		
	UserTriggerOscillo	<i>User Variable for Oscillographic Recording</i>		
	UserVar<0>	<i>User Variable</i>		
	to			
	UserVar<24>			
	Vcc	<i>Reserved</i>		
	Gnd	<i>Reserved</i>		
	ResLog	<i>Reset signal logic</i>		
	P1	<i>Push-button Open</i>		
	P2	<i>Push-button Close</i>		
	0.D1	<i>Digital Input "0.D1"</i>	<i>activated</i>	<i>Digital Input on Main Relay</i>
	0.D1Not	<i>Digital Input "0.D1"</i>	<i>deactivated</i>	
	to			
	0.D4	<i>Digital Input "0.D4"</i>	<i>activated</i>	
	0.D4Not	<i>Digital Input "0.D4"</i>	<i>deactivated</i>	
	1.D1	<i>Digital Input "1.D1"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
	1.D1Not	<i>Digital Input "1.D1"</i>	<i>deactivated</i>	
	to			
	1.D15	<i>Digital Input "1.D15"</i>	<i>activated</i>	
	1.D15Not	<i>Digital Input "1.D15"</i>	<i>deactivated</i>	
	2.D1	<i>Digital Input "2.D1"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
	2.D1Not	<i>Digital Input "2.D1"</i>	<i>deactivated</i>	
	to			
	2.D15	<i>Digital Input "2.D15"</i>	<i>activated</i>	
	2.D15Not	<i>Digital Input "2.D15"</i>	<i>deactivated</i>	

Setting "User Trigger Oscillo"

The "User trigger Oscillo" is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via "MCom2" software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
------	-------------	------------------	---------	-------	------------	----------------

Name

Internal name

User descr.

Fixed

Linked functions

Selection functions

OpLogic

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

Timer

Time delay (0-10)s, step 0.01s

Timer type

<i>Delay</i>	=	Add a delay on output activation. The "Timer" is edge triggered on rise edge.
<i>Monostable</i>	=	Activated the output for the time "Timer"

Logical status

"User Trigger Oscillo" Logical status

Example: Setting "User Variable"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "User Variable"




Setting for "User Trigger Oscillo" : "**1I>, 2I>, 3I>**", "**OR**", "**1**", "**Monostable**".



ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	UserTrigger Oscillo	UserTrigger Oscillo	1I>,2I>,3I>	OR	1	Monostable	0
2	UserVar <0>	UserVar <0>		None	0	Delay	0

“Linked Functions”

Select “**Linked Functions**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

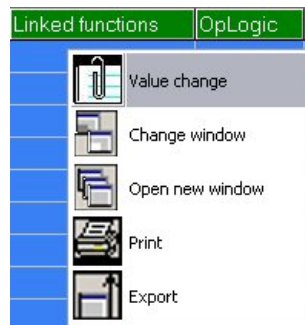

Select “**11>**, **21>**, **31>**” from “Available” box via push-button “<Add”, and press “OK”.
For remove functions, use push-button “>Remove”.

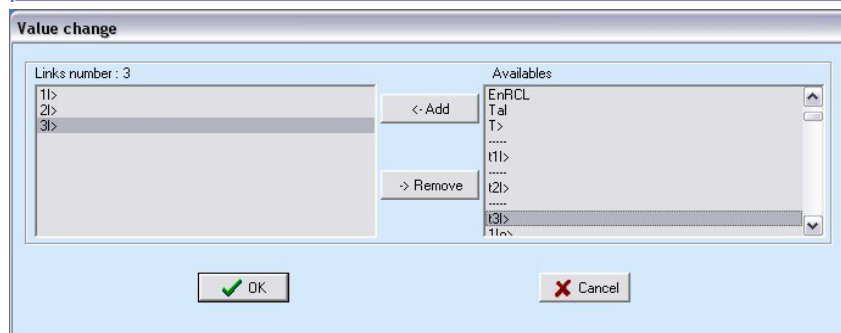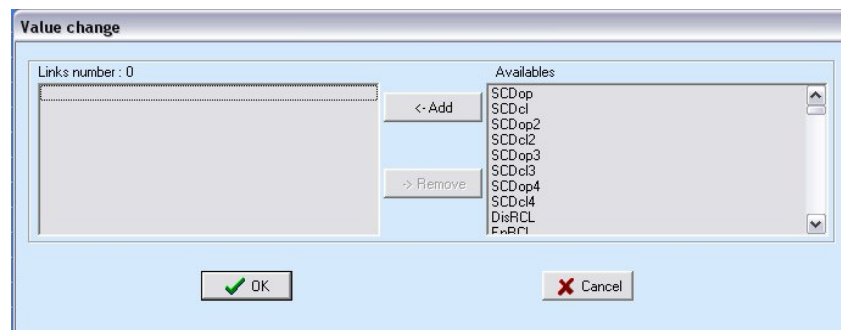

“Operation Logic” (Oplogic)

Select “**Oper Logic**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

OpLogic	Timer	Timer type
None	0	Delay
None		Value change
None		Change window
None		Open new window
None		Print
None		Export

Insert “**OR**” into box and press “OK”:

Value change

Name : LogOp
Actual value
None

None

None
OR
AND
XOR
NOR
NAND
NOT
F&SR

“Timer”

Select “**Timer**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

Timer	Timer type	Logic
0		
0		Value change
0		Change window
0		Open new window
0		Print
0		Export

Select “**1**” into box and press “OK”:

Value change

Actual value
0


0

Description
Name : UV_Timer0Timer
Min : 0
Max : 10
Step : 0,01

OK Cancel

"Timer type"

Select **"Timer"** related to "User Trigger Oscillo" and press right button on mouse, select "Value change":

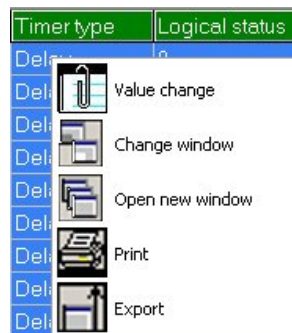

Select **"Monostable"** into box and press "OK":

Value change

Name : UV_TimerType0Timer type

Actual value

Delay

Delay

Delay
Monostable

OK Cancel

Function: BreakerFail (Breaker Failure)

Status	→	Enab.	No	[No / Yes]
---------------	---	--------------	----	------------

Timers	→	tBF	0.75	s	(0.05÷0.75)	step	0.01	s
---------------	---	------------	------	---	-------------	------	------	---

Description of variables

<input type="checkbox"/>	Enab.	:	Function enabling (No = Disable / Yes = Enable)	
<input type="checkbox"/>	tBF	:	Trip time delay	

Operation

The Breaker Failure detection is started by the operation of the output relay "R1" (programmed to be controlled by the Protection Functions that trip the C/B).

If after [tBF] seconds from operation of the relay "R1", any input current flow is still detected (>10% I_n), the function "BF" trips and operate one user programmable output relay,

Function: ExtReset (External Reset Configuration)

This menu allows to configurate the edge polarity of the digital input associated to the trip reset function.

Options	→	ActOn	RiseEdge	[RiseEdge / FallEdge]
----------------	---	--------------	----------	-----------------------

Description of variables

<input type="checkbox"/>	ActOn	:	RiseEdge	Active on Rise Edge (Digital Input close).
		:	FallEdge	Active on Fall Edge (Digital Input open).

USER VARIABLES

The "User Variable" is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via "MCom2" software.

ID	Nome	Descr. utente	Funz. associate	OpLogic	Timer	Tipo timer	Stato logico
----	------	---------------	-----------------	---------	-------	------------	--------------

Name

Internal progressive name

User Descr.

Custom identification label for user variable

Linked functions

Selection functions

OpLogic

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

Timer

Time delay (0-10)s, step 0.01s

Timer type

<i>Delay</i>	=	Add a delay on output activation. The "Timer" is edge triggered on rise edge.
<i>Monostable</i>	=	Activated the output for the time "Timer"

Logical status

"User Variable" Logical status

Example: Setting "User Variable"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "User Variable"



Setting for "UserVar<0>" :

"Start Overcurrent Element", "1I>, 2I>, 3I>", "OR", "1", "Monostable".

ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	UserTrigger Oscillo	UserTrigger Oscillo		None	0	Delay	0
2	UserVar <0>	Start Overcurrent Element	1I>,2I>,3I>	OR	1	Monostable	0

“User description” (User descr.)

Select “**User descr**” related to “UserVar<0>” and press right button on mouse, select “Value change”:



Insert “**Start Overcurrent Element**” into box and press “OK”:



A screenshot of the 'Value change' dialog box. The 'Actual value' section contains 'UserVar <0>' and a text input field with 'UserVar <0>'. The 'Description' section contains 'Name : UserVar <0>', 'Min : -', 'Max : -', and 'Step : -'. There are 'OK' and 'Cancel' buttons at the bottom.A screenshot of the 'Value change' dialog box. The 'Actual value' section contains 'Start Overcurrent Element' and a text input field with 'Start Overcurrent Element'. The 'Description' section contains 'Name : UserVar <0>', 'Min : -', 'Max : -', and 'Step : -'. There are 'OK' and 'Cancel' buttons at the bottom.

“Linked Functions”

Select **“Linked Functions”** related to **“UserVar<0> (“Start Overcurrent Element”)** and press right button on mouse, select **“Value change”**:



Select **“11>, 21>, 31>”** from **“Available”** box via push-button **“<Add”**, and press **“OK”**.
For remove functions, use push-button **“>Remove”**.

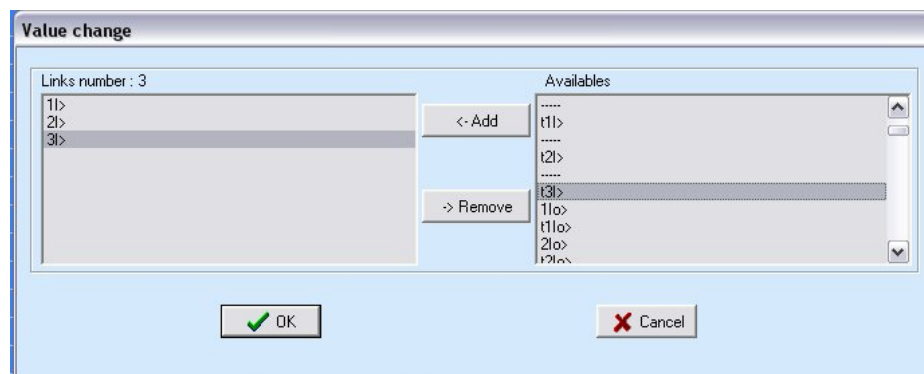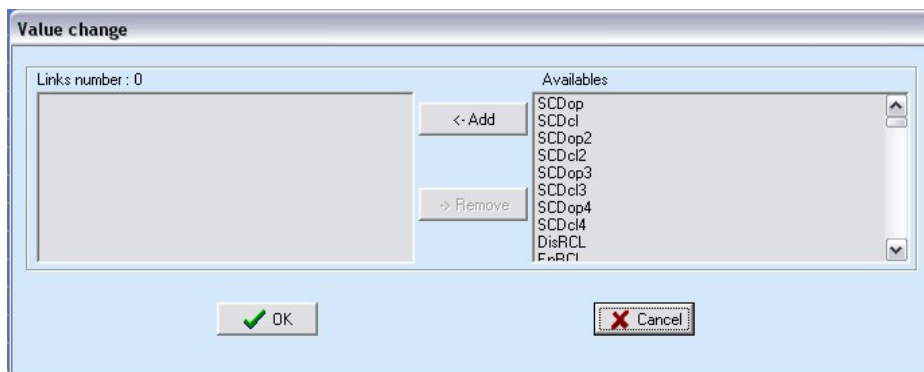


“Operation Logic” (Oplogic)

Select **“Oper Logic”** related to “UserVar<0> (**“Start Overcurrent Element”**)” and press right button on mouse, select “Value change”:



Insert **“OR”** into box and press “OK”:

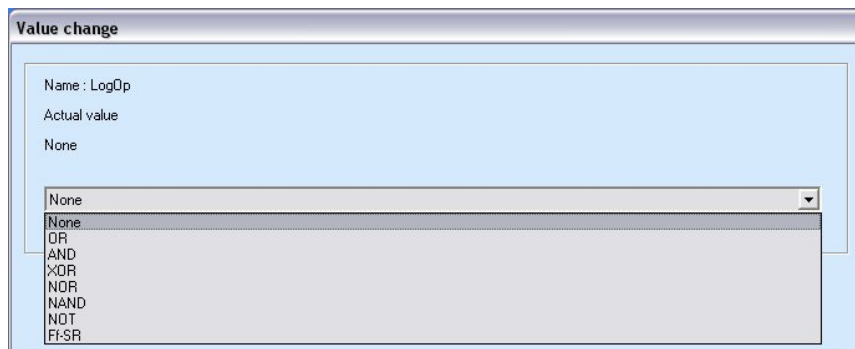**“Timer”**

Select **“Timer”** related to “UserVar<0> (**“Start Overcurrent Element”**)” and press right button on mouse, select “Value change”:



Select **“1”** into box and press “OK”:

Value change


Actual value
0

Description
Name : UV_Timer0Timer
Min : 0
Max : 10
Step : 0,01

OK Cancel

“Timer type”

Select **“Timer”** related to **“UserVar<0> (“Start Overcurrent Element”)** and press right button on mouse, select **“Value change”**:

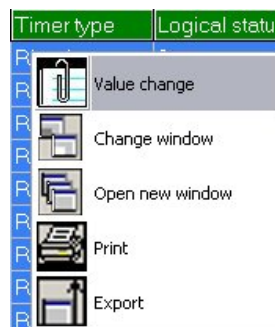

Select **“Monostable”** into box and press **“OK”**:

Value change

Name : UV_TimerType0Timer type

Actual value

Delay

Delay

Delay
Monostable

OK Cancel

INPUT – OUTPUT (VIA MSCOM2 SOFTWARE)

The firmware can manage up to 32 digital inputs and 20 output relays; among these, 4 digital inputs and 6 output relays are available on the relay module, the remaining are available on additional expansion modules controlled via the CAN-Bus communication channel.

Can be controlled 1 or 2 additional modules.

14DI	Module	=	14 Digital Inputs
14DO	Module	=	14 Outputs Relay
UX10-4	Module	=	10 Digital Inputs and 4 Outputs Relay

Digital Inputs

→	0.D1	Programmable (D1)	<i>Available in the Main Relay</i>	Any digital input of the expansion modules is active when the relevant terminals (see wiring diagram) are shorted.
→	0.D2	Programmable (D2)		
→	0.D3	Programmable (D3)		
→	0.D4	Programmable (D4)		
→	1.D1	Inputs "D8", "D16" not available	<i>Digital input on Expansion Board</i>	
→	1.D--			
→	1.D15			
→	2.D1	Inputs "D8", "D16" not available	<i>Digital input on Expansion Board</i>	
→	2.D--			
→	2.D15			

Four Digital Input are available on main relay:

<input type="checkbox"/>	D1 (0.D1)	(terminals 38 - 28)	:	Programmable
<input type="checkbox"/>	D2 (0.D2)	(terminals 38 - 18)	:	Programmable
<input type="checkbox"/>	D3 (0.D3)	(terminals 38 - 29)	:	Programmable
<input type="checkbox"/>	D4 (0.D4)	(terminals 38 - 19)	:	Programmable (PTC)

Three of them (0.D1, 0.D2, 0.D3) are deactivated, when the relevant terminals are open and get activated when the relevant terminals are shorted by an external cold contact.

The operation of the Input "0.D4" is dependent on the value "R" of resistance of the external circuit connected to its terminals (38-19):

- Activated if "R < 50Ω" or "R > 3000Ω". - Deactivated if "50Ω ≤ R ≤ 3000Ω".

Therefore, if the terminals "38-19" are open-circuited, the input "0.D4" is activated; for using "0.D4" as a normal Digital Input simply controlled by an external cold contact, it is necessary to permanently connect across the terminal's "38-19" (in parallel to the external contact) a load resistor of value between 50 and 3000Ω (example 1000Ω - 0.5W).

The additional inputs "1.D1...1.D15" are available when the first expansion module is present.

The additional inputs "2.D1...2.D15" are available when the second expansion module is present.

Any digital input of the expansion modules is active when the relevant terminals (see wiring diagram) are shorted.

"DI" Configuration (via MSCom2 software)

Any of the Digital Inputs can be programmed to control one or more of the following functions.

Bi1I >	Blocking input	First overcurrent element
Bi2I >	Blocking input	Second overcurrent element
Bi3I >	Blocking input	Third overcurrent element
Bi1Io >	Blocking input	First earth fault element
Bi2Io >	Blocking input	Second earth fault element
Bi3Io >	Blocking input	Third earth fault element
Bi1Is >	Blocking input	First negative sequence current element
Bi2Is >	Blocking input	Second negative sequence current element
Bi1U >	Blocking input	First overvoltage element
Bi2U >	Blocking input	Second overvoltage element
Bi1U <	Blocking input	First undervoltage element
Bi2U <	Blocking input	Second undervoltage element
Bi1Uo >	Blocking input	First zero sequence voltage element
Bi2Uo >	Blocking input	Second zero sequence voltage element
BiU1 <	Blocking input	Positive sequence undervoltage element
BiU2 >	Blocking input	Negative sequence overvoltage element
Group 1-2	Selection of the setting Group 1 or 2.	
Circuit Breaker	Status Circuit Breaker	
ExtR	External Reset input	
Blocking of reclosing functions	Blocking of reclosing functions	
Dig.Input for reduction of trip time	Digital Input for reduction of trip time	
Local state	Locate state	
Remote state	Remote state	
C/B open command	Open C/B Command	
C/B close command	Close C/B Command	
Remote (external) trip	Remote Trip	

Example:

ID	Name	Status	OpLogic	Functions
----	------	--------	---------	-----------

Name

Logical Input name

Status

Logical Input status

OpLogic

Not Used

Functions

Selection function


Example: Setting "Digital Input"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "DI configuration"

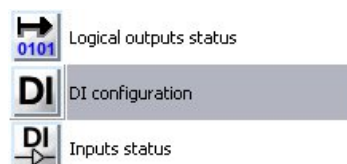


Setting for "Bi11>" : "11>".

ID	Name	Status	OpLogic	Functions
1	Bi11>	Not active	None	11>



"Functions"

Select "**Functions**" related to "**BiR11>**" and press right button on mouse, select "Value change":

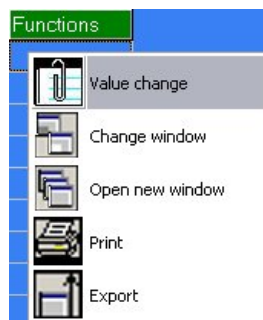

From box "Available", select "**11>**" and press "Add".

Press "OK" for confirmation. (if Password is request, see § Password)

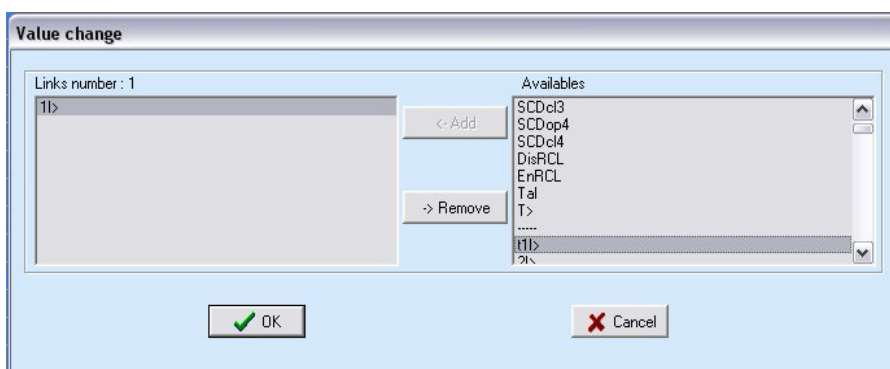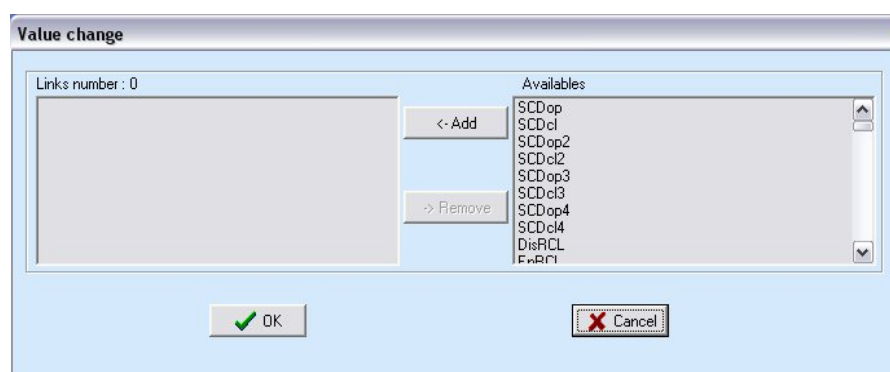

Outputs Relay

The output relay are fully user programmable and controlled by any protection functions and by any digital inputs.

→	0.R1	Programmable (R1)	<i>Available in the main relay</i>
→	0.R2	Programmable (R2)	
→	0.R3	Programmable (R3)	
→	0.R4	Programmable (R4)	
→	0.R5	Programmable (R5)	
→	0.R6	Programmable (R6)	
→	1.R1	Programmable	<i>Output Relays on Expansion Board</i>
→	1.R--		
→	1.R14		
→	2.R1	Programmable	<i>Output Relays on Expansion Board</i>
→	2.R--		
→	2.R14		

"DO" Configuration

Any Output Relay can be programmed to be controlled (energized) by one or more of the following functions or Digital Inputs:

	SCDop	<i>Scada open breaker command</i>			
	SCDcl	<i>Scada close breaker command</i>			
	SCDop2	<i>Scada open breaker 2 command (generic command)</i>			
	SCDcl2	<i>Scada close breaker 2 command (generic command)</i>			
	SCDop3	<i>Scada open breaker 3 command (generic command)</i>			
	SCDcl3	<i>Scada close breaker 3 command (generic command)</i>			
	SCDop4	<i>Scada open breaker 4 command (generic command)</i>			
	SCDcl4	<i>Scada close breaker 5 command (generic command)</i>			
	DisRCL	<i>Scada disable reclose command</i>			
	EnRCL	<i>Scada enable reclose command</i>			
T>	Tal	<i>Alarm</i>	<i>Thermal Image T></i>		
	T>	<i>Trip</i>			
1I>	1I>	<i>Start</i>	<i>First overcurrent element F50-51</i>		
	t1I>	<i>Trip</i>			
2I>	2I>	<i>Start</i>	<i>Second overcurrent element F50-51</i>		
	t2I>	<i>Trip</i>			
3I>	3I>	<i>Start</i>	<i>Third overcurrent element F50-51</i>		
	t3I>	<i>Trip</i>			
1Io>	1Io>	<i>Start</i>	<i>First earth fault element F50N-51N</i>		
	t1Io>	<i>Trip</i>			
2Io>	2Io>	<i>Start</i>	<i>Second earth fault element F50N-51N</i>		
	t2Io>	<i>Trip</i>			
3Io>	3Io>	<i>Start</i>	<i>Third earth fault element F50N-51N</i>		
	t3Io>	<i>Trip</i>			
1Is>	1Is>	<i>Start</i>	<i>First negative sequence current element F46</i>		
	t1Is>	<i>Trip</i>			
2Is>	2Is>	<i>Start</i>	<i>Second negative sequence current element F46</i>		
	t2Is>	<i>Trip</i>			
1U>	1U>	<i>Start</i>	<i>First overvoltage element F59</i>		
	t1U>	<i>Trip</i>			
2U>	2U>	<i>Star</i>	<i>Second overvoltage element F59</i>		
	t2U>	<i>Trip</i>			
1U<	1U<	<i>Start</i>	<i>First undervoltage element F27</i>		
	t1U<	<i>Trip</i>			
2U<	2U<	<i>Start</i>	<i>Second undervoltage element F27</i>		
	t2U<	<i>Trip</i>			
1f>	1f>	<i>Start</i>	<i>First overfrequency element F81</i>		
	t1f>	<i>Trip</i>			

2f>	2f>	<i>Start</i>	<i>Second overfrequency element F81</i>		
	t2f>	<i>Trip</i>			
1f<	1f<	<i>Start</i>	<i>First underfrequency element F81</i>		
	t1f<	<i>Trip</i>			
2f<	2f<	<i>Start</i>	<i>Second underfrequency element F81</i>		
	t2f<	<i>Trip</i>			
1Uo>	1Uo>	<i>Start</i>	<i>First zero sequence voltage element F59Uo</i>		
	t1Uo>	<i>Trip</i>			
2Uo>	2Uo>	<i>Start</i>	<i>Second zero sequence voltage element F59Uo</i>		
	t2Uo>	<i>Trip</i>			
U1<	U1<	<i>Start</i>	<i>Positive sequence undervoltage element F27U1</i>		
	tU1<	<i>Trip</i>			
U2>	U2>	<i>Start</i>	<i>Negative sequence overvoltage element F59U2</i>		

	tU2>	Trip		
Wi	tWi>	Circuit breaker maintenance level		
TCS	TCS	Start	trip coil supervision	
	tTCS	Trip		
IRF	IRF	Start	Internal Relay Failure	
	tIRF	Trip		
RT	RT	Start	Element Remote Trip	
	tRT	Trip		
	TripTimeR	Trip time reduction active		
	RCLf	Autoreclosure failed		
	RCLrun	Autoreclosure in progress		
	TwrCL	Trip not enabled for Automatic Reclosure		
	RCL-OK	Successful Automatic Reclosure		
	ManCL-OK	Manual Closure		
	BiRCL	Presence Reclosure external lockout cause (input/CB Failure)		
	Gr1to2	Switch to SetUp Group2		
	manOpCmd	Manual Open Command		
	CL-Cmd	Close Command		
	C/Bfail	Circuit Breaker failure		
	L/Rdisc	Local/Remote signal Discrepancy		
	BF	Breaker Failure		
	Gen.Start	Start Generic		
	Gen.Trip	Trip Generic		
	UserTriggerOscillo	User Variable for Oscillographic Recording		
	UserVar<0>	User Variable		
	to			
	UserVar<24>			
	Vcc	Reserved		
	Gnd	Reserved		
	ResLog	Reset signal logic		
	P1	Push-button Open		
	P2	Push-button Close		
	0.D1	Digital Input "0.D1"	activated	Digital Input on Main Relay
	0.D1Not	Digital Input "0.D1"	deactivated	
	to			
	0.D4	Digital Input "0.D4"	activated	
	0.D4Not	Digital Input "0.D4"	deactivated	
	1.D1	Digital Input "1.D1"	activated	Digital input on Expansion Board
	1.D1Not	Digital Input "1.D1"	deactivated	
	to			
	1.D15	Digital Input "1.D15"	activated	
	1.D15Not	Digital Input "1.D15"	deactivated	
	2.D1	Digital Input "2.D1"	activated	Digital input on Expansion Board
	2.D1Not	Digital Input "2.D1"	deactivated	
	to			
	2.D15	Digital Input "2.D15"	activated	
	2.D15Not	Digital Input "2.D15"	deactivated	

Example configuration

ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]		None	Off	Normally open	Pulse	0,01	Off
2	0.R2 [Master board, R:2]		None	Off	Normally open	Pulse	0,01	Off

Relay

Relay internal name

Linked function

Select the function for tripping the output relay (for multiple association use "User Variable")

Operation Logic

Not Used

Logical Status

Relay Logical status

Output Configuration*Normally Deenergized*

The output relay is deenergized in normal conditions and gets energized on activation of the controlling Functional Output; reset means deenergizing.

Normally Energized

The output relay is energized in normal conditions and gets deenergized on activation of the controlling Functional Output; reset means energizing.

tON (Operation Time)

This timer controls the duration of the activation of the output relay.




tON	:	0	(0.01-10)s, step 0.01s
-----	---	---	------------------------

Relay Status

Relay – Physical status

Functions - Operation Mode

Automatic	:	In this mode the output relay is "operated" (energized if "N.D.", deenergized if "N.E.") when the controlling Functional Output is activated and it is reset to the "non operated" condition when the Functional Output gets deactivated but, anyhow, not before the time "tON" has elapsed (minimum duration of the operation time)
Manual	:	In this mode the output relay is "operated" when the controlling Functional Output is activated and remains in the operated condition until a manual reset command is issued by the relay keyboard (local commands menu) or via the serial communication. In this mode the timer "tON" has no effect.
Impulsive	:	In this mode the output relay is "operated" when the controlling Functional Output is activated and it remains in the "operated" condition (energized if "N.D.", deenergized if "N.E.") for the set time "tON" independently from the status of the controlling Functional Output.

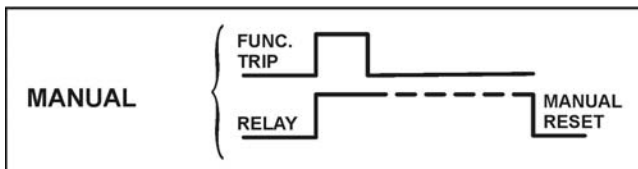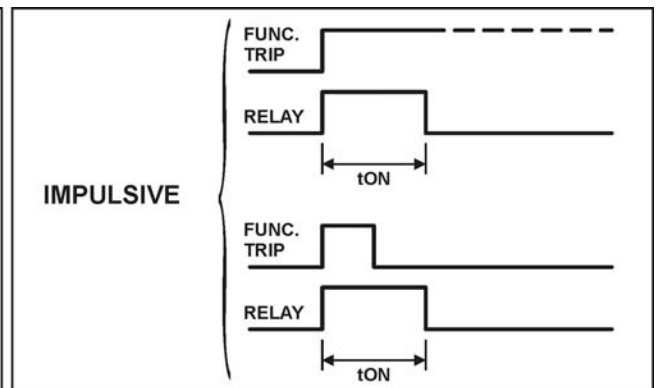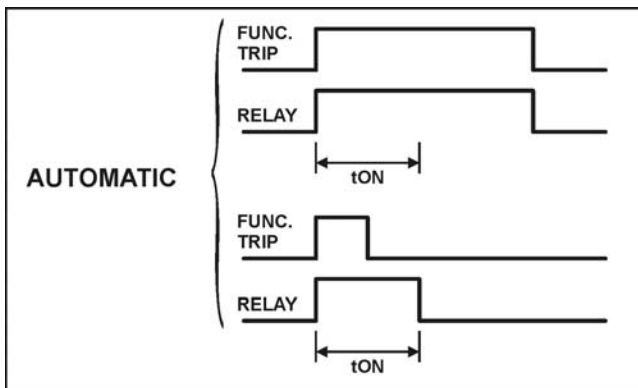


Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "DO Configuration"

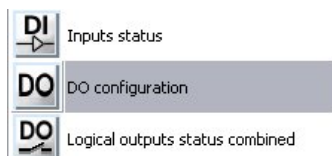

Example: Change settings for "0.R1"

Change settings for "0.R1" : "1I>", "Normally Close", "Automatic reset", "0.5".



ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]	1I>	None	Off	Normally close	Automatic reset	0.5	Off
2	0.R2 [Master board, R:2]		None	Off	Normally open	Pulse	0.01	Off

"Linked Functions"

Select "**Linked Functions**" related to 0.R1 and press right button on mouse, select "Value change":



From box "Available", select "1I>" and press "Add".
 Press "OK" for confirmation. (if Password is request, see § Password)

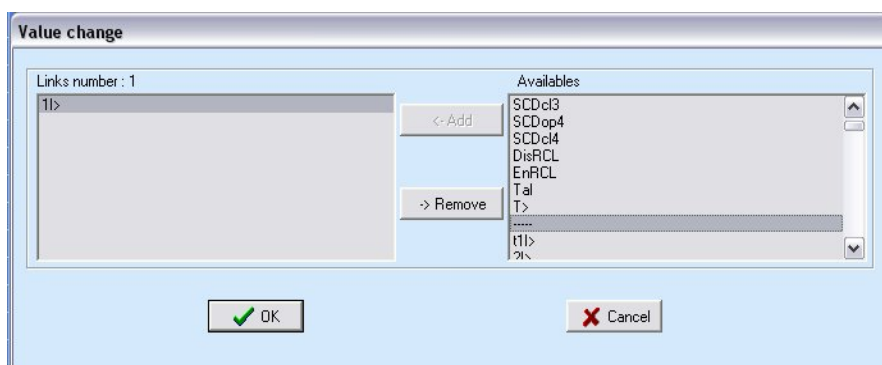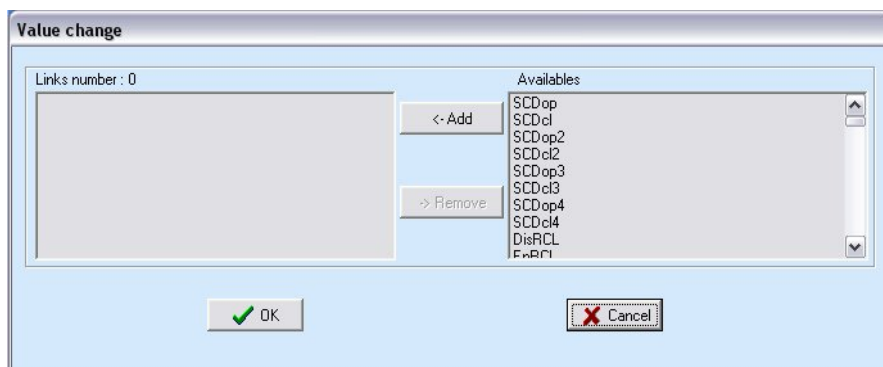


“Output Config”

Select **“Output Config”** related to “0.R1” and press right button on mouse, select “Value change”:



Select **“Normally Close”** from combo box and press “OK”
(if Password is request, see § Password)

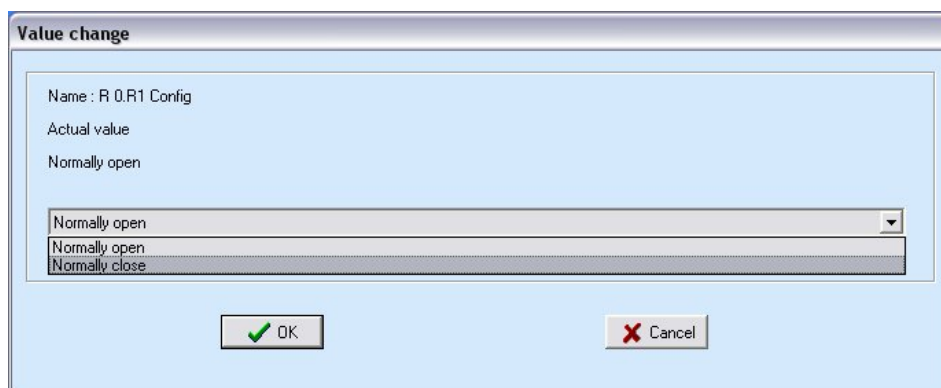


“Function”

Select “**Function**” related to “0.R1” and press right button on mouse, select “Value change”:



Select “**Manual reset**” from combo box and press “OK”
(if Password is request, see § Password):

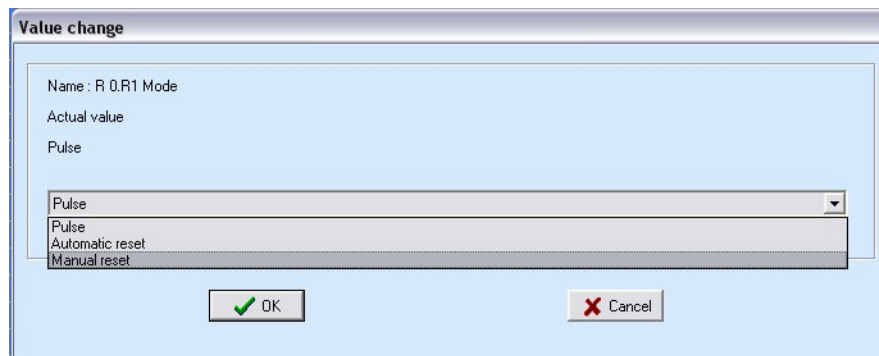


"tON"

Select "**tON**" related to "0.R1" and press right button on mouse, select "Value change":



Set "**0.5**" and press "OK" (if Password is request, see § Password):

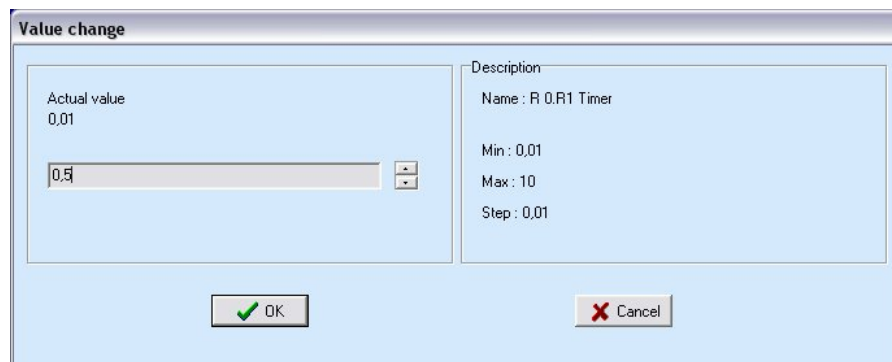




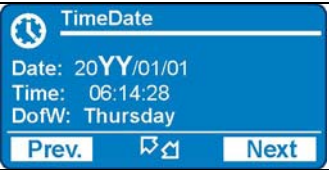
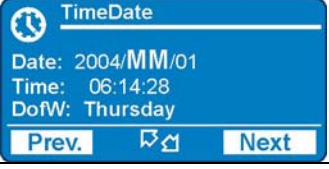

DATE & TIME


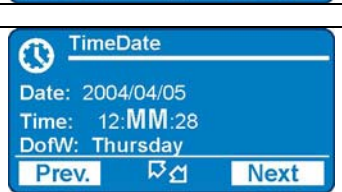
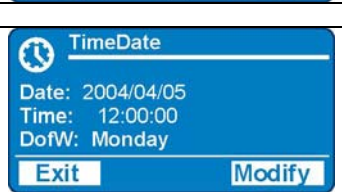

In this menu it is possible to configurate the Date and Time

Date:	20YY	/	MM	/	DD	(2000/01/01 ÷ 2099/12/31) YY = Year / MM = Month / DD = Day
--------------	------	---	----	---	----	--

Time:	HH	:	MM	:	00	HH = hour / MM = Minutes / 00
--------------	----	---	----	---	----	-------------------------------

DofW:	Day	Es: Wednesday
--------------	-----	---------------

1		<ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons.
2		<ul style="list-style-type: none"> Select icon "TimeDate" by pushbuttons "Increase" or "Decrease". Press "Select".
3		<ul style="list-style-type: none"> Press "Modify".
4		<ul style="list-style-type: none"> The last two figures of the Year will appear in bold character; by pushbuttons "Increase" or "Decrease" set the new figures. Press "Next" to go to the next setting.
5		<ul style="list-style-type: none"> As above for changing the "Month" Press "Next" to go to the next setting.
6		<ul style="list-style-type: none"> As above for changing the "Day" Press "Next" to go to the next setting.

7		<ul style="list-style-type: none">• As above for changing the "Hours"• Press "Next" to go to the next setting.
8		<ul style="list-style-type: none">• As above for changing the "Minutes"• Press "Next" to go to the next setting.
9		<ul style="list-style-type: none">• The Day of the Week is calculated and displayed automatically.• Press "Exit" to go back to the main menu.• Press "Modify" to go back to the step "3"
 Press the button " Next " to go back to the previous display.		


Clock synchronization

The internal clock has 1ms resolution and a stability of ± 35 ppm in the operational temperature range.

It can be synchronized with an external time reference in the following ways:

- Using the standard "Time Synchronization" procedure of the "IEC870-5-103" protocol.
- Using the "MCom 2" software or from the DCS with the Modbus RTU protocol.

Note: On power supply failure an internal battery supports the internal clock for over two years.

 Téléphone : 01 48 15 09 09 www.microener.com	OPERATING MANUAL FEEDER MANAGER with AUTORECLOSING RELAY UFM-R-PL		MO N°: 12JMC0591626
			Rev. A Page 111 / 122

HEALTHY (DIAGNOSTIC INFORMATION)

The relay operates a continuous checking of the vital functionalities and in case an internal failure is detected, the I.R.F. function (see § I.R.F.) is activated and the Power/IRF led is set to flashing.

<i>Device</i>	→	No Fail	→	No Fail	
		Fail	→	Fail present	
		MinorFail	→	Minor Fail	
		HisoricalFail	→	Cleared Fail	
		FW not comp.	→	Firmware not compatible	

If an internal self-clearing (transient) fault is detected, it is recorded into an historical file without any other action.

INFO (RELAY VERSION)

In this menu it is possible to read the information relevant to relay unit.

<i>SW Version</i>	AcqUnit-I/O	→	####.##.##.#	Firmware version of acquisition unit	
	ProtectUnit	→	####.##.##.#	Firmware version of CPU unit	
<i>Protect.Model</i>		→	FeederManager	Protection Type	
<i>Serial Number</i>		→	###/##/##/## ##	Relay Serial Number	
<i>User Tag</i>		→	FMR-R-PL	Relay identification label.	This information can only be modified by the interface program "MCom 2" and allows the user to give to the relay any suitable denomination.
<i>Build</i>		→	##### #	Build identification label.	
<i>Line</i>		→	##### #	Line identification label.	


BATTERY

The relay is equipped with a lithium battery type "CR2477N 3V", to support the internal clock and the oscillographic recording memory in case of programmed lack of power.


The expected minimum duration without power exceed 2 years.

Attention!! Use only battery specified.

Instruction for replacement the battery:

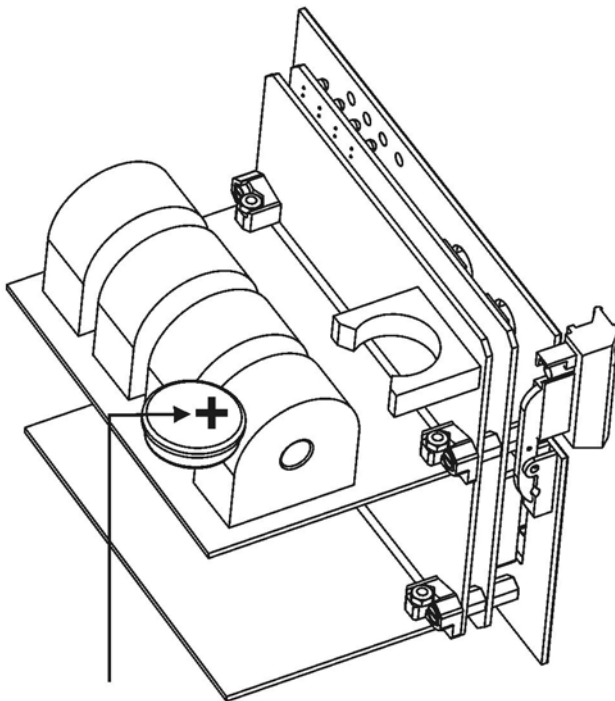

BATTERY

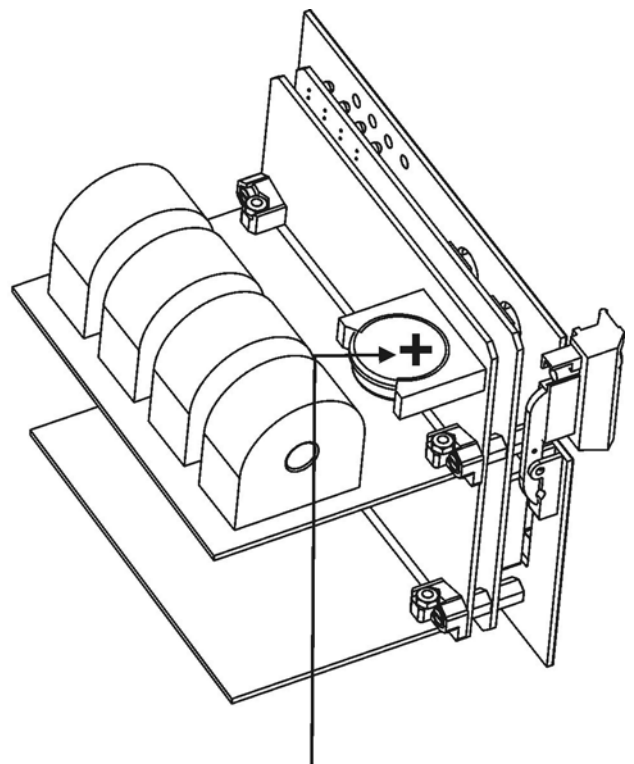

BATTERY

MAINTENANCE


No maintenance is required. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorized Dealer mentioning the relay's Serial No reported in the label on relays enclosure.

POWER FREQUENCY INSULATION TEST


Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics.

When doing the insulation test, the terminals relevant to serial output, digital inputs and RTD input must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay should be isolated. This is extremely important as discharges eventually tacking place in other parts or components of the board can severely damage the relays or cause damages not immediately evident to the electronic components.


BASIC RELAY - WIRING DIAGRAM

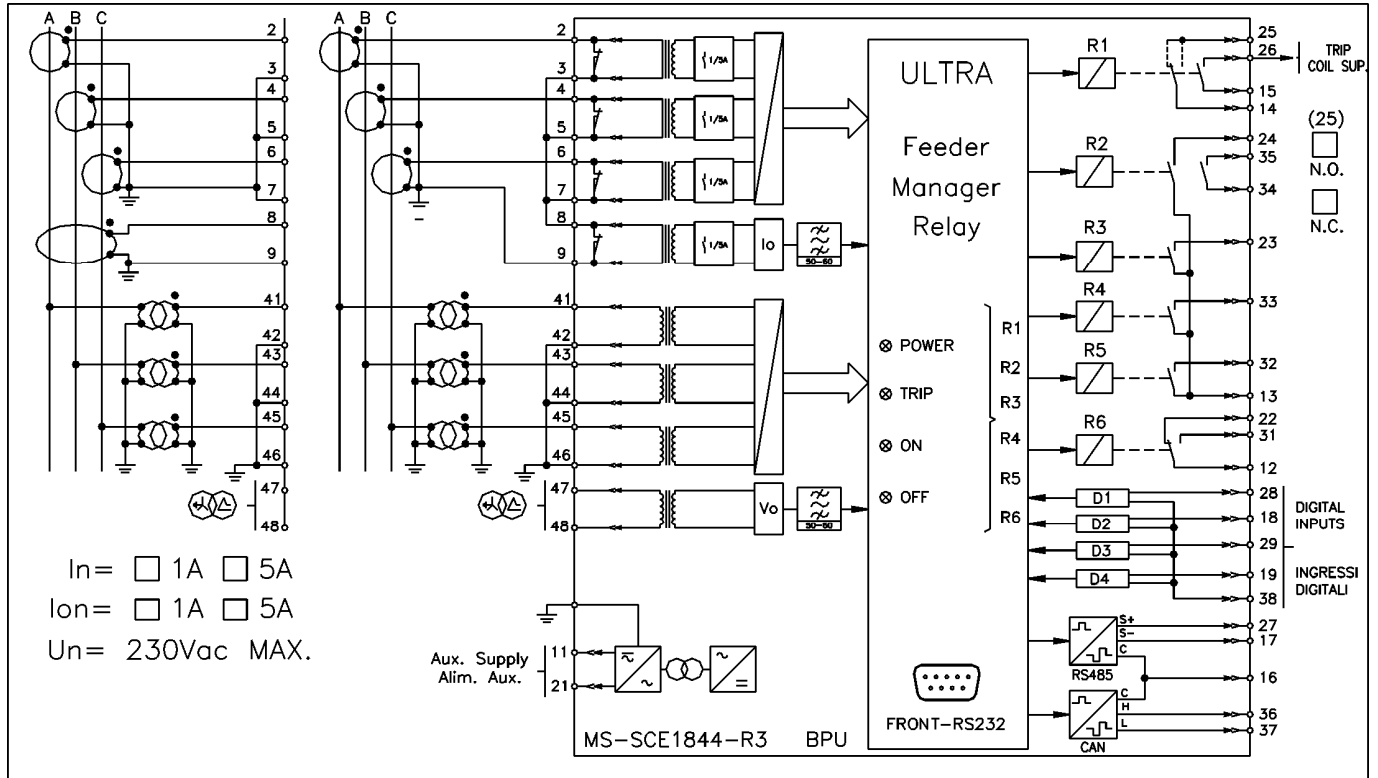


UX10-4 - Expansion Module - Wiring Diagram (10 Digital Inputs + 4 Output Relays)

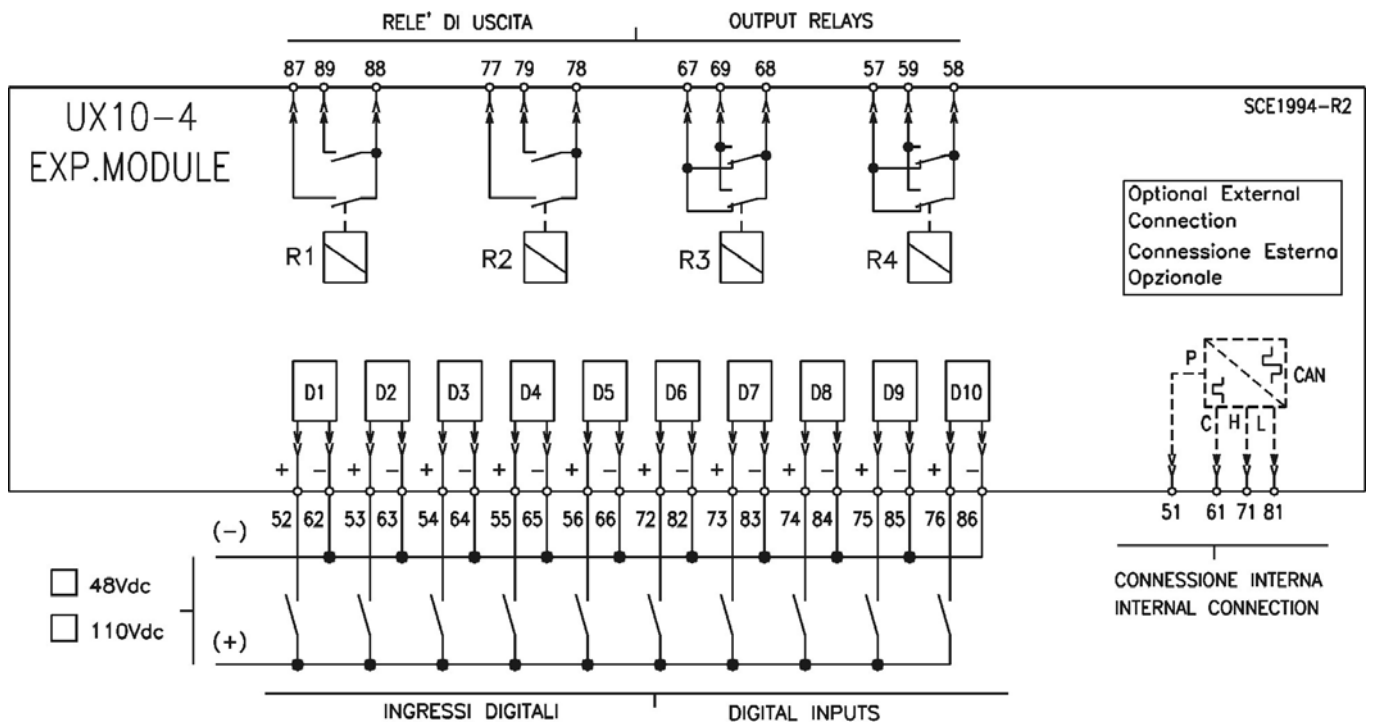


14DI - Expansion Module - Wiring Diagram (14 Digital Inputs)

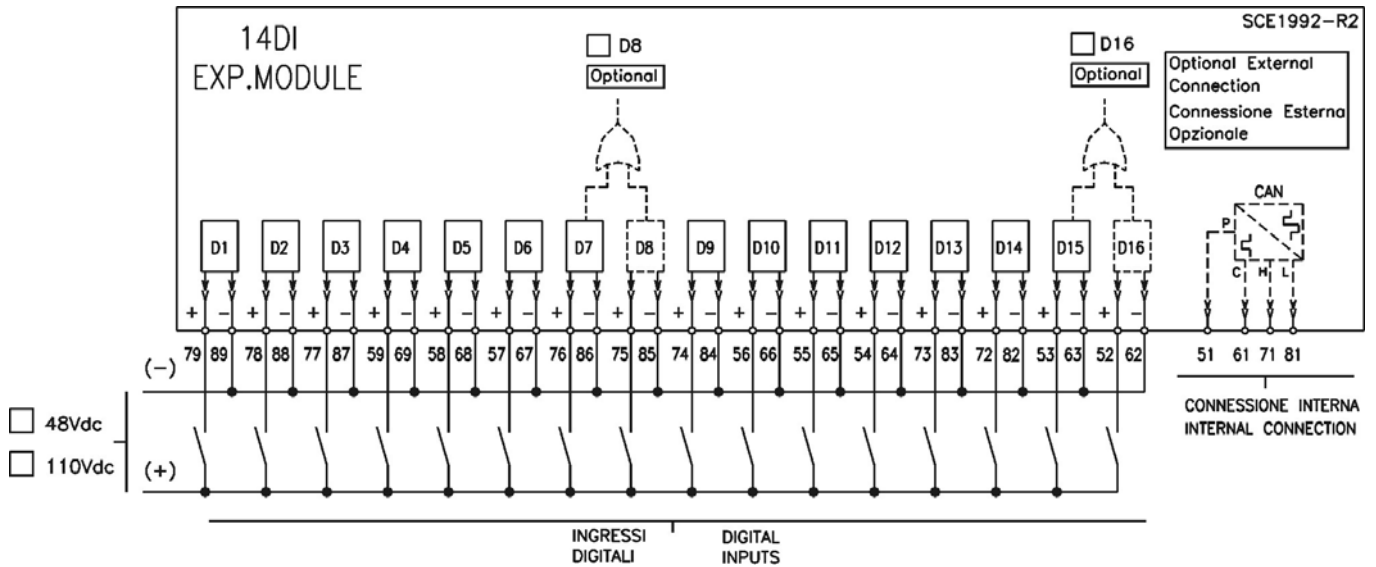

14DO - Expansion Module - Wiring Diagram (14 Output Relays)

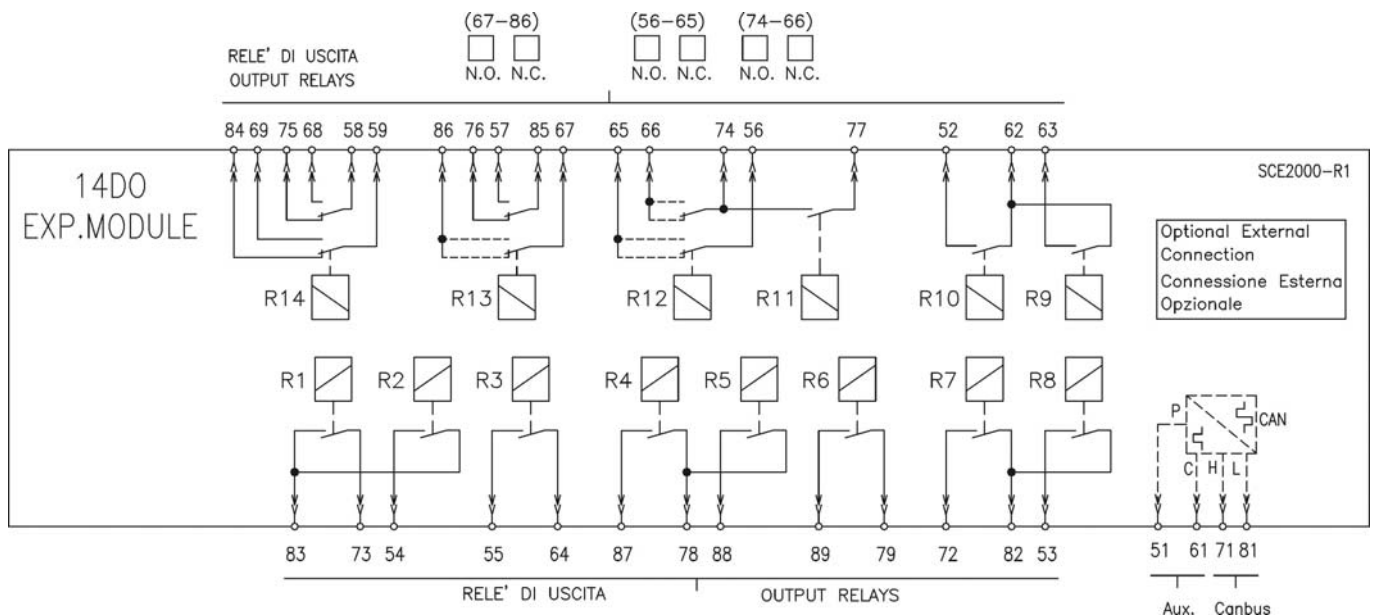


14DO-S - Expansion Module - Wiring Diagram (14 Output Relays)

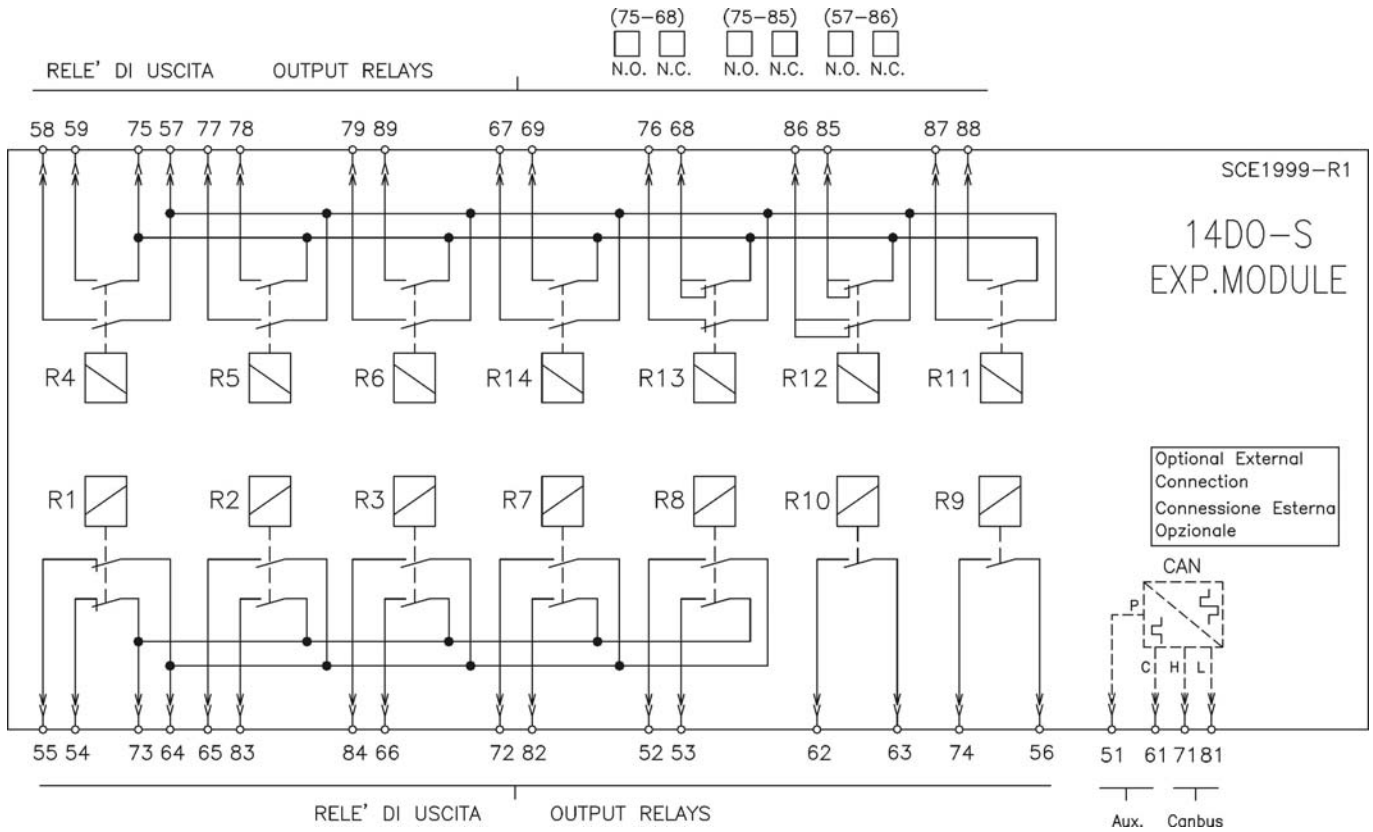

WIRING THE SERIAL COMMUNICATION BUS



CONNECTION TO RS485

FIBER OPTIC CONNECTION

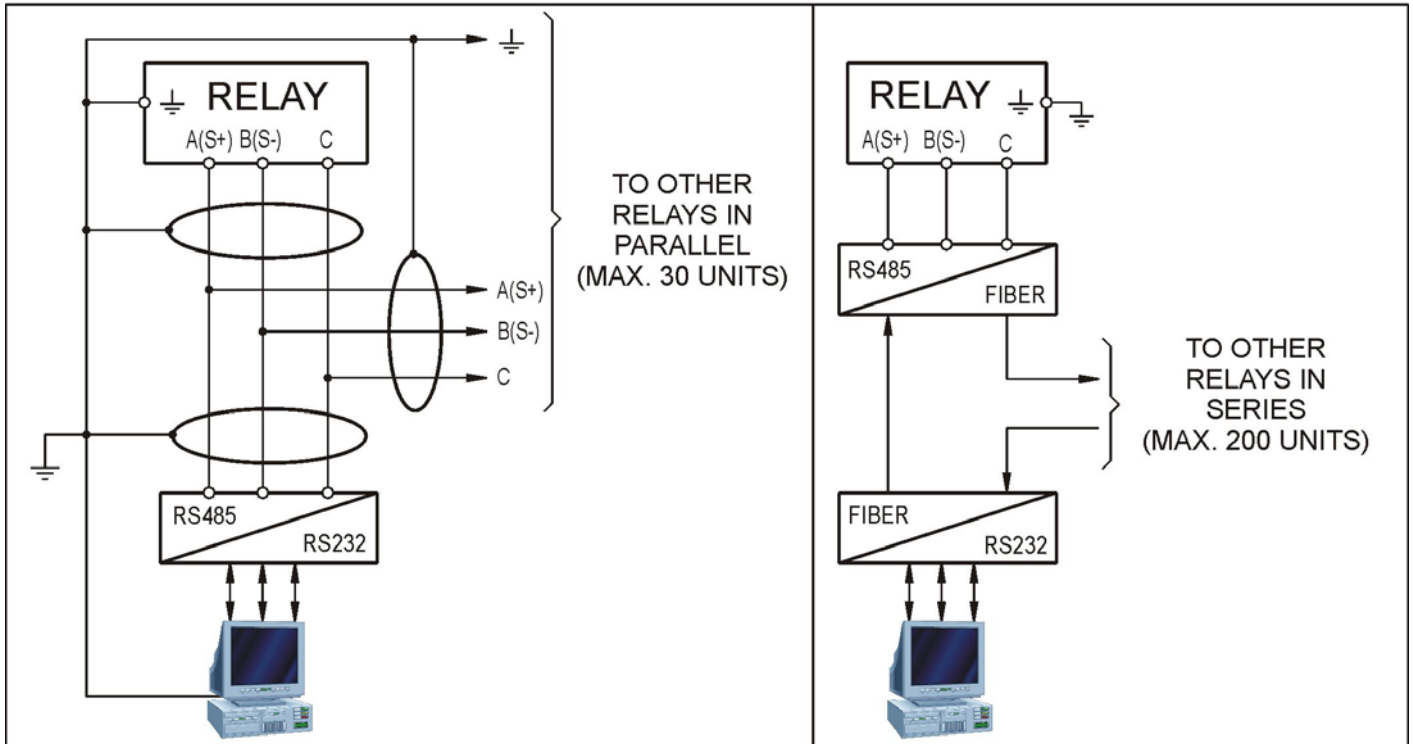

Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C.
 A dedicated communication software (MCom2) for Windows 9x/2000/XP (or later) is available.
 Please refer to the MCom2 instruction manual for more information.
 Maximum length of the serial bus can be up to 200m. For longer distance and for connection of up to 250 Relays, optical interconnection is recommended (please ask Microelettrica for accessories).


BASIC RELAY - OVERALL DIMENSIONS

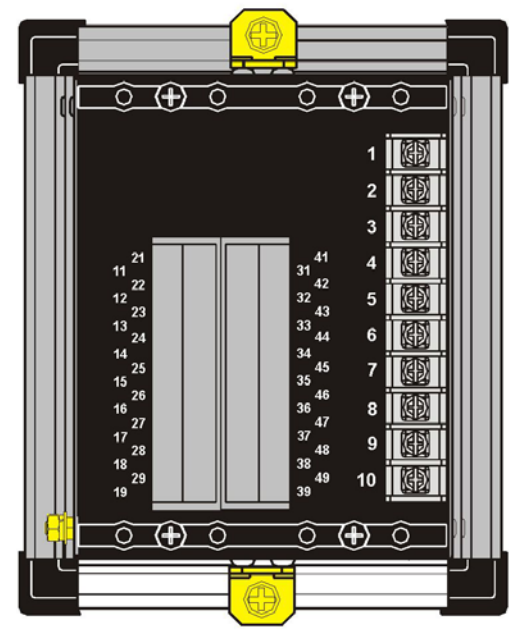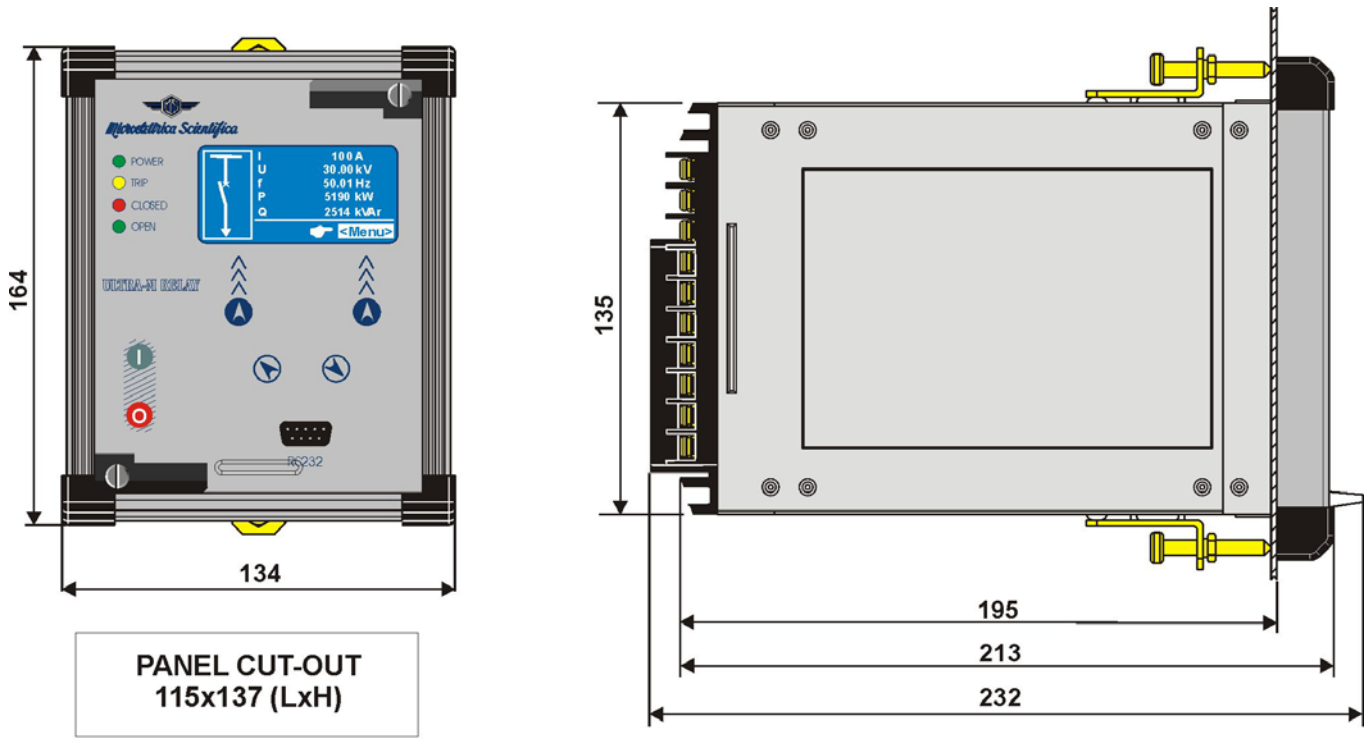


TERMINAL CONNECTION

Flush mounting protection degree: IP44 (54 on request).



(1 Expansion Module) & (2 Expansion Module) - Overall Dimensions

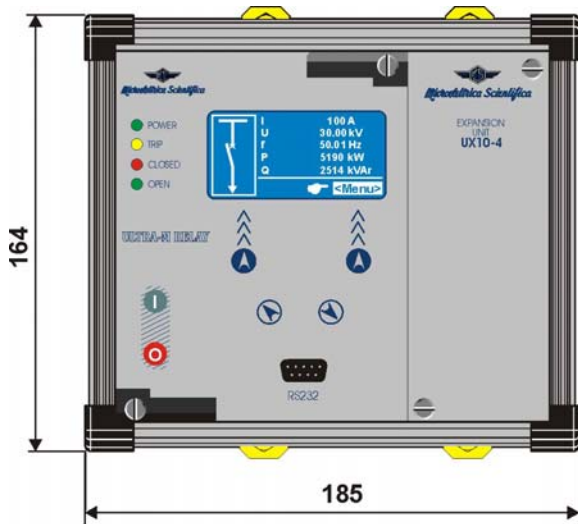


**PANEL
 CUT-OUT
 165x137 (LxH)**

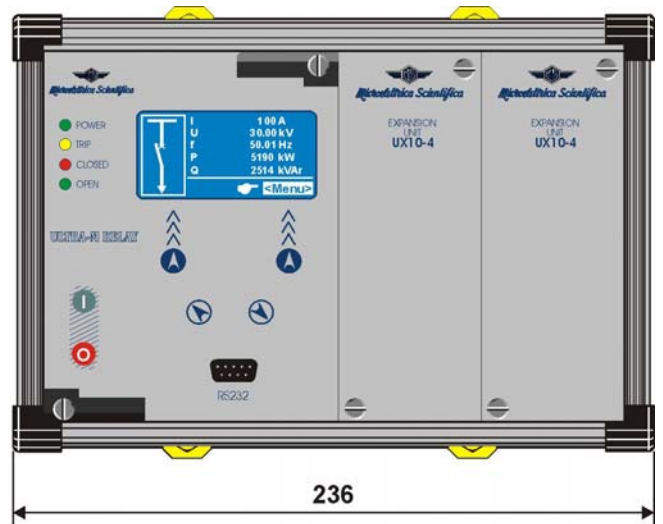

**PANEL
 CUT-OUT
 217x137 (LxH)**

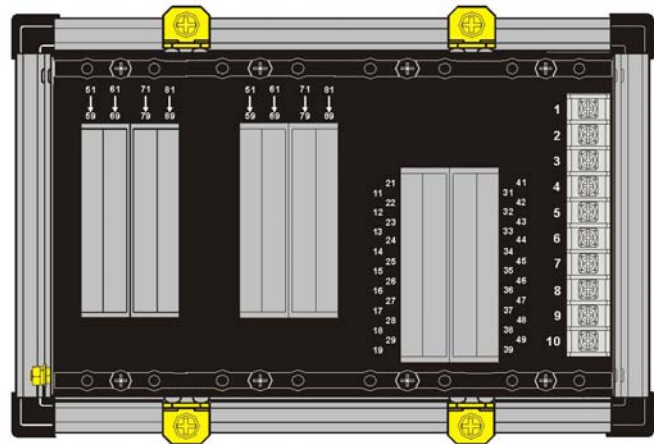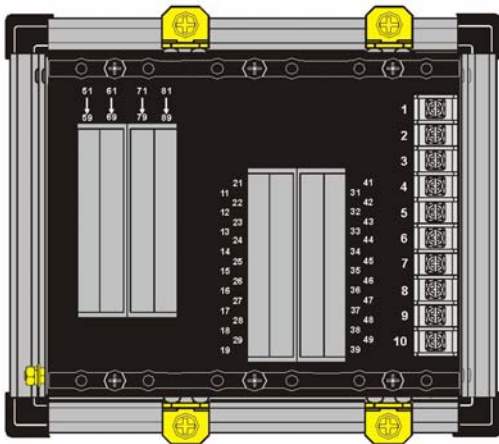

Rack 3U – Overall Dimensions

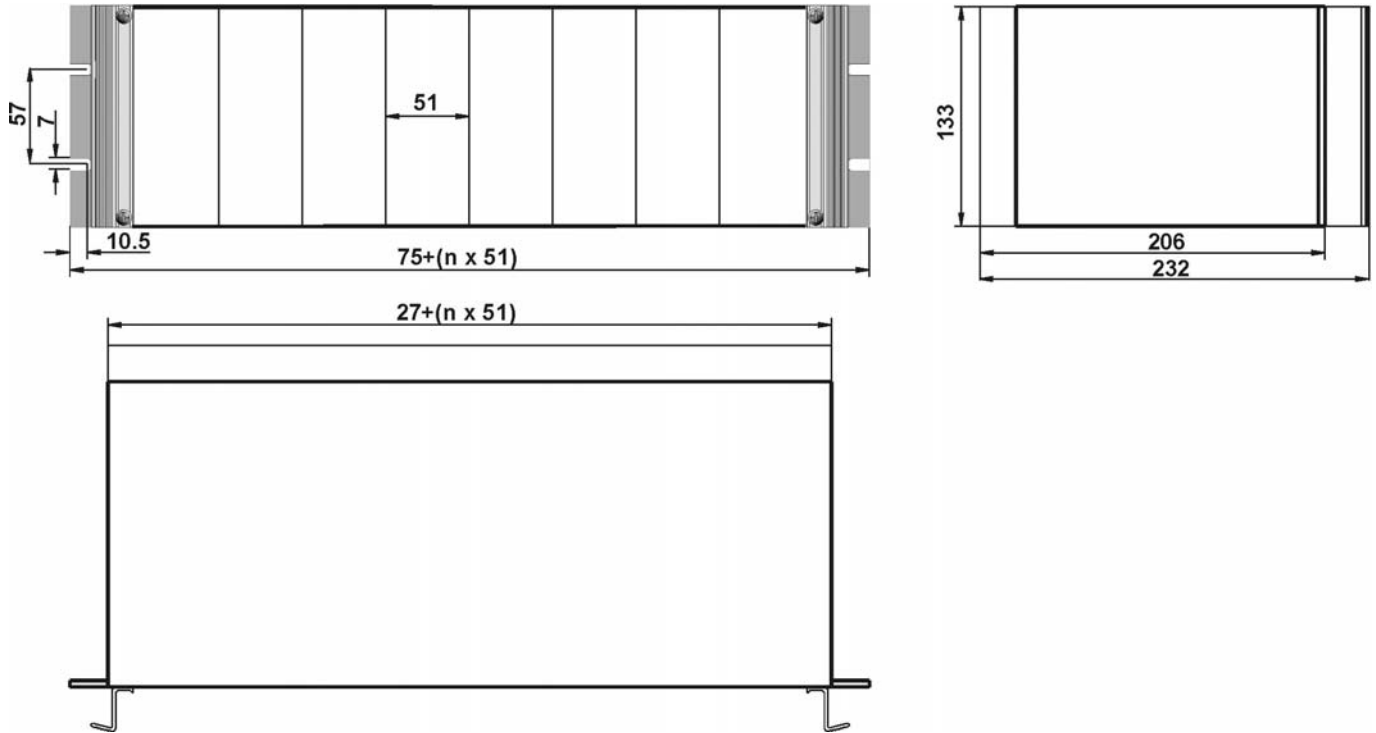


DIRECTION FOR PCB'S DRAW-OUT AND PLUG-IN**Draw-out**

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.
Draw-out the PCB by pulling on the handles ③

Plug-in

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.
Slide-in the card on the rails provided inside the enclosure.
Plug-in the card completely and press the handle to the closed position.
Rotate anticlockwise the screws ① and ② with the mark in the vertical position (locked).

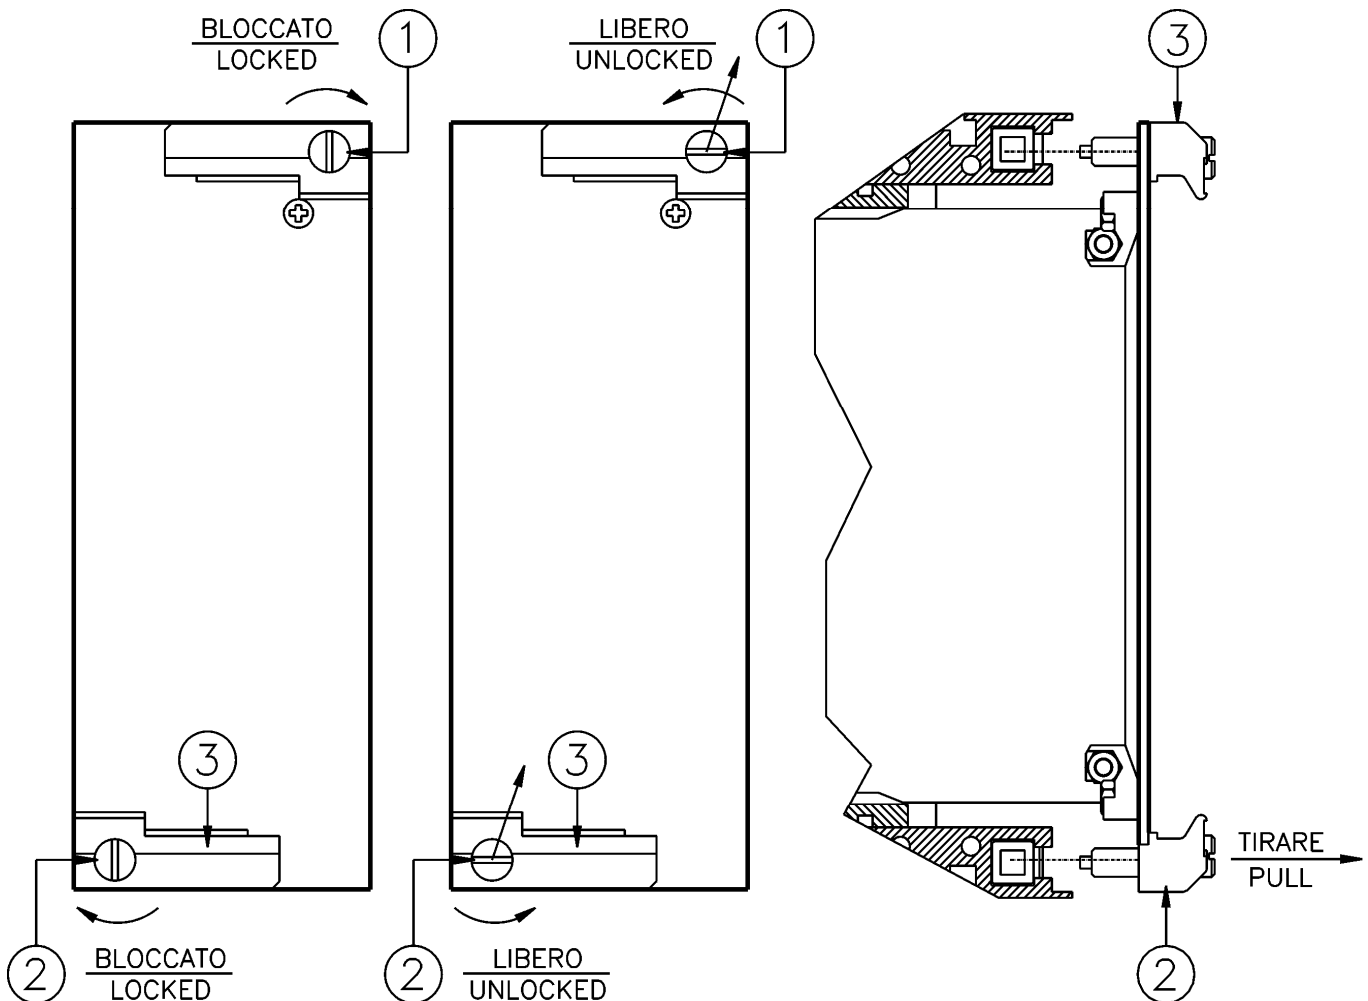

ELECTRICAL CHARACTERISTICS**APPROVAL: CE****REFERENCE STANDARDS IEC 60255 - CE Directive - EN/IEC61000 - IEEE C37**

<input type="checkbox"/> Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
<input type="checkbox"/> Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
<input type="checkbox"/> Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 60068)

<input type="checkbox"/> Operation ambient temperature	-10°C / +55°C
<input type="checkbox"/> Storage temperature	-25°C / +70°C
<input type="checkbox"/> Environmental testing	(Cold) IEC60068-2-1 (Dry heat) IEC60068-2-2 (Change of temperature) IEC60068-2-14 (Damp heat, steady state) IEC60068-2-78
	RH 93% Without Condensing AT 40°C

CE EMC Compatibility (EN61000-6-2 - EN61000-6-4 - EN50263)

<input type="checkbox"/> Electromagnetic emission	EN55011	industrial environment
<input type="checkbox"/> Radiated electromagnetic field immunity test	IEC61000-4-3 ENV50204	level 3 80-2000MHz 10V/m 900MHz/200Hz 10V/m
<input type="checkbox"/> Conducted disturbances immunity test	IEC61000-4-6	level 3 0.15-80MHz 10V
<input type="checkbox"/> Electrostatic discharge test	IEC61000-4-2	level 3 6kV contact / 8kV air
<input type="checkbox"/> Power frequency magnetic test	IEC61000-4-8	1000A/m 50/60Hz
<input type="checkbox"/> Pulse magnetic field	IEC61000-4-9	1000A/m, 8/20µs
<input type="checkbox"/> Damped oscillatory magnetic field	IEC61000-4-10	100A/m, 0.1-1MHz
<input type="checkbox"/> Immunity to conducted common mode disturbance 0Hz-150KHz	IEC61000-4-16	level 4
<input type="checkbox"/> Electrical fast transient/burst	IEC61000-4-4	level 3 2kV, 5kHz
<input type="checkbox"/> HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3 400pps, 2,5kV (m.c.), 1kV (d.m.)
<input type="checkbox"/> Oscillatory waves (Ring waves)	IEC61000-4-12	level 4 4kV(c.m.), 2kV(d.m.)
<input type="checkbox"/> Surge immunity test	IEC61000-4-5	level 4 2kV(c.m.), 1kV(d.m.)
<input type="checkbox"/> Voltage interruptions	IEC60255-4-11	
<input type="checkbox"/> Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2	10-500Hz 1g

CARATTERISTICHE

<input type="checkbox"/> Accuracy at reference value of influencing factors	1% In – 0.1%On for measure 2% + to (to=20÷30ms @ 2xIs) for times
<input type="checkbox"/> Rated Current	In = 1 or 5A - On = 1 or 5A
<input type="checkbox"/> Current overload	80 In for 1 sec; 4 In continuous
<input type="checkbox"/> Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A Neutral : 0.01VA at In = 1A ; 0.2VA at In = 5A Un = (100 ÷125)Vac
<input type="checkbox"/> Rated Voltage	
<input type="checkbox"/> Voltage Overload	2Un permanent
<input type="checkbox"/> Burden on voltage inputs	0,1VA at Un
<input type="checkbox"/> Average power supply consumption	< 10 VA

Output relaysrating 5 A; Vn = 380 V
A.C. resistive switching = 1100W (380V max)
make = 30 A (peak) 0,5 sec.
break = 0.3 A, 110 Vcc,
L/R = 40 ms (100.000 op.)**COMMUNICATION PARAMETER**

-
- Rear serial port
-
-
- Front serial port

RS485 – 9600 to 38400 bps – 8,n,1 – Modbus RTU – IEC60870-5-103
RS232 – 9600 to 57600 bps – 8,n,1 – Modbus RTU**SOFTWARE & FIRMWARE VERSION** **Firmware for version**IAU (Intelligent Acquisition Unit) 0.17.01.x
IPU (Processor Unit) 0440.23.02.x **Application Software**

MSCom 2 1.03.28 (or later)

The performances and the characteristics reported in this manual are not binding and can modified at any moment without notice.